

NVIDIA Bright Cluster Manager 9.2

Cloudbursting Manual

Revision: 79c0f2bc9

Date: Fri Jun 27 2025

©2024 NVIDIA Corporation & affiliates. All Rights Reserved. This manual or parts thereof may not be reproduced in any form unless permitted by contract or by written permission of NVIDIA Corporation.

Trademarks

Linux is a registered trademark of Linus Torvalds. PathScale is a registered trademark of Cray, Inc. Red Hat and all Red Hat-based trademarks are trademarks or registered trademarks of Red Hat, Inc. SUSE is a registered trademark of SUSE LLC. NVIDIA, CUDA, GPUDirect, HPC SDK, NVIDIA DGX, NVIDIA Nsight, and NVLink are registered trademarks of NVIDIA Corporation. FLEXlm is a registered trademark of Flexera Software, Inc. PBS Professional, and Green Provisioning are trademarks of Altair Engineering, Inc. All other trademarks are the property of their respective owners.

Rights and Restrictions

All statements, specifications, recommendations, and technical information contained herein are current or planned as of the date of publication of this document. They are reliable as of the time of this writing and are presented without warranty of any kind, expressed or implied. NVIDIA Corporation shall not be liable for technical or editorial errors or omissions which may occur in this document. NVIDIA Corporation shall not be liable for any damages resulting from the use of this document.

Limitation of Liability and Damages Pertaining to NVIDIA Corporation

The NVIDIA Bright Cluster Manager product principally consists of free software that is licensed by the Linux authors free of charge. NVIDIA Corporation shall have no liability nor will NVIDIA Corporation provide any warranty for the NVIDIA Bright Cluster Manager to the extent that is permitted by law. Unless confirmed in writing, the Linux authors and/or third parties provide the program as is without any warranty, either expressed or implied, including, but not limited to, marketability or suitability for a specific purpose. The user of the NVIDIA Bright Cluster Manager product shall accept the full risk for the quality or performance of the product. Should the product malfunction, the costs for repair, service, or correction will be borne by the user of the NVIDIA Bright Cluster Manager product. No copyright owner or third party who has modified or distributed the program as permitted in this license shall be held liable for damages, including general or specific damages, damages caused by side effects or consequential damages, resulting from the use of the program or the un-usability of the program (including, but not limited to, loss of data, incorrect processing of data, losses that must be borne by you or others, or the inability of the program to work together with any other program), even if a copyright owner or third party had been advised about the possibility of such damages unless such copyright owner or third party has signed a writing to the contrary.

Table of Contents

Table of Contents	i
0.1 About This Manual	v
0.2 About The Manuals In General	v
0.3 Getting Administrator-Level Support	v
0.4 Getting Professional Services	vi
1 Introduction	1
2 Cluster On Demand Cloudbursting With Azure, AWS, OCI, Or Bright OpenStack	3
2.1 Introduction	3
2.2 Requirements For COD Cloudbursting	3
2.2.1 Credentials For Azure	4
2.2.2 Credentials For AWS	5
2.2.3 Credentials For OCI	5
2.3 COD Via The Bright Customer Portal (Azure And AWS)	6
2.4 COD Via The COD Command Line Tool	10
2.4.1 COD Via Docker Image	11
2.4.2 COD Via A Python Package	12
2.5 COD On Azure Via Command Line	13
2.5.1 Minimal Configuration File For COD On Azure	13
2.5.2 Cluster Creation Run With <code>cm-cod-azure</code>	13
2.5.3 Listing Clusters With <code>cm-cod-azure</code>	15
2.5.4 Cluster Removal With <code>cm-cod-azure</code>	16
2.6 COD On AWS Via Command Line	16
2.6.1 Minimal Configuration File For COD On AWS	16
2.6.2 Cluster Creation Run With <code>cm-cod-aws</code>	17
2.6.3 Listing Clusters With <code>cm-cod-aws</code>	18
2.6.4 Cluster Removal With <code>cm-cod-aws</code>	18
2.7 COD On OCI Via Command Line	19
2.7.1 Minimal Configuration File For COD On OCI	19
2.7.2 Cluster Creation Run With <code>cm-cod-oci</code>	19
2.7.3 Listing Clusters With <code>cm-cod-oci</code>	21
2.7.4 Cluster Removal With <code>cm-cod-oci</code>	21
2.8 COD Client Configuration And Command Line Options	22
2.8.1 Command Line Structure	22
2.8.2 Configuration Files	24
2.9 Using The AWS EC2 Management Console	25
2.9.1 Status Checking Via Instance Selection From Instances List	25
2.9.2 Acting On An Instance From The AWS EC2 Management Console	27
2.9.3 Connecting To An Instance From The AWS EC2 Management Console	27
2.9.4 Viewing The Head Node Console	27

2.9.5	Security Group Configuration To Allow Access To The Head Node Via <code>cmsh</code> Or Bright View	28
2.10	Using The Azure Dashboard	29
2.11	COD: Cloud Node Start-up	30
2.11.1	COD: IP Addresses In The Cloud	31
2.12	COD With AWS: Optimizing AWS For High Performance Computing (HPC)	31
2.13	COD And High Availability	32
2.13.1	Introduction	32
2.13.2	Deployment	32
2.13.3	COD HA Checks And Recovery	34
2.13.4	Recovery Of The Passive COD Head	35
2.13.5	COD HA Deletion	36
3	Cluster Extension Cloudbursting	37
3.1	Cluster Extension With AWS: The Bright View Cluster Extension Wizard	39
3.1.1	Introduction	39
3.1.2	AWS Credentials	40
3.1.3	Select Regions	41
3.1.4	Select Availability Zones	42
3.1.5	Select Software Images	42
3.1.6	Select Cloud Types	43
3.1.7	Summary & Deployment	43
3.1.8	Deploy	44
3.2	Cluster Extension With AWS: Cloud Director Startup From Scratch	45
3.2.1	Setting The Cloud Director Disk Storage Device Type	46
3.2.2	Setting The Cloud Director Disk Size	47
3.2.3	Tracking Cloud Director Startup	48
3.3	Cluster Extension With AWS: Cloud Node Startup From Scratch	50
3.4	Cluster Extension With AWS: Cloud Director And Cloud Node Startup From Snapshots	50
3.4.1	Cloud Director Startup From Snapshots	50
3.4.2	Cloud Node Startup From Snapshots	52
3.5	Cluster Extension With AWS: Optimizing AWS For High Performance Computing (HPC)	52
3.5.1	Optimizing HPC Performance: EBS Volume Type	53
3.5.2	Optimizing HPC Performance: Placement Groups	53
3.5.3	Optimizing HPC Performance: Disabling Hyper-Threading	53
3.5.4	Optimizing HPC Performance: Using Elastic Network Adapter Instances	54
3.5.5	Optimizing HPC Performance: Using A Different Clock Source	54
3.5.6	Optimizing HPC Performance: Setting The Socket Buffer Sizes And TCP/IP Parameters In The Software Image	54
4	Cluster Extension Cloudbursting With AWS Using The Command Line And <code>cmsh</code>	55
4.1	The <code>cm-cluster-extension</code> Script For Cluster Extension Clusters	55
4.1.1	Running The <code>cm-cluster-extension</code> Script On The Head Node For Cluster Extension Clusters	55
4.1.2	Launching The Cloud Director For Cluster Extension Clusters	63
4.2	Launching The Cloud Nodes	63
4.2.1	Creating And Powering Up Many Nodes	64

4.3	Submitting Jobs With cmjob And Cloud Storage Nodes, For Cluster Extension Clusters	64
4.3.1	Installation And Configuration of cmjob For Data-aware Scheduling To The Cloud	65
4.3.2	Integration Of cmjob With AWS FSx For Lustre	71
4.4	Miscellaneous Cloud Tools	76
4.4.1	Setting Exclude Lists With excludelistsnippets	76
4.4.2	The provisioningassociations Mode	77
4.5	Connecting To AWS With Direct Connect Or A Hardware VPN	79
4.5.1	Creating a VPC	79
4.5.2	Connecting The Local Network To The VPC	79
4.5.3	Configuring And Deploying The Cluster Extension	80
5	Cluster Extension Cloudbursting With Azure	83
5.1	Introduction To Cluster Extension Cloudbursting With Azure	83
5.2	Cluster Extension Into Azure	83
5.3	Cluster Extension Into Azure: Cloud Node Startup From Scratch	93
5.4	Cluster Extension Into Azure: shutdown Vs power off	93
5.5	Submitting Jobs With cmjob And Cloud Storage Nodes, For Azure Cluster Extension Clusters	94
5.5.1	Integration Of cmjob With Azure NetApp Files	94
5.6	Creating An Azure Cluster Extension Using ExpressRoute Or A Hardware VPN	98
5.6.1	Creating A Virtual Network	99
5.6.2	Connecting The Local Network To The Virtual Network	103
5.6.3	Configuring And Deploying The Cluster Extension	104
5.7	Viewing And Setting Azure Generation 1 And Generation 2 Cloud Nodes	105
5.7.1	Introduction	105
5.7.2	Implementation Of Hyper-V Generation Choice In The Cluster Manager	105
5.8	Running NVIDIA A100 GPUs On Cloud Nodes	106
6	Cluster-On-Demand For OpenStack	109
6.1	Introduction	109
6.2	The cm-cod-os Arguments	110
6.2.1	The cm-cod-os Top Level Arguments	110
6.2.2	The cm-cod-os Context Tree	111
6.2.3	The cm-cod-os Contexts And Optional Arguments Help Text	112
6.3	The cm-cod-os Configuration Files	124
6.3.1	The cm-cod-os Configuration Files Locations	124
6.3.2	Viewing The cm-cod-os Configuration File Options	125
6.3.3	Setting The cm-cod-os Configuration File Options And Corresponding Arguments	125
6.4	The cm-cod-os Environment Variables	126
6.5	Launching A COD	126
6.5.1	Administrative Preparation Of The Host Cluster	126
6.5.2	Launching And Configuring The Nested Cluster As A User	129
7	Cloud Considerations And Choices With NVIDIA Bright Cluster Manager	133
7.1	Differences Between Cluster On Demand And Cluster Extension	133
7.2	Hardware And Software Availability	133
7.3	Reducing Running Costs	133

7.3.1	Spot Pricing	134
7.3.2	Storage Space Reduction	135
7.4	Setting The Cloud Node Images	136
7.5	Ignoring Prepaid Node Limits With Pay-Per-Use Images	137
7.5.1	Bursting Past The Prepaid Limit In AWS	137
7.5.2	Bursting Past The Prepaid Limit In Azure	139
7.6	Address Resolution In Cluster Extension Networks	140
7.6.1	Resolution And globalnet	140
7.6.2	Resolution In And Out Of The Cloud	141
7.7	Internet Connectivity For Cloud Nodes	142
7.8	Passing Kernel Parameters To Cloud Nodes	143
7.9	Setting Up And Creating A Custom VPC	144
7.9.1	Elastic IP Addresses And Their Use In Configuring Static IP Addresses	144
7.9.2	Subnets In A Custom VPC	144
7.9.3	Creating The Custom VPC	144

Preface

Welcome to the *Cloudbursting Manual* for NVIDIA Bright Cluster Manager 9.2.

0.1 About This Manual

This manual is aimed at helping cluster administrators install, understand, configure, and manage the cloud capabilities of NVIDIA Bright Cluster Manager. The administrator is expected to be reasonably familiar with the *Administrator Manual*.

0.2 About The Manuals In General

Regularly updated versions of the NVIDIA Bright Cluster Manager 9.2 manuals are available on updated clusters by default at `/cm/shared/docs/cm`. The latest updates are always online at <http://support.brightcomputing.com/manuals>.

- The *Installation Manual* describes installation procedures for the basic cluster.
- The *Administrator Manual* describes the general administration of the cluster.
- The *User Manual* describes the user environment and how to submit jobs for the end user.
- The *Developer Manual* has useful information for developers who would like to program with the cluster manager.
- The *Edge Manual* describes how to deploy Bright Edge with the cluster manager.
- The *Machine Learning Manual* describes how to install and configure machine learning capabilities with the cluster manager.
- The *Containerization Manual* describes how to manage containers with the cluster manager.

If the manuals are downloaded and kept in one local directory, then in most pdf viewers, clicking on a cross-reference in one manual that refers to a section in another manual opens and displays that section in the second manual. Navigating back and forth between documents is usually possible with keystrokes or mouse clicks.

For example: <Alt>-<Backarrow> in Acrobat Reader, or clicking on the bottom leftmost navigation button of xpdf, both navigate back to the previous document.

The manuals constantly evolve to keep up with the development of the cluster manager environment and the addition of new hardware and/or applications. The manuals also regularly incorporate customer feedback. Administrator and user input is greatly valued at Bright Computing. So any comments, suggestions or corrections will be very gratefully accepted at manuals@brightcomputing.com.

There is also a feedback form available via Bright View, via the Menu icon, , following the click-path:

→Help→Feedback Form

0.3 Getting Administrator-Level Support

If the reseller from whom the cluster manager was bought offers direct support, then the reseller should be contacted.

Otherwise the primary means of support is via the website <https://support.brightcomputing.com>. This allows the administrator to submit a support request via a web form, and opens up a trouble ticket. It is a good idea to try to use a clear subject header, since that is used as part of a reference tag as the ticket progresses. Also helpful is a good description of the issue. The followup communication for this ticket goes via standard e-mail. Section 16.2 of the *Administrator Manual* has more details on working with support.

0.4 Getting Professional Services

Bright Computing normally differentiates between

- professional services (customer asks Bright Computing to do something or asks Bright Computing to provide some service), and
- support (customer has a specific question or problem that requires an answer or resolution).

Professional services can be provided after consulting with the reseller, or the Bright account manager.

1

Introduction

In weather, a cloudburst is used to convey the idea that a sudden flood of cloud contents takes place. In cluster computing, the term *cloudbursting* conveys the idea that a flood of extra cluster capacity is made available when needed from a cloud computing services provider such as Amazon.

NVIDIA Bright Cluster Manager implements cloudbursting for two scenarios:

1. A “Cluster On Demand”, or a “pure” cloud cluster (chapter 2). In this scenario, the entire cluster can be started up on demand from a state of non-existence. All nodes, including the head node, are instances running in a coordinated manner entirely inside the cloud computing service.
2. A “Cluster Extension”, or a “hybrid” cloud cluster (chapter 3). In this scenario, the head node is kept outside the cloud. Zero or more regular nodes are also run outside the cloud. When additional capacity is required, the cluster is extended via cloudbursting to make additional nodes available from within the cloud.

Chapters 2 and 3 deal with mainly the GUI configuration of the Cluster On Demand and Cluster Extension scenarios.

Chapter 4 looks at mainly command line tools for configuration of the Cluster On Demand and Cluster Extension scenarios, considering mainly AWS.

Chapter 5 looks at Cluster Extension for Azure.

Chapter 6 looks at Cluster On Demand for Bright OpenStack.

Chapter 7 discusses some miscellaneous aspects of cloudbursting.

2

Cluster On Demand Cloudbursting With Azure, AWS, OCI, Or Bright OpenStack

2.1 Introduction

Cluster On Demand (COD) cloudbursting is when a separate cluster is started up in a cloud, with the cluster head node that manages the cluster also in that cloud. A COD cluster is regarded as an independent virtual cluster (sometimes described as a 'pure' cloud cluster), and not an extension of an existing physical cluster. COD can run in:

- Azure (COD-Azure) (described in this Chapter)
- AWS (COD-AWS) (described in this Chapter)
- Oracle Cloud Infrastructure (COD-OCI) (described in this Chapter)
- Bright OpenStack (COD-OS) (described in Chapter 6)

When the requirements outlined in the sections that follow have been met, COD clusters can be managed (created, deleted, etc.) in the following ways:

- Via the Bright Computing customer portal (Azure and AWS) (section 2.3)
- By using the COD command line tool via a Docker image or a Python package (all cloud platforms) (section 2.4).

Any of the preceding can be used to launch a COD head node in the cloud. Once the head node is running, then compute nodes are managed by using the various management interfaces provided by NVIDIA Bright Cluster Manager running on the head node (section 2.11).

2.2 Requirements For COD Cloudbursting

The high level requirements for COD are:

- an account on the Bright Computing Customer Portal website at <http://customer.brightcomputing.com/Customer-Login>, when managing COD clusters via the portal
- a cluster manager product key. This key is later activated when the license is installed (Chapter 4 of the *Installation Manual*) on the head node.
- Credentials for the cloud environment in which the COD cluster is created. This is covered in the following sections.

2.2.1 Credentials For Azure

To use Azure, an Azure account subscription is needed from Microsoft. COD cloudbursting requires the following associated Azure credentials to launch:

- tenant ID
- subscription ID
- Client ID
- Client Secret

A CLI-centric way to obtain these credentials requires logging into the Azure web portal using an account that has sufficient privileges. The Azure web bash console is then opened, and the subscription ID can then be listed for the account with:

Example

```
azure@Azure:~$ az account list -o table
Name          CloudName      SubscriptionId                               State      IsDefault
-----
anne          AzureCloud     23748c3e-507b-11e9-a994-fa163e9854eb      Enabled    False
nerds         AzureCloud     b9e22a88-507a-11e9-9352-fa163e9854eb      Enabled    False
```

A service principal (sp) is now created for role-based access control create-for-rbac in Active Directory (ad), and the remaining 3 credentials can then be seen:

Example

```
azure@Azure:~$ az ad sp create-for-rbac --name my-temp-service-principal-for-fred
Changing "my-temp-service-principal-for-fred" to a valid URI of
"http://my-temp-service-principal-for-fred", which is the required format used for service
principal names
Retrying role assignment creation: 1/36
Retrying role assignment creation: 2/36

{"appId": "dcf8151e-507a-11e9-a104-fa163e9854eb",    ## "Client ID"
 "displayName": "my-temp-service-principal-for-fred",
 "name": "http://my-temp-service-principal-for-fred",
 "password": "bc9f571e-fe4c-43d5-909d-4bc66796eb41",    ## "Client secret"
 "tenant": "8cb88849-6e18-46d6-b0fa-551a47a31681"    ## Tenant ID
```

The newly-created service principal is added to the desired subscription as a contributor. The value of appId must be used as the value to the --assignee option. This gives the application sufficient permissions for the cluster to run:

Example

```
azure@Azure:~$ az role assignment create --assignee dcf8151e-507a-11e9-a104-fa163e9854eb --role\
Contributor --subscription b9e22a88-507a-11e9-9352-fa163e9854eb

{"canDelegate": null,
 "id": "/subscriptions/b9e22a88-507a-11e9-9352-fa163e9854eb/providers/Microsoft.Authorization\
/roleAssignments/1094f75c-507b-11e9-ac8f-fa163e9854eb",
 "name": "1094f75c-507b-11e9-ac8f-fa163e9854eb",
 "principalId": "2f899334-507b-11e9-b312-fa163e9854eb",
 "roleDefinitionId": "/subscriptions/b9e22a88-507a-11e9-9352-fa163e9854eb/providers\
```

```
/Microsoft.Authorization/roleDefinitions/b24988ac-6180-42a0-ab88-20f7382dd24c",
  "scope": "/subscriptions/b9e22a88-507a-11e9-9352-fa163e9854eb",
  "type": "Microsoft.Authorization/roleAssignments"
```

The Microsoft documentation suggests that using the name instead of the subscription ID should also work. However in the version that was used at the time of writing (May 2019) this did not work, and an error 400 was displayed.

2.2.2 Credentials For AWS

To use AWS, an AWS subscription is needed from Amazon. COD cloudbursting requires the following associated AWS credentials for launch:

- Secret Access Key: Available only once, when first generated, as described at <https://docs.aws.amazon.com/general/latest/gr/aws-sec-cred-types.html#access-keys-and-secret-access-keys>
- Access Key ID: as described at <https://docs.aws.amazon.com/general/latest/gr/aws-sec-cred-types.html#access-keys-and-secret-access-keys>
- AWS Account ID, as described at <https://docs.aws.amazon.com/general/latest/gr/acct-identifiers.html>
- AWS Username: This can be either the AWS account root user (the e-mail address of the root user), or it can be an IAM username with sufficient permissions to launch the cluster.

2.2.3 Credentials For OCI

To use OCI, an OCI account subscription is needed from Oracle. COD cloudbursting requires the following OCI credentials to launch:

- API signing Key: This key can be either an uploaded public key from cod machine, or a downloaded private key, as described at <https://docs.oracle.com/en-us/iaas/Content/API/Concepts/apisigningkey.htm#two>, in the section How to Generate an API Signing Key. After it is added, a configuration file is displayed.
- User's OCID: This shows up in the configuration file with a format such as:
`user=ocid1.user.oc1..<unique ID>`
 where <unique ID> may have a format such as:

`aaaaaaaaax5552rxvs6ar4qm7kur6jq2kmhrvzmk6coqwq6b7vxoc1ltr64ba`
- Fingerprint: This shows up in the configuration file with a format such as:
`fingerprint=12:34:56:78:90:ab:cd:ef:12:34:56:78:90:ab:cd:ef`
- Tenancy's OCID: This shows up in the configuration file with a format such as:
`tenancy=ocid1.tenancy.oc1..<unique ID>`
- Compartment ID: In the OCI navigation menu, the compartment ID can be found via the clickpath: Identity & Security→Identity→Compartments
 Further information on finding the OCID of a compartment can be found at:
https://docs.oracle.com/en-us/iaas/Content/GSG/Tasks/contactingsupport_topic-Finding_the_OCID_of_a_Compartment.htm.

To use Oracle's `oci-cli` utility, the configuration file has to be placed in `~/.oci/config`. For the COD client, the credentials should be added to the COD configuration file as described in 2.7.1.

2.3 COD Via The Bright Customer Portal (Azure And AWS)

The customer portal (section 2.2) has a menu option Cluster on Demand. Selecting this displays an input form (figure 2.1).

Menu

Overview

Account

Account Overview

Edit Account

Edit Billing

Edit Password

Account Balance

Product

My Clusters

My Product Keys

Unlock Product Key

Register Product Key

Cluster on Demand

Burst Pricing

Support

Request Support

Support Tickets

Usage Reports

Show Usage

Bright Links

Release Notes

Manuals

Download ISO


Download CMGUI

Knowledge Base

Technical Training Videos

Training Portal

Burst! — Cluster on Demand



This page will allow you to create a cluster entirely in the cloud.

Cloud provider: ☐ Amazon Web Services ☐ Azure

Product key: ☒ New Product Key ☐ Use Existing Product Key

Name:

Email:

Organization:

Organizational unit:

Country:

State:

City:

Cluster name:

Linux distribution:

SSH access: ☒ Set SSH public key ☐ Set SSH password

SSH public key:

Submit

Figure 2.1: COD via customer portal: start screen

If this is filled in, then a COD can be launched in AWS or Azure. Some of the options are:

- Cloud provider

- The product key. This can be the existing key, or a new one. Using the existing one for a cluster that is already in use is not normally possible.
- The cluster name. This can be arbitrary.
- The SSH access method.
 - SSH public key access is recommended, and should then be pasted into the text field. Using key access disables SSH password authentication.
 - Alternatively, a password can be set instead. This generates a somewhat random password for SSH password authentication that is not very strong. The password should normally be changed and saved, because brute force password attacks in the AWS and Azure IP address ranges are common.

Selecting AWS as an option presents some extra fields that are appropriate for launching an AWS COD (figure 2.2). How to obtain the values for the AWS keys is discussed in section 2.2. The default values that are in the form for the virtual machine types and sizes will work for small clusters. Other virtual machine types are documented at <https://aws.amazon.com/ec2/instance-types/>.

My Clusters

My Product Keys

Unlock Product Key

Register Product Key

Cluster on Demand

Burst Pricing

Support

Request Support

Support Tickets

Usage Reports

Show Usage

Bright Links

Release Notes

Manuals

Download ISO

Download CMGUI

Knowledge Base

Technical Training Videos

Training Portal

Cloud provider: ☒ Amazon Web Services ☐ Azure

AWS region:

AWS access key:

AWS secret key:

Product key: ☐ New Product Key ☒ Use Existing Product Key

Bright product key:

Name:

Email:

Organization:

Organizational unit:

Country:

State:

City:

Cluster name:

Bright version:

Linux distribution:

Workload management:

Head node flavor:

Head node disk type:

Head node disk size (GB):

[Read more about AWS disk types and sizes](#)

Compute node count:

Compute node flavor:

SSH access: ☐ Set SSH public key ☒ Set SSH password

SSH password:

Please make sure you save the password!

Submit

Figure 2.2: COD-AWS via customer portal: example inputs

Selecting Azure as an option presents some extra fields that are appropriate for launching an Azure COD (figure 2.3). How to obtain the values for the Azure credentials is discussed in section 2.2. The default values that are in the form for the virtual machine types and sizes will work for small clusters. Other virtual machine types are documented at <https://docs.microsoft.com/en-us/azure/virtual-machines/linux/sizes>.

Menu

Overview

Account

Account Overview

Edit Account

Edit Billing

Edit Password

Account Balance

Product

My Clusters

My Product Keys

Unlock Product Key

Register Product Key

Cluster on Demand

Burst Pricing

Support

Request Support

Support Tickets

Usage Reports

Show Usage

Bright Links

Release Notes

Manuals

Download ISO

Download CMGUI

Knowledge Base

Technical Training Videos

Training Portal

Burst! — Cluster on Demand

Cloud provider: ☐ Amazon Web Services
☒ Azure

Azure region:

Azure client ID:

Azure client secret:

Azure tenant ID:

Azure subscription ID:

[How to retrieve Azure access credentials?](#)

Product key: ☒ New Product Key
☐ Use Existing Product Key

Name:

Email:

Organization:

Organizational unit:

Country:

State:

City:

Cluster name:

Bright version:

Linux distribution:

Workload management:

Head node flavor:

Head node disk size (GB):

Compute node count:

Compute node flavor:

SSH access: ☒ Set SSH public key
☐ Set SSH password

SSH public key:

Submit

Figure 2.3: COD-Azure via customer portal: example inputs

Form submission begins the COD installation (figure 2.4).

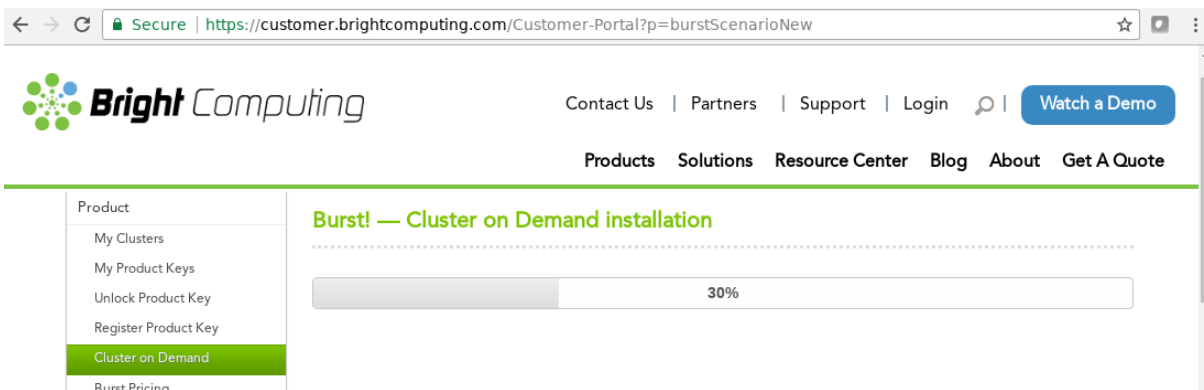


Figure 2.4: COD via customer portal: deployment in progress

When deployment is completed, an e-mail is sent with the details to the e-mail address that was entered in the form earlier. A final screen comes up if the installation was successful (figure 2.4).

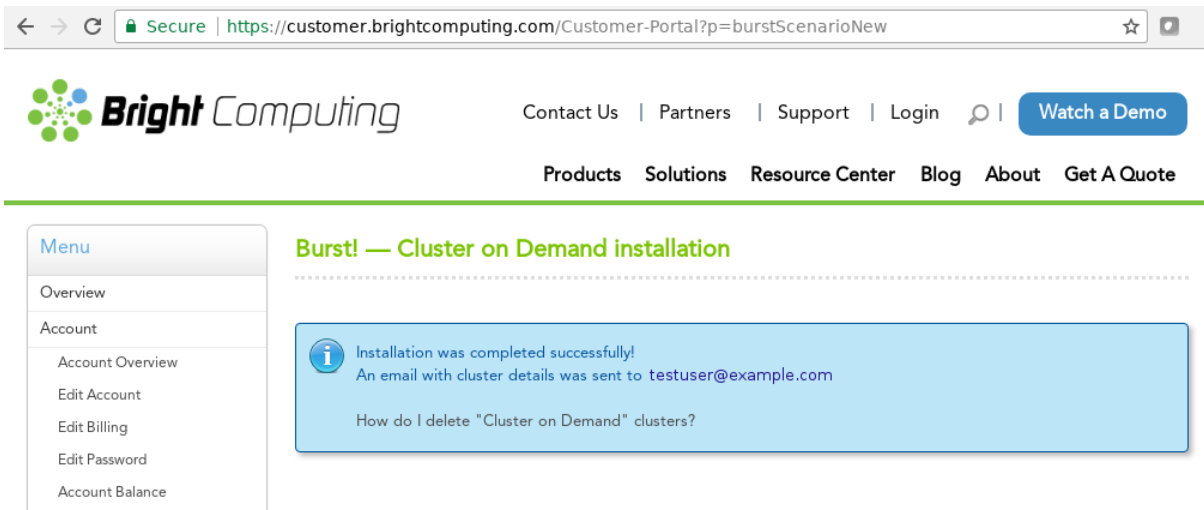


Figure 2.5: COD via customer portal: finished deploying

2.4 COD Via The COD Command Line Tool

There are two options for running the COD command line tool on a standalone PC:

- The COD command line tool can be run from a Docker image:
 - The Docker instance that runs from the image can be hosted on a standalone PC that is not part of a Bright cluster, or it can be hosted on a Bright node.
 - Section 2.4.1 describes the procedure for installing and configuring COD on Docker on a Bright node in more detail.
- The COD command line tool can be run after installing a Python package in a local (virtual) environment:
 - The Python package can also be installed on a standalone PC or it can be installed on a Bright node.

- Section 2.4.2 describes the procedure for installing and configuring the COD client using a Python package on a Bright in more detail.

Once the COD client is installed and configured, the next stage is to launch the COD inside the cloud service. There are three cloud services that a COD from Docker can be launched into. These are:

- AWS (Amazon Web Services), made available by Amazon. The CLI utility in the Docker instance that launches the COD is then `cm-cod-aws` (page 16).
- Azure, made available by Microsoft. The CLI utility in the Docker instance that launches the COD is then `cm-cod-azure` (page 13).
- OCI (Oracle Cloud Infrastructure). The CLI utility in the Docker instance that launches the COD is then `cm-cod-oci` (page 19).

2.4.1 COD Via Docker Image

The following steps are carried out to start up the head node and regular nodes of the COD:

- A Docker host is used to pull the cluster manager COD (Cluster On Demand) image from the Docker registry.
- The image is run in a Docker container.
- From within the instance of the image running in the container, a cloudbursting request for a COD is carried out to a cloud service provider.
- When the request completes successfully, a cluster that is running in the cloud is ready for use.

The COD Docker image is typically run from a standalone machine, such as, for example, a laptop that is not part of a Bright cluster. However, launching a COD from the cluster manager is also possible, and can be carried out as follows:

- Docker is installed in the cluster manager with `cm-docker-setup` (section 2.1 of the *Containerization Manual*), or using the Bright View Docker setup wizard.
- The node that is to run the Docker image is used to pull the image to the node

Example

```
[root@bright92 ~]# ssh node001
[root@node001 ~]# module load docker
[root@node001 ~]# docker pull brightcomputing/cod:latest
...
cac15ba059ef: Pull complete
Digest: sha256:19b263033090e1a70043989decdf3c3870d3def8c2e69b2a85ac293fd7d149ab
Status: Downloaded newer image for brightcomputing/cod:latest
```

- The command line COD tools installed in the container image all have several command line arguments. Instead of the user having to specify many arguments on every invocation of a tool, the options can conveniently be set in configuration files. To provide access to such configuration files it is recommended that the home directory of the user running the tool is mounted into the container instance. It is also recommended to set up the following shell aliases for each of the tools:

Example

```
alias cm-cod-aws='docker run --rm -it --network host -v /root:/root brightcomputing/cod\
:latest cm-cod-aws'
alias cm-cod-azure='docker run --rm -it --network host -v /root:/root brightcomputing\
/cod:latest cm-cod-azure'
alias cm-cod-oci='docker run --rm -it --network host -v /root:/root brightcomputing\
/cod:latest cm-cod-oci'
```

In the preceding aliases:

- the `--rm` option ensures that the container instance created to run a command is also cleaned up on completion
- the `-it` flags are required because some commands may present interactive prompts to the user
- the `--network host` option gives the container network access
- the argument to the `-v` flag has the form of `<source>:<destination>`, where
 - * `<source>` points to the home directory of the user invoking the command, and
 - * `<destination>` is the path where the directory is mounted inside the running container instance. The path of `<destination>` should always be `/root`.
- Once a COD cluster has been created, it is typically accessed using SSH. It is strongly recommended to use key-based authentication instead of password-based authentication. Since the home directory for users is mounted into the container, any existing SSH key pairs (stored in `~/.ssh`) can be used. If no key pair exists, then `ssh-keygen` can be used to create one. To ensure the highest level of compatibility it is recommended to use RSA as the key type and a minimum of 2048 bits.

2.4.2 COD Via A Python Package

Instead of running the COD client in a Docker container it is also possible to install and run the client directly on the host system in a Python virtual environment. The client can be run from the cluster manager as follows:

- A virtual environment is created to install the COD client:

Example

```
[root@bright92 ~]# ssh node001
[root@node001 ~]# module load python3
[root@node001 ~]# python3 -m venv .venvs/cod
[root@node001 ~]# source .venvs/cod/bin/activate
(cod) [root@node001 ~]#
```

- Next, the required COD clients are installed. Possible clients are:

- `cm-cluster-on-demand-aws`
- `cm-cluster-on-demand-azure`
- `cm-cluster-on-demand-oci`

For example, the COD client tool for AWS can be installed as follows:

Example

```
(cod) [root@node001 ~]# pip install cm-cluster-on-demand-aws
...
Successfully installed boto3-1.7.75 botocore-1.10.84 cm-cluster-on-demand-aws-9.1 ...
```

More than one client can be installed.

- After the COD client has been installed, it can be run whenever the virtual environment is activated, without having to install it again:

Example

```
[root@node001 ~]# source .venvs/cod/bin/activate
(cod) [root@node001 ~]# cm-cod-aws
usage: cm-cod-aws [-h] [--config CONFIG] [--no-system-config] [-v]
                  [--show-configuration] [--log-file LOG_FILE] [--version]
                  cluster,c,cluster create,cc,cluster list,cl,cluster
                  delete,cd,cr,cremove,image,i,image
                  list,il,instancetype,config ...
cm-cod-aws: error: the following arguments are required: group
```

2.5 COD On Azure Via Command Line

Launching a COD inside Azure is carried out by running `cm-cod-azure` from either the Docker image or the Python package. The `cm-cod-azure` command can take configuration options from one or more configuration files, environment variables, or command line options. More details on this are given in section 2.8.

Typically some of the more static options are configured in a configuration file, while some of the more variable options are specified on the command line.

Online help is also available: for example, running `cm-cod-azure cluster create -h` displays a list of options and explanations for the `cluster create` command.

2.5.1 Minimal Configuration File For COD On Azure

It is recommended to create a minimal configuration in `~/cm-cluster-on-demand.d/config.ini`

The credentials and product key in the following example are dummy credentials, and must be replaced with the appropriate values for the Azure instance used by the cluster administrator. The value for `ssh_pub_key_path` is the key for connecting to the head node, which can be generated using `ssh-keygen -b 4096`.

Example

```
[azure.credentials]
azure_subscription_id=5e519b1e-aff9-e839-bc3a-c5d87e9d0d5
azure_tenant_id=2c89c8dd-6b8b-5393-60f4-d876cbe188f
azure_client_id=afe13723-c80a-68e2-9cd0-e95a657106a
azure_client_secret=aiVohwi70hJ6igim=
azure_location=westeurope

[cluster.create.license]
license_product_key=123456-123456-123456-123456-123456

[cluster.create.password]
ssh_pub_key_path=/root/.ssh/id_rsa.pub
```

2.5.2 Cluster Creation Run With `cm-cod-azure`

An example of a `cm-cod-azure` command that can be run is then:

Example

```
cm-cod-azure cluster create \
  --head-node-type Standard_D1_v2 --head-node-root-volume-size 50 \
  --nodes 3 --node-type Standard_D1_v2 \
  --name testcluster
```

The Bright Azure integration makes use of several node-installer images which are published in the Azure marketplace. In order to use those images, Azure requires the administrator to accept the legal terms for those images. The code automatically detects if the terms were already accepted in the past, in which case it proceeds and creates the cluster. If the terms still need to be accepted, then several links to the legal terms are presented, along with a prompt to accept them. The output looks similar to the following (some output ellipsized):

Example

To use Azure VM images, you need to accept the following terms:

```
- License (bcmni-azure-9-2:bcm-ni-azure-9-2-v1): https://download.microsoft.com/download/F/D/8/FD8BA8F2...
- Privacy Policy (bcmni-azure-9-2:bcm-ni-azure-9-2-v1): https://www.brightcomputing.com/privacy-policy
- Marketplace Terms (bcmni-azure-9-2:bcm-ni-azure-9-2-v1): https://mpcprodsa.blob.core.windows.net/market...
- License (bcmni-azure-9-2-free:bcm-ni-azure-9-2-v2): https://download.microsoft.com/download/F/D/8/FD8BA...
- Privacy Policy (bcmni-azure-9-2-free:bcm-ni-azure-9-2-v2): https://www.brightcomputing.com/privacy-policy
- Marketplace Terms (bcmni-azure-9-2-free:bcm-ni-azure-9-2-v2): https://mpcprodsa.blob.core.windows.net/mark...
Accept (y/n)?
```

If all is well, then something similar to the following is displayed (some output elided):

Example

```
[root@cod-client ~]# cm-cod-azure cluster create \
--head-node-type Standard_D1_v2 --head-node-root-volume-size 50 \
--nodes 3 --node-type Standard_D1_v2 \
--name testcluster
09:35:01:      INFO: No custom cluster password specified. Using a random password.
Use --log-cluster-password to see it. If you are going to use the Bright View you have
to change this password by using cm-change-passwd script (change root password of head
node) or simply 'passwd root' command. If this cluster has a high-availability setup
with 2 head nodes, be sure to change the password on both head nodes.
09:35:05:      INFO: Temporary azure resources will be created in order to verify that
the API credentials have the required permissions, this can take a few minutes. You can
skip this step by specifying the following flag: '--skip-permission-verifications'
09:35:05:      INFO: Cluster Create
09:35:05:      INFO: -----
09:35:05:      INFO:           Cluster:  testcluster
09:35:05:      INFO: -----
09:35:05:      INFO:           Image name:  bcm-cod-image-9.0-8
09:35:05:      INFO:           Image date:  2020-08-21 15:10 (38d 18h ago)
09:35:05:      INFO:           Package groups:  none
09:35:05:      INFO:           Version:      9.0
09:35:05:      INFO:           Head nodes:   1 (Standard_D1_v2)
09:35:05:      INFO:           Nodes:       3 (Standard_D1_v2)
09:35:05:      INFO:           Resource Group: testcluster_cod_resource_group
09:35:05:      INFO:           Region:      westeurope
09:35:05:      INFO: -----
09:35:05:      INFO: Press ENTER to continue and create the cluster.
09:35:05:      INFO: Press ctrl+c (or type 'a') to abort. Type 'i' for more info.

09:35:45:      INFO: Credentials are valid and have read/write authorizations.
```

```

09:38:17:      INFO: ## Progress: 2
09:38:17:      INFO: #### stage: Creating resource group testcluster_cod_resource_group
09:38:18:      INFO: Creating storage account testclusterstoragerg68u3
09:38:36:      INFO: ## Progress: 7
09:38:36:      INFO: #### stage: Copying head node image from
https://brightimages.blob.core.windows.net/images/bcm-cod-image-9.0-8.vhd
09:38:36:      INFO: Copying https://brightimages.blob.core.windows.net/images/bcm-cod-image-9.0-8.vhd
to testclusterstoragerg68u3/images/testcluster-head-node-os-disk.vhd
09:38:37:      INFO: ## Progress: 12.0
09:38:37:      INFO: #### stage: Server side copy
09:38:59:      INFO: ## Progress: 12.13
09:38:59:      INFO: #### stage: Server side copy
09:39:03:      INFO: ## Progress: 12.26
...
09:49:40:      INFO: #### stage: Server side copy
09:49:41:      INFO: ## Progress: 51.85
09:49:41:      INFO: #### stage: Server side copy
09:49:43:      INFO: ## Progress: 51.98
09:49:43:      INFO: #### stage: Server side copy
09:49:45:      INFO: Elapsed: 11:08 min
09:49:45:      INFO: Creating Azure Image resource 'testcluster-head-node-os-disk' from blob
https://testclusterstoragerg68u3.blob.core.windows.net/images/testcluster-head-node-os-disk.vhd
09:50:21:      INFO: Deleting blob testclusterstoragerg68u3/images/testcluster-head-node-os-disk.vhd
09:50:21:      INFO: ## Progress: 5
09:50:21:      INFO: #### stage: Building deployment template
09:50:21:      INFO: generating cloud-init script
09:50:21:      INFO: ## Progress: 85
09:50:21:      INFO: #### stage: Creating and deploying Head node
09:52:22:      INFO: Head node IP: 51.145.169.45
09:52:22:      INFO: Waiting for sshd to start (ssh root@51.145.169.45).
09:52:22:      INFO: Waiting for CMDaemon to start.
09:55:05:      INFO: Waiting for CMDaemon to initialize.
09:56:07:      INFO: ## Progress: 100
09:56:07:      INFO: #### stage: Deployment finished successfully.
09:56:07:      INFO: -----
09:56:07:      INFO:          Cluster:  testcluster
09:56:07:      INFO: -----
09:56:07:      INFO:  Head node ID:   7f03d713-71ad-4eb6-88ff-045f82a41990
09:56:07:      INFO:    Public IP:   51.145.169.45
09:56:07:      INFO:    Key path:    /root/.ssh/id_rsa.pub
09:56:07:      INFO: -----
[root@cod-client ~]#

```

The cluster can now be logged into by using the SSH keys generated earlier, and using the public IP address shown in the last few lines of the preceding output.

The regular nodes running on Azure are configured for use, but are not powered on. They can be powered on using the cmsh or Bright View front ends, just as in a regular cluster.

From cmsh, the first cloud node can be powered on with, for example:

```
[testcluster->device]% power on cnode001
```

More details can be found in section 2.11.

2.5.3 Listing Clusters With `cm-cod-azure`

The clusters that are running can be listed with the `cluster list` command option:

Example

```
[root@cod-client ~]# cm-cod-azure cluster list
+-----+-----+-----+-----+...
| Cluster Name | Head node name | Public IP | Location | ...
+-----+-----+-----+-----+...
| testcluster | testcluster-head-node | 51.145.169.45 | westeurope | ...
+-----+-----+-----+-----+...
```

Since all of the credentials are specified in the configuration file, no further command line options are needed.

2.5.4 Cluster Removal With `cm-cod-azure`

A cluster can be removed with a command in the form of: `cluster delete <cluster name>`:

Example

```
[root@cod-client ~]# cm-cod-azure cluster delete testcluster
10:10:47:      INFO: Deleting resource group(s): testcluster_cod_resource_group
10:10:47:      INFO: Proceed? [yes/no]
y
10:10:52:      INFO: Started deleting resources for Resource Group 'testcluster_cod_resource_group'
[root@cod-client ~]#
```

2.6 COD On AWS Via Command Line

Launching a COD inside AWS is carried by running `cm-cod-aws` from either the Docker image or the Python package.

The `cm-cod-aws` command can take configuration options from one or more configuration files, environment variables, or command line options. More details on this are given in section 2.8.

Typically some of the more static options are configured in a configuration file, while some of the more variable options are specified on the command line.

Online help is also available. For example, running `cm-cod-aws cluster create -h` displays a list of options and explanations for the `cluster create` command.

2.6.1 Minimal Configuration File For COD On AWS

Creation of a minimal configuration file in `~/cm-cluster-on-demand.d/config.ini` is recommended, with the following contents:

Example

```
[aws.credentials]
aws_access_key_id=AKIAJAICHAZI70HH1EEGO
aws_secret_key=0ocei6eiieshahG7IiJe9Quoud0oo
aws_region=eu-west-1

[cluster.create.license]
license_product_key=123456-123456-123456-123456-123456

[cluster.create.password]
ssh_pub_key_path=/root/.ssh/id_rsa.pub
```

The example credentials and product key should be replaced with the appropriate values.

2.6.2 Cluster Creation Run With `cm-cod-aws`

An example of a `cm-cod-aws` command that can be run is then:

Example

```
cm-cod-aws cluster create \
  --head-node-type t3.medium --head-node-root-volume-size 50 \
  --nodes 3 --node-type t3.medium \
  --name testcluster
```

If all is well, then something similar to the following is displayed (some output elided):

Example

```
[root@cod-client ~]# cm-cod-aws cluster create \
--head-node-type t3.medium --head-node-root-volume-size 50 \
--nodes 3 --node-type t3.medium \
--name testcluster
13:39:59:      INFO: No custom cluster password specified. Using a random password. Use
--log-cluster-password to see it. If you are going to use the Bright View you have to change this
password by using cm-change-passwd script (change root password of head node) or simply
'passwd root' command. If this cluster has a high-availability setup with 2 head nodes, be sure
to change the password on both head nodes.
13:40:01:      INFO: -----
13:40:01:      INFO:          Cluster:  testcluster
13:40:01:      INFO: -----
13:40:01:      INFO:          Image name:  brightheadnode-9.0-centos7u7-hvm-9(ami-07ef81b0e2d680131:9)
13:40:01:      INFO:          Image date:  2020-08-21 13:44 (39d 0h ago)
13:40:01:      INFO:          Package groups:  none
13:40:01:      INFO:          Version:  9.0
13:40:01:      INFO:          Distro:  centos7u7
13:40:01:      INFO:          Head nodes:  1 (t3.medium)
13:40:01:      INFO:          Head node IP:  <auto> (set with --head-node-internal-ip)
13:40:01:      INFO:          Nodes:  3 (t3.medium)
13:40:01:      INFO:          Region:  eu-west-1
13:40:01:      INFO:          Key path:  /root/.ssh/id_rsa.pub
13:40:01:      INFO: -----
13:40:01:      INFO: Press ENTER to continue and create the cluster.
13:40:01:      INFO: Press ctrl+c (or type 'a') to abort. Type 'i' for more info.

13:40:02:      INFO: ## Progress: 2
13:40:02:      INFO: #### stage: Setting up VPC
13:40:02:      INFO: ## Progress: 5
13:40:02:      INFO: #### stage: Creating VPC for on-demand testcluster in eu-west-1...
13:40:03:      INFO: ## Progress: 10
13:40:03:      INFO: #### stage: Adding internet connectivity...
13:40:04:      INFO: ## Progress: 12
13:40:04:      INFO: #### stage: Creating public subnet...
13:40:05:      INFO: ## Progress: 14
13:40:05:      INFO: #### stage: Creating private subnet...
13:40:06:      INFO: Created security group for the head node: sg-057c11f4d9857a025
13:40:06:      INFO: Created security group for the compute node: sg-06249aedeffcb0d2d
13:40:07:      INFO: ## Progress: 16
13:40:07:      INFO: #### stage: Creating head node (t3.medium)...
13:40:07:      INFO: Public key specified.
13:40:07:      INFO: Creating the head node VM instance.
13:40:08:      INFO: Created VM i-0d92887ef735f87b1.
```

```

13:40:09:      INFO: Waiting for head node to be running
13:40:25:      INFO: ## Progress: 22
13:40:25:      INFO: ##### stage: Done setting up VPC for on-demand testcluster.
13:40:25:      INFO: ## Progress: 22
13:40:25:      INFO: ##### stage: Starting the head node
13:40:25:      INFO: ## Progress: 30
13:40:25:      INFO: ##### stage: Waiting for the head node to start
13:40:25:      INFO: ## Progress: 32
13:40:25:      INFO: ##### stage: Assigning public IP to the head node (use
'--no-head-node-assign-public-ip' to skip)
13:40:27:      INFO: Elastic IP assigned: 54.217.104.57.
13:40:27:      INFO: ## Progress: 30
13:40:27:      INFO: ##### stage: Waiting for cloud-init to start (use
'--cloud-init-timeout 0' to skip)
13:40:27:      INFO: Waiting for cloud-init to finish on the cluster testcluster (by trying to
connect to 54.217.104.57:8081).
13:44:04:      INFO: ## Progress: 100
13:44:04:      INFO: ##### stage: Deployment of cluster: testcluster finished successfully.
13:44:14:      INFO: Script completed.
13:44:14:      INFO: -----
13:44:14:      INFO: Time it took:    04:12
13:44:14:      INFO:   SSH string:    'ssh root@54.217.104.57'
54.217.104.57 testcluster
13:44:14:      INFO: Head node ID:    i-0d92887ef735f87b1
[root@cod-client ~]#

```

At this point, the head node running on AWS is ready for use. It can be accessed via SSH, as suggested in the SSH string line of the preceding output.

The regular nodes running on AWS are configured for use, but are not powered on. They can be powered on using the `cmsh` or Bright View front ends, just as in a regular cluster.

From `cmsh`, the first cloud node can be powered on with, for example:

```
[testcluster->device]% power on cnode001
```

More details can be found at section 2.11.

2.6.3 Listing Clusters With `cm-cod-aws`

The clusters that are running can be listed with the command option `cluster list`:

Example

```

[root@cod-client ~]# cm-cod-aws cluster list
14:16:44:      INFO: Listing clusters in region eu-west-1
+-----+-----+-----+-----+-----+
| Cluster Name | VPC ID | Head node ID | Public IP | ... |
+-----+-----+-----+-----+-----+
| testcluster  | vpc-019dacc0877bfd71a | i-0d92887ef735f87b1 | 54.217.104.57 | ... |
+-----+-----+-----+-----+-----+

```

Since all of the credentials are specified in the configuration file, no further command line options are needed.

2.6.4 Cluster Removal With `cm-cod-aws`

A cluster can be removed with a command in the form of: `cluster delete <cluster name>`:

Example

```
[root@cod-client ~]# cm-cod-aws cluster delete testcluster
14:18:57:      INFO: This will destroy VPCs for testcluster, continue?
14:18:57:      INFO: Proceed? [yes/no]
y
14:19:00:      INFO: Stopping instances for VPCs on-demand testcluster
14:19:00:      INFO: Listing instances...
14:19:00:      INFO: Issuing instances termination requests...
14:19:00:      INFO: Waiting until instances terminated...
14:20:31:      INFO: Destroying VPC on-demand testcluster
14:20:31:      INFO: Deleting subnets...
14:20:32:      INFO: Deleting route tables...
14:20:32:      INFO: Detaching and deleting gateways...
14:20:33:      INFO: Flushing permissions...
14:20:34:      INFO: Deleting security groups...
14:20:35:      INFO: Deleting VPC...
14:20:35:      INFO: Done destroying VPC on-demand testcluster
[root@cod-client ~]#
```

2.7 COD On OCI Via Command Line

Launching a COD inside OCI is carried out by running `cm-cod-oci` from either the Docker image or the Python package.

The `cm-cod-oci` command can take configuration options from one or more configuration files, environment variables, or command line options. More details on this are given in section 2.8.

Typically some of the more static options are configured in a configuration file, while some of the more variable options are specified on the command line.

Online help is also available. For example, running `cm-cod-oci cluster create -h` displays a list of options and explanations for the `cluster create` command.

2.7.1 Minimal Configuration File For COD On OCI

The creation of a minimal configuration file in `~/cm-cluster-on-demand.d/config.ini` is recommended, with the following contents:

Example

```
[oci.credentials]
oci_user=ocidl.user.oc1..<unique_ID>
oci_fingerprint=12:34:56:78:90:ab:cd:ef:12:34:56:78:90:ab:cd:ef
oci_tenancy=ocidl.tenancy.oc1..<unique_ID>
oci_region=us-sanjose-1
oci_key_file=~/.oci/oci_api_key.pem
[oci.cluster.common]
oci_compartment_id = "ocidl.compartment.oc1..<unique_ID>"
[cluster.create.password]
ssh_pub_key_path=/root/.ssh/id_rsa.pub
```

The credentials should be replaced with the OCI credentials from 2.2. The value for `ssh_pub_key_path` is the key for connecting to the head node, which can be generated using `ssh-keygen -b 4096`.

2.7.2 Cluster Creation Run With `cm-cod-oci`

An example of a `cm-cod-oci` command that can be run is then:

Example

```
cm-cod-oci cluster create \
  --head-node-number-cpus 2 --head-node-root-volume-size 50 \
  --head-node-shape VM.Standard.E4.Flex --nodes 2 \
  --node-shape VM.Standard3.Flex --node-number-cpus 2 --node-root-volume-size 50 \
  --name testcluster
```

If all is well, then something similar to the following is displayed (some output elided):

Example

```
[root@cod-client ~]# cm-cod-oci cluster create \
  --head-node-number-cpus 2 --head-node-root-volume-size 50 \
  --head-node-shape VM.Standard.E4.Flex --nodes 2 \
  --node-shape VM.Standard3.Flex --node-number-cpus 2 --node-root-volume-size 50 \
  --name testcluster
05:35:54:      INFO: No custom cluster password specified. Using a random password. Use --log-cluster
-password to see it. If you are going to use the Bright View you have to change this password by us-
ing cm-change-passwd script (change root password of head node) or simply 'passwd root' command. If
this cluster has a high-availability setup with 2 head nodes, be sure to change the password on both
head nodes.
05:35:56:      INFO: Oracle Cloud Infrastructure (OCI) requires acceptance of terms & conditions ass-
ociated with relevant images whenever a new version of these images is made available. The following
terms & conditions / end user license agreements must be accepted in order to use this software:

Head node terms:
(already accepted)

Compute node terms:
- https://objectstorage.eu-marseille-1.oraclecloud.com/n/axogvvqxyiae/b/community-application
/o/eula.html
- https://cloudmarketplace.oracle.com/marketplace/content?contentId=50511634&render=inline
- https://www.oracle.com/legal/privacy/privacy-policy.html

Do you grant permission for Bright Cluster Manager to accept the required end user license
agreements and terms & conditions on your behalf when creating machine instances in OCI?
05:35:56:      INFO: Proceed? [yes/no]
yes
05:35:58:      INFO: -----
05:35:58:      INFO:                Cluster:  testcluster
05:35:58:      INFO: -----
05:35:58:      INFO:                Image name:  bcmh-ubuntu2004-10.0-1021(ubuntu2004-10.0:1021)
05:35:58:      INFO:                Image date:  2023-05-14 07:09 (22h 26m ago)
05:35:58:      INFO:                Package groups: none
05:35:58:      INFO:                Version:    10.0
05:35:58:      INFO:                Distro:    ubuntu2004
05:35:58:      INFO:                Head node:  1 (VM.Standard.E4.Flex)
05:35:58:      INFO:                Nodes:    2 (VM.Standard3.Flex)
05:35:58:      INFO:                Region:   us-sanjose-1
05:35:58:      INFO:                Compartment: bright
05:35:58:      INFO:                Key path:  /root/.ssh/id_rsa.pub
05:35:58:      INFO: Cloud authentication: Head node will inherit COD credentials for cloud
authentication
05:35:58:      INFO: -----
05:35:58:      INFO: Press ENTER to continue and create the cluster.
05:35:58:      INFO: Press ctrl+c (or type 'a') to abort. Type 'i' for more info.
```

```

05:36:00:      INFO: No availability domain configured; selected 'exbx:US-SANJOSE-1-AD-1'
from those in the configured compartment
05:36:01:      INFO: Creating VCN
05:36:05:      INFO: Creating subnet
05:36:07:      INFO: Creating network security groups
05:36:09:      INFO: Creating head node
05:37:18:      INFO: Waiting for sshd to start (ssh root@155.248.204.211).
05:38:26:      INFO: Waiting for CMDaemon to start.
05:39:28:      INFO: Waiting for CMDaemon to initialize.
05:41:38:      INFO: -----
05:41:38:      INFO:          Cluster:  testcluster
05:41:38:      INFO: -----
05:41:38:      INFO:  Head node ID:  ocid1.instance.oc1.us-sanjose-1.anzwuljricxcl6acdujsuhn
3yw6uze3h3c44jgbgitwqlqceqpdqkebzij3q
05:41:38:      INFO:      Public IP:  155.248.204.211
05:41:38:      INFO:      Key path:  /root/.ssh/id_rsa.pub
05:41:38:      INFO: -----

```

At this point, the head node running on OCI is ready for use. It can be accessed via SSH, as suggested in the SSH string line of the preceding output. The regular nodes running on OCI are configured for use, but are not powered on. They can be powered on using the `cmsh` or Bright View front ends, just as in a regular cluster.

In `cmsh`, the first cloud node can be powered on with:

Example

```
[testcluster->device]% power on cnode001
```

More details can be found in section 2.11.

2.7.3 Listing Clusters With `cm-cod-oci`

The clusters that are running can be listed with the `cluster list` command line option:

Example

```

[root@cod-client ~]# cm-cod-oci cluster list
05:47:06:      INFO: Listing clusters in region us-sanjose-1
+-----+-----+-----+-----+-----+
| Cluster Name| VCN Name                | Head node name          | State  | Shape  |
+-----+-----+-----+-----+-----+
| testcluster | on-demand testcluster-01 | testcluster-head-node   | RUNNING | VM.Standard.E4
+-----+-----+-----+-----+-----+

```

Since all of the credentials are specified in the configuration file, no further command line options are needed.

2.7.4 Cluster Removal With `cm-cod-oci`

A cluster `testcluster` can be removed with a command such as:

Example

```

[root@cod-client ~]# cm-cod-oci cluster delete -- filters testcluster

05:50:45:      INFO: This will delete all OCI resources tagged as 'testcluster'; continue?
05:50:45:      INFO: Proceed? [yes/no]

```

```

yes
05:50:49:      INFO: Cluster testcluster: No cluster networks 'BCM_Cluster=testcluster'; skipping
05:50:49:      INFO: Cluster testcluster: No instance pools found matching 'BCM_Cluster=testcluster';
skipping
05:50:49:      INFO: Cluster testcluster: Terminating testcluster-head-node (instance state:
RUNNING)...
05:51:54:      INFO: Cluster testcluster: Terminated 1 instance in 64.48 seconds
05:51:54:      INFO: Cluster testcluster: No volumes found matching 'BCM_Cluster=testcluster';
skipping
05:51:55:      INFO: Cluster testcluster: Deleting subnet 'testcluster-01'
05:51:58:      INFO: Cluster testcluster: Deleting route table 'Default Route Table for on-demand
testcluster-01'
05:52:00:      INFO: Cluster testcluster: Deleting internet gateway 'testcluster-01'
05:52:02:      INFO: Cluster testcluster: No Instance Configurations found matching 'BCM_Cluster=test-
cluster'; skipping
05:52:02:      INFO: Cluster testcluster: Deleting VCN 'on-demand testcluster-01'
[root@cod-client ~]#

```

2.8 COD Client Configuration And Command Line Options

All COD clients (cm-cod-azure (section 2.5), cm-cod-aws (section 2.6), and cm-cod-oci (section 2.7)) have a similar command line structure. They can take many command line arguments. All of those arguments can also be specified in configuration files, or as environment variables. Options specified as environment variables override options specified in configuration files. Options specified on the command line override options defined as environment variables as well as options defined in configuration files.

2.8.1 Command Line Structure

The command line structure is similar for all the different COD clients. Each client offers a number of top-level commands, which each offer a number of sub-level commands. The top-level and sub-level commands are always the first two positional arguments. Each top-level as well as sub-level commands can have several optional arguments.

The syntax is indicated by:

```
cm-cod-{aws, azure, oci} [top-level command [sub-level command]] options
```

Command Line Help

To find out which commands and options are available, the `--help` | `-h` option can be used. The following example shows how to display the top-level commands and options for the cm-cod-aws client:

Example

```

[root@cod-client ~]# cm-cod-aws --help
usage: cm-cod-aws [-h] [--config CONFIG] [--no-system-config] [-v]
                  [--show-configuration] [--log-file LOG_FILE] [--version]
                  {cluster,c,cluster create,cc,cluster list,cl,cluster
                  delete,cd,cr,cremove,image,i,image
                  list,il,instancetype,config} ...

```

Cluster-on-demand by Bright Computing

positional arguments:

```

{cluster,c,cluster create,cc,cluster list,cl,cluster delete,cd,cr,cremove,image,i,image list,
il,instancetype,config}
  cluster (c)          Manage clusters

```

```

cluster create (cc)
                        Create a new cluster
cluster list (cl)      List all of the recognized clusters (VPCs)
cluster delete (cd, cr, cremove)
                        Delete all resources in a cluster
image (i)              Manage images
image list (il)        List available Bright head node images
instancetype           Instance types
config                Configuration operations

```

optional arguments:

```

-h, --help            show this help message and exit
--config CONFIG, -c CONFIG
--no-system-config
-v, -vv, -vvv
--show-configuration
--log-file LOG_FILE
--version

```

Command Line Help At Other Levels

The `--help` option can also be used to get the available options for a specific top-level command. For example:

```
cm-cod-aws cluster --help
```

The `--help` option can also be used to get the available options for a specific sub-level command.

For example:

```
cm-cod-aws cluster create --help.
```

Command Line Parameter Explanations With `--explain`

More detailed information about a specific parameter can be obtained using the `--explain` flag.

The following example shows how to find out more about the `--nodes` parameter of the `cluster create` command of `cm-cod-aws`. The last parameter is specified as `nodes`, not `--nodes`.

Example

```

[root@cod-client ~]# cm-cod-aws cluster create --explain nodes
NAME
  nodes (cm-cod-aws cluster create --nodes <value> | -n <value>)

```

DESCRIPTION

The amount of cloud nodes to configure for a cluster. The nodes are not powered on automatically.

Its default value is 5.

NAMESPACES AND COMMANDS

It is used in the following namespaces and commands

```

-[cluster.create.nodes:nodes]
'-[cluster.create:nodes]
'-[aws.cluster.create:nodes]    (command: cm-cod-aws cluster create)

```

HOW TO CONFIGURE

On the Command Line:

```
cm-cod-aws cluster create --nodes 5 [...]
```

```
cm-cod-aws cluster create -n 5 [...]
```

As Environment Variable:

```
COD_NODES=5 cm-cod-aws cluster create [...]
```

In a Config File:

```
[cluster.create.nodes]
nodes=5
```

The detailed information includes what the default for the parameter is (if applicable), how to specify the parameter as an environment variable, and how to include it in a configuration file.

2.8.2 Configuration Files

By default, configuration files for setting up the COD are searched for in the following locations, and in the following sequence. Settings found earlier in the sequence are overwritten by settings later on in the sequence.

- /etc/cm-cluster-on-demand.ini
- /etc/cm-cluster-on-demand.conf
- /etc/cm-cluster-on-demand.d/*
- ~/cm-cluster-on-demand.ini
- ~/cm-cluster-on-demand.conf
- ~/cm-cluster-on-demand.d/*
- a file location specified on the command line. For example, a file mycodsettings can be accessed using the --config option of the COD client:

Example

```
[fred@bright92 ~]$ cm-cod-azure --config mycodsettings
```

The ~/cm-cluster-on-demand.* files and directory are deprecated in versions of NVIDIA Bright Cluster Manager beyond 9.2. Users should replace them with dotfiles as specified in NVIDIA Bright Cluster Manager 9.3 onwards.

Typically, the administrator sets up configuration options in one of the first 3 locations, and the regular user modifies the options or adds other options in one of the last 4 locations. The configuration files are formatted as .ini files.

Viewing The Configuration File Options

A dump of the existing configuration can be viewed using the `config dump` command, for example:

```
cm-cod-azure config dump
```

To check what options have been applied, and their sequence, the log to STDOUT can be viewed if the `-v|--verbose` option has been applied.

A list of configuration options for a command can be seen with the `--show-configuration` option, for example (output elided):

Example


```
[fred@bright92 ~]$ cm-cod-azure cluster create --show-configuration
```

option	value
accept_eula	False (default)
access_validation	True (default)
advanced_help	False (default)
ask_to_confirm_cluster_creation	True (default)
azure_client_id	'12345678-1234-1234-1234-123456789012' (file: /etc/.../config.ini)
azure_client_secret	XXXXXXXXXXXX (file: /etc/.../config.ini) # use ... to uncover
azure_location	'westeurope' (file: /etc/cm-cluster-on-demand.d/config.ini)
azure_subscription_id	'12345678-1234-1234-1234-123456789012' (file: /etc/.../config.ini)
azure_tenant_id	'12345678-1234-1234-1234-123456789012' (file: /etc/.../config.ini)
cluster_password	None (default)

...

The table also indicates from which file a specific setting was taken.

Arguments to the `cm-cod-{aws,azure}` commands override the equivalent configuration file settings. This means that the configuration file settings of a working configuration can be used as a default template, and modifications to the template can conveniently be carried out via command line.

Setting Configuration File Options And Corresponding Arguments

The configuration files are formatted as `.ini` files, which can contain multiple sections. The `--explain` flag can be used to find out how a certain command line parameter could be defined in a configuration file. Thus in the earlier example, in the case of the `cm-cod-aws cluster create --node` parameters, defining it as a configuration file would end up with a file looking like this:

```
[cluster.create.nodes]
nodes=5
```

2.9 Using The AWS EC2 Management Console

The recommended way of managing COD is using Bright View via its public IP address, or by using `cmsh` via the head node (section 2.9.5). This section (section 2.9) describes how the Amazon management console can also be used, to manage some AWS aspects of the instance.

A login is possible from <https://console.aws.amazon.com/console/> by using the e-mail address and password of the associated AWS root account, or AWS IAM user account.

The head node instance can be watched and managed without the cluster manager in the following ways.

2.9.1 Status Checking Via Instance Selection From Instances List

Clicking the Instances menu resource item from the navigation pane opens up the “Instances” pane. This lists instances belonging to the account owner. An instance can be marked by ticking its checkbox. Information for the selected instance is then displayed in the lower main pane (figure 2.6).

The screenshot shows the Amazon EC2 Management Console interface. The left sidebar contains navigation links for EC2 Dashboard, Events, INSTANCES, IMAGES, ELASTIC BLOCK STORAGE, and NETWORK & SECURITY. The main content area displays the 'Launch Instance' button and a table of instances. The table has columns for Name, Instance ID, AMI ID, Root Device, Type, State, Status, Alarm Status, Monitoring, and Security Groups. The instance 'examplecluster' is selected, and its details are shown below the table.

Name	Instance	AMI ID	Root Device	Type	State	Status	Alarm St.	Monitoring	Security G
<input checked="" type="checkbox"/> examplecluster	i-907182f3	ami-0c2f8a65	ebs	t1.micro	running	init	none	basic	quicklaun
<input type="checkbox"/> piotr-cluster-on-	i-a4d5b5d4	ami-0c2f8a65	ebs	m1.small	stopped		none	basic	quicklaun
<input type="checkbox"/> us-east-1-direct	i-e17b6b91	ami-543baa3c	ebs	m1.large	stopped		none	basic	brightclou
<input type="checkbox"/> us-east-1-direct	i-1e5fc46d	ami-e04cde89	ebs	t1.micro	stopped		none	basic	brightclou

1 EC2 Instance selected.

EC2 Instance: examplecluster (i-907182f3)

ec2-50-16-44-106.compute-1.amazonaws.com

Description | Status Checks | Monitoring | Tags

AMI: brightheadnode-6.0-centos6-xen (ami-0c2f8a65)

Zone: us-east-1d

Type: t1.micro

Scheduled Events: No scheduled events

VPC ID: -

Source/Dest. Check:

Alarm Status: none

Security Groups: quicklaunch-2. [view rules](#)

State: running

Owner: 137677339600

Subnet ID: -

Virtualization: paravirtual

© 2008 - 2013, Amazon Web Services, Inc. or its affiliates. All rights reserved. [Privacy Policy](#) [Terms of Use](#) [Feedback](#)

Figure 2.6: The EC2 Instances List

System (Amazon machine infrastructure) and instance (instance running under the infrastructure) reachabilities are similarly shown under the neighboring “Status Checks” tab (figure 2.7).

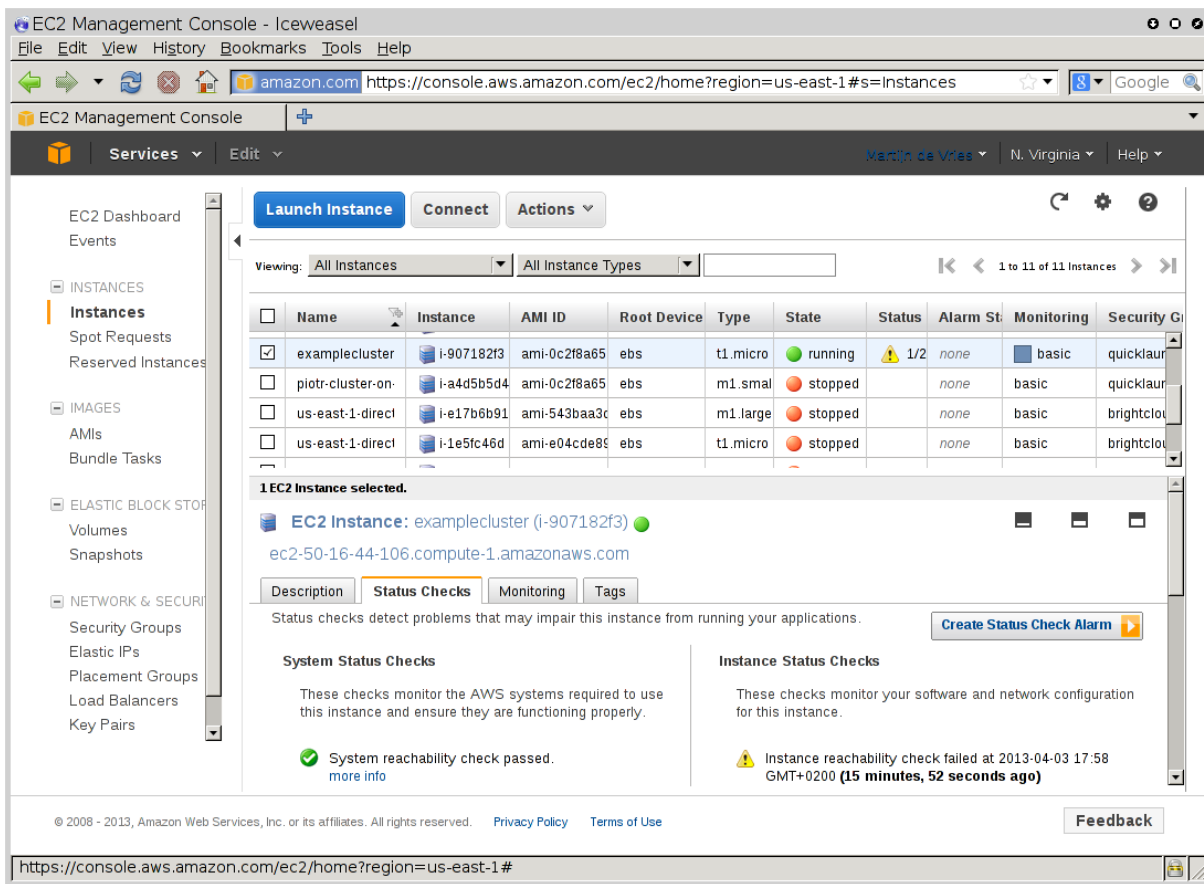


Figure 2.7: Reachability Status For An EC2 Instance

2.9.2 Acting On An Instance From The AWS EC2 Management Console

An instance can be marked by clicking on it. Clicking the Actions button near the top of the main center pane, or equivalently from a right-mouse-button click in the pane, brings up a menu of possible actions. These actions can be executed on the marked instance, and include the options to Start, Stop or Terminate the instance.

2.9.3 Connecting To An Instance From The AWS EC2 Management Console

A marked and running instance can have an SSH connection made to it.

As in the Azure case, for most users this means running `ssh` to the public IP address as suggested at the end of the AWS COD cluster creation run (section 2.6.2). This is assuming the private `ssh` key that was generated by the `ssh-keygen` command in the container is used for the `ssh` connection, which may mean that copying it out of the container is needed.

2.9.4 Viewing The Head Node Console

The head node takes about 2 minutes to start up. If, on following the instructions, an SSH connection cannot be made, then it can be worth checking the head node system log to check if the head node has started up correctly. The log is displayed on right-clicking on the "Actions" button, selecting the Instance Settings sub-menu, and selecting the "Get System Log" menu item (figure 2.8). A successful start of the system generates a log with a tail similar to that of figure 2.8.

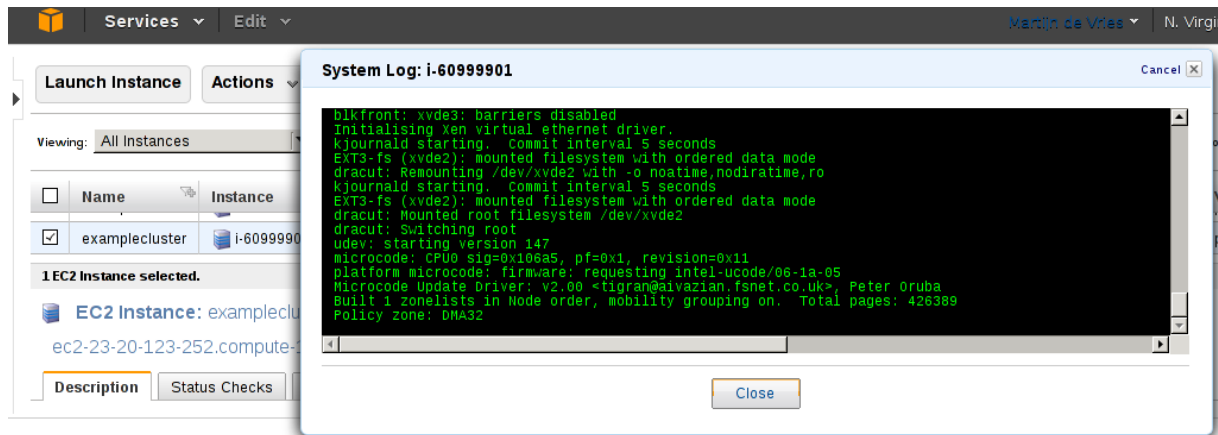


Figure 2.8: System Log Of The Checkboxed Instance

A screenshot of the instance is also possible by right-clicking on the selected instance, then following the clickpath Instance Settings→Get Instance Screenshot.

2.9.5 Security Group Configuration To Allow Access To The Head Node Via `cmsh` Or Bright View

Amazon provides a security group to each instance. By default, this configures network access so that only inbound SSH connections are allowed from outside the cloud. A new security group can be configured, or an existing one modified, using the Edit details button in figure 2.9. Security groups can also be accessed from the navigation menu on the left side of the EC2 Management Console.

COD With AWS: Access With Bright View:

The security group defined by Amazon for the head node can be modified by the administrator to allow remote connections to CMDaemon running on the head node (figure 2.9).

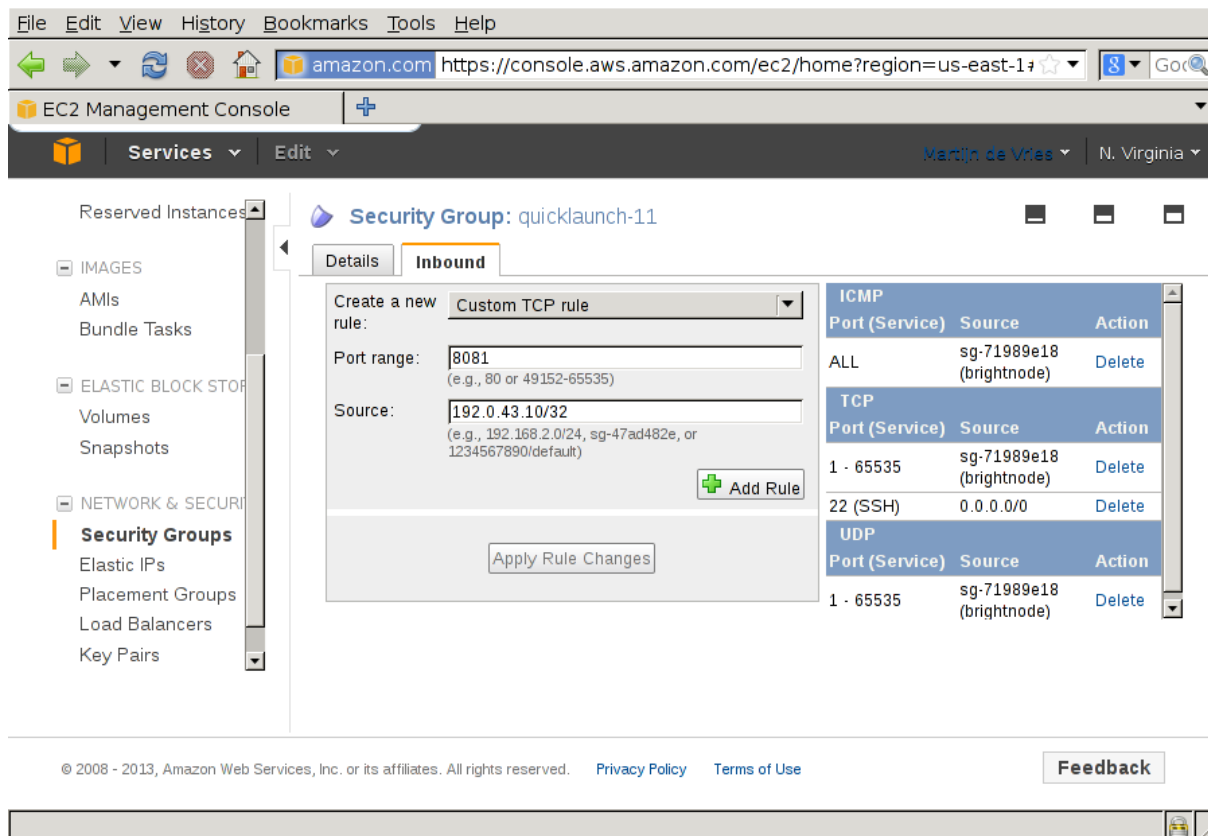


Figure 2.9: Security Group Network And Port Access Restriction

- To allow only a specific network block to access the instance, the network from which remote connections are allowed can be specified in CIDR format.
- By default, port 8081 is open on the head node to allow Bright View (section 2.4 of the *Administrator Manual*) to connect to the head node. This is because the Bright View back end, which is CMDaemon, communicates via port 8081.

COD With AWS: Access With A Local `cmsh`:

The security group created by Amazon by default already allows inbound SSH connections from outside the cloud to the instance running in the cloud, even if the incoming port 8081 is blocked. Launching a `cmsh` session within an SSH connection running to the head node is therefore possible, and should work without lag.

2.10 Using The Azure Dashboard

For Azure, as is the case for AWS, the cluster is normally expected to be managed via Bright View or `cmsh`. Sometimes when carrying out some special configurations, there may be a need to manage the cluster objects directly via the portal at <https://portal.azure.com>. This requires an Azure login and password, which opens up the Azure dashboard, and allows the objects to be viewed and managed.

For example, the virtual machines of the COD can be viewed and managed via the Virtual machines resource (figure 2.10), and the virtual networks associated with the COD nodes can similarly be viewed and managed via Virtual networks resource.

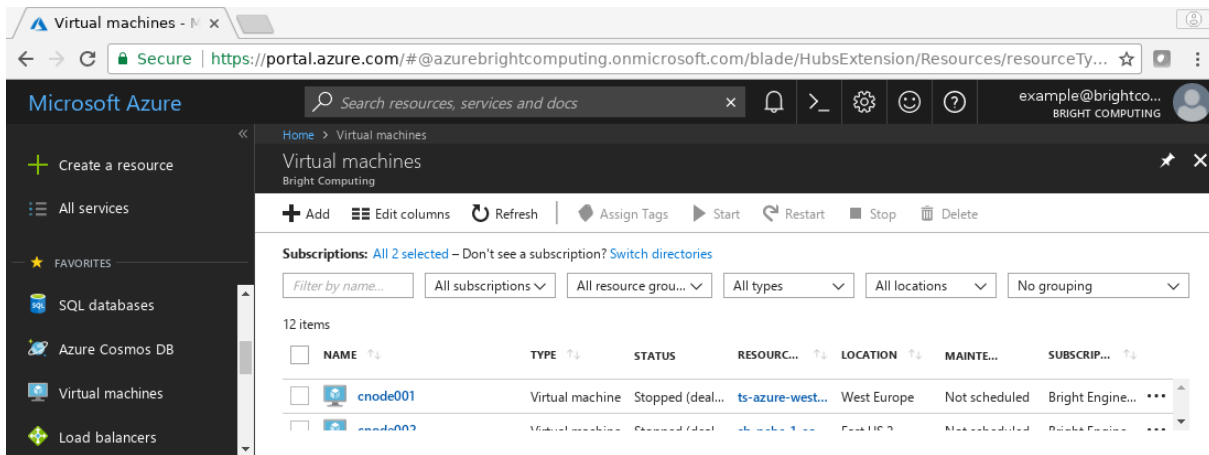


Figure 2.10: Viewing Virtual Machines In A Cluster On Demand In Azure

Some items that may be useful when accessing the portal:

- An overview of the COD head node is possible via the clickpath:
Home→Virtual machines→<head node>→Overview
- Boot process diagnostics can be viewed using the clickpath:
Home→Virtual machines→<head node>→Boot diagnostics→Serial log
- A serial console can be accessed the clickpath:
Home→Virtual machines→<head node>→Serial console
The file `/etc/ssh/sshd_config` should have the parameter `ChallengeResponseAuthentication` set to `yes`, and the service restarted, for serial console login to work.

2.11 COD: Cloud Node Start-up

Cloud nodes must be explicitly started up. This is done by powering them up, assuming the associated cloud node objects exist. The cloud node objects are typically specified in the `cm-cod-aws` or `cm-cod-azure` script which is run in the Docker instance. In the preceding example the cloud node objects are `cnode001` and `cnode002`.

However, more cloud node objects can be created if needed after the scripts have run. The maximum number that may be created is set by the license purchased.

Large numbers of cloud node objects can be created with the cluster manager as follows:

- In Bright View they can conveniently be cloned via the clickpath:

Devices→Cloud Nodes→<cloud node>↓Clone→<number>

- In `cmsh` a large number of cloud node objects can conveniently be created with the “`foreach --clone`” command instead, as described in section 4.2.

After creation, an individual cloud node, <cloud node>, can be powered up from within Bright View via the clickpath:

Devices→Cloud Nodes→<cloud node>↓Power→On

As with regular non-cloud nodes, cloud nodes can also be powered up from within the device mode of cmsh. The initial power status (section 4.1 of the *Administrator Manual*) of cloud nodes is FAILED, because they cannot be communicated with. As they start up, their power status changes to OFF, and then to ON. Some time after that they are connected to the cluster and ready for use. The device status (as opposed to the power status) remains DOWN until it is ready for use, at which point it switches to UP:

Example

```
[head1->device]% power status
cloud ..... [ FAILED ] cnode001 (Cloud instance ID not set)
cloud ..... [ FAILED ] cnode002 (Cloud instance ID not set)
No power control ..... [ UNKNOWN ] head1
[head1->device]% power on -n cnode001
cloud ..... [ ON ] cnode001
[head1->device]% power status
cloud ..... [ OFF ] cnode001 (pending)
cloud ..... [ FAILED ] cnode002 (Cloud instance ID not set)
No power control ..... [ UNKNOWN ] head1
[head1->device]% power on -n cnode002
cloud ..... [ ON ] cnode002
[head1->device]% power status
cloud ..... [ ON ] cnode001 (running)
cloud ..... [ OFF ] cnode002 (pending)
No power control ..... [ UNKNOWN ] head1
[head1->device]% !ping -c1 cnode001
ping: unknown host cnode001
[head1->device]% status
head1 ..... [ UP ]
node001 ..... [ UP ]
node002 ..... [ DOWN ]
[head1->device]% !ping -c1 cnode001
PING cnode001.cm.cluster (10.234.226.155) 56(84) bytes of data.
64 bytes from cnode001.cm.cluster (10.234.226.155): icmp_seq=1 ttl=63 t\
ime=3.94 ms
```

Multiple cloud nodes can be powered up at a time in cmsh with the “power on” command using ranges and other options (section 4.2.3 of the *Administrator Manual*).

2.11.1 COD: IP Addresses In The Cloud

- The IP addresses assigned to cloud nodes on powering them up are arbitrarily scattered over the 10.0.0.0/8 network
 - No pattern should therefore be relied upon in the addressing scheme of cloud nodes
- Shutting down and starting up head and regular cloud nodes can cause their IP address to change.
 - However, the cluster manager managing the nodes means that a regular cloud node re-establishes its connection to the cluster when it comes up, and will have the same node name as before.

2.12 COD With AWS: Optimizing AWS For High Performance Computing (HPC)

Optimization of cloud nodes for HPC in AWS is discussed in section 3.5.

2.13 COD And High Availability

2.13.1 Introduction

A COD head node, like a physical on-premises head node, can crash or somehow become non-operational. The possible reasons for this are pretty much the same in the case of a COD head node or a physical head node. The solution to reduce downtime due to these reasons is also the same: that is, to provide high availability (HA).

HA has always been available as a feature for the cluster manager running on on-premises clusters (Chapter 17 of the *Administrator Manual*). Since 9.2, HA is also available for edge directors (section 2.1.1 of the *Edge Manual*) and for COD (this section 2.13).

The cluster administrator should have some familiarity with how HA for physical head nodes is implemented (Chapter 17 of the *Administrator Manual*) before implementing it on a COD. HA on COD is implemented very similarly to on a physical cluster, with a passive COD head node that takes over from a failing active COD head node.

COD with HA is deployed in a similar manner for AWS, Azure, and OCI.

The COD head nodes use shared storage for `cm/shared` and `/home`, just like the physical head nodes do. For COD HA head nodes, the shared storage needs to be a special filesystem in the cloud, just like the physical head HA nodes use a special filesystem.

Two shared IP addresses are also allocated—public and private. These shared IP addresses always point to the active head node, and are analogous to the external and internal IP address in the case of the physical head HA nodes (figure 17.1 of the *Administrator Manual*).

2.13.2 Deployment

COD HA Deployment Overview

A COD HA cluster is created by first creating a standard (that is: non-HA) COD cluster using `cm-cod-aws` (section 2.4), `cm-cod-azure` (section 2.5), or `cm-cod-oci` (section 2.7).

For AWS the following may be run:

Example

```
[root@bright92 ~]# cm-cod-aws cluster create --version 9.2 --name bright92-ha
```

The procedures for Azure (with `cm-cod-azure`) and OCI (with `cm-cod-oci`) are very similar.

The standard COD cluster, which here has arbitrarily been given the name `bright92-ha` in advance, can now be converted to an HA COD cluster.

For AWS, after the deployment of the converted cluster is complete, the original head node automatically gets the suffix `-a`, and the new head node that is brought up gets suffix `-b`.

Configuration For Deployment

The conversion is done by running the `cm-cloud-ha-setup` wizard, which starts up a TUI for configuring the HA deployment. The `Deploy` item in the main menu starts the configuration (figure 2.11):

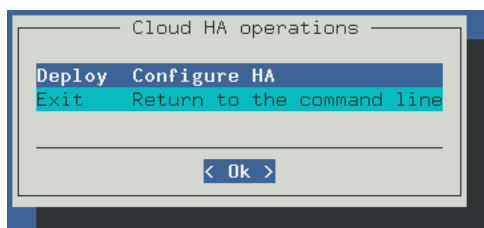


Figure 2.11: Cluster On Demand TUI Wizard: Deploy Selection

The deployment process has the cluster administrator:

- provide the product key, so that the MAC address of the secondary COD head node can be added to the license (figure 2.12):

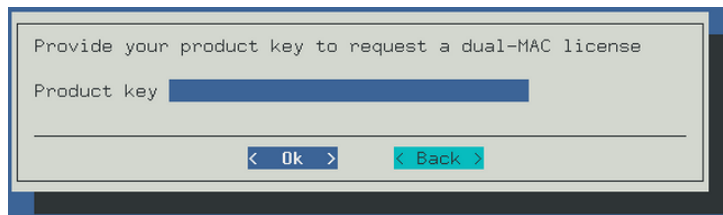


Figure 2.12: Cluster On Demand TUI Wizard: Deploy Selection

- decide via a screen on whether to auto-allocate a private IP address to be shared between the head nodes, or whether to specify the private address
- if specifying the private address is chosen, then the private IP address can be set (figure 2.13):

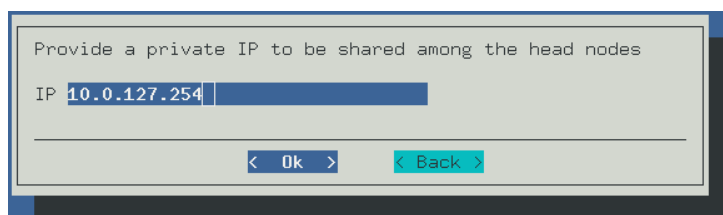


Figure 2.13: Cluster On Demand TUI Wizard: Private IP Allocation

- decide on whether to deploy shared storage
 - If yes is selected, then the shared storage is created by the wizard creating an AWS EFS instance and sharing the /home and /cm/shared partitions among the cluster nodes via NFS
 - If no is selected, then the shared storage should be specified manually, or a preconfigured storage can be used
- save the configuration and deploy the conversion (figure 2.14):

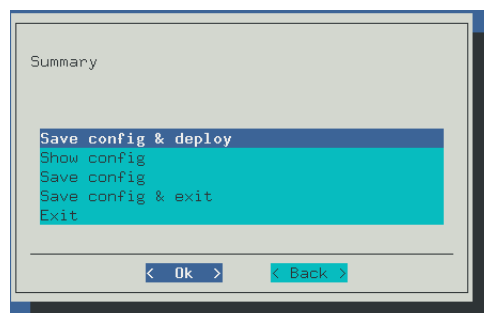


Figure 2.14: Cluster On Demand TUI Wizard: Saving The Configuration, As Part Of Deployment

Conversion To HA

The deployment that converts the cluster to HA then takes place by bringing up a second HA node in the cloud. Deployment typically takes about 50 minutes. The progress can be followed on the console, and in the logs `/var/log/cmha.log` and `/var/log/failoversetup.log`.

If the deployment is not yet complete, then the `cmha setup` command indicates that with, for example:

```
root@bright92-ha-a:~# cmha status
No HA status available.
Unable to get passive head node, is failover setup complete?
```

or later on, during the Finalizing HA stage, with:

```
root@bright92-ha-a:~# cmha status
Unable to connect to cluster
Internal error, unable to connect to cluster: [Errno 111] Connection refused
Internal error, unable to connect at local cluster: [Errno 111] Connection refused
```

2.13.3 COD HA Checks And Recovery

COD HA Head Status Check

Once the deployment via `cm-cloud-ha-setup` is complete, the HA status of the cluster can be checked:

```
[root@bright92-ha-b ~]# cmha status
Node Status: running in active mode
```

```
bright92-ha-b* -> bright92-ha-a
mysql          [ OK ]
ping           [ OK ]
status         [ OK ]
```

```
bright92-ha-a -> bright92-ha-b*
mysql          [ OK ]
ping           [ OK ]
status         [ OK ]
```

```
[root@bright92 ~]#
```

COD Failover Session

If the active head node fails, then the passive head node is activated automatically by reassigning the shared public and private IP addresses to the passive head node, and marking the passive head node as active.

This process is called failover and can be triggered automatically or manually (section 17.1.7 of the *Administrator Manual*).

A manual failover can be carried out with `cmha makeactive`:

```
[root@bright92-ha-b ~]# cmha makeactive

=====
This is the passive head node. Please confirm that this node should become
the active head node. After this operation is complete, the HA status of
the head nodes will be as follows:

bright92-ha-b will become active head node (current state: passive)
bright92-ha-a will become passive head node (current state: active)
=====

Continue(c)/Exit(e)? c

Initiating failover..... [ OK ]

bright92-ha-b is now active head node, makeactive successful

[root@bright92-ha-b ~]# cmha status
```

```
Node Status: running in active mode
```

```
bright92-ha-b* -> bright92-ha-a
mysql          [ OK ]
ping           [ OK ]
status         [ OK ]
```

```
bright92-ha-a -> bright92-ha-b*
mysql          [ OK ]
ping           [ OK ]
status         [ OK ]
```

```
[root@bright92-ha-b ~]#
```

Managing HA and manual failover is described in more detail in section 17.4 of the *Administrator Manual*.

2.13.4 Recovery Of The Passive COD Head

Unlike with physical HA head nodes, the recovery of a passive head node in the cloud is automated.

Recovery can be carried out by running `cm-cloud-ha-setup` wizard, and selecting the Recovery item in the main menu (figure 2.15):



Figure 2.15: Cluster On Demand TUI Wizard: Recovery Selection

The product key is needed to license the new head node (figure 2.16):

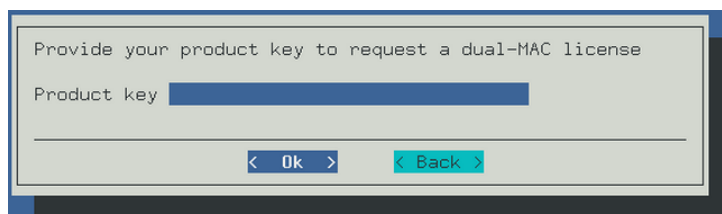


Figure 2.16: Cluster On Demand TUI Wizard: Product Key Selection

The recovery process warns that all resources associated with the old head node are to be deleted (virtual machine, disks, IP addresses) (figure 2.17):

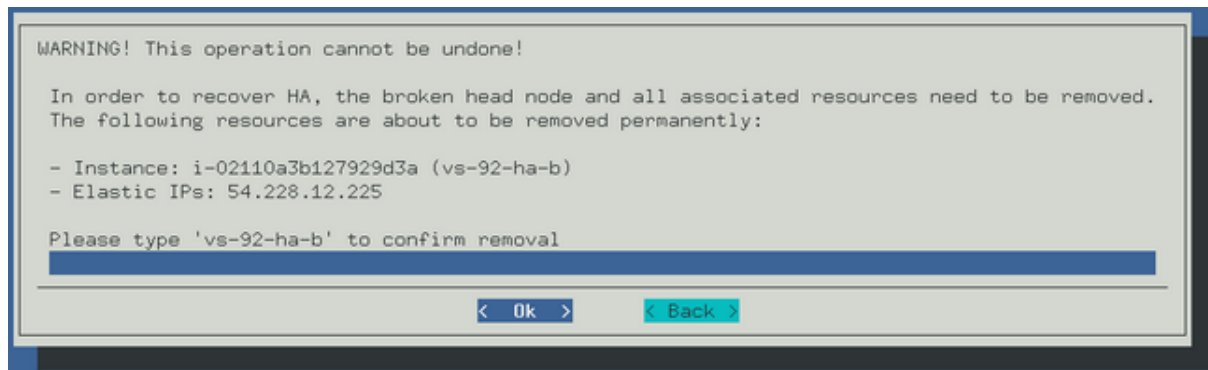


Figure 2.17: Cluster On Demand TUI Wizard: Cleanup

It then clones the active head node, configuring the clone to become the new passive head node, and the cluster then resumes normal HA operation.

When recovery is completed, the new passive head node elastic IP for the cluster called *<cluster_name>* can be obtained by running:

```
cm-cod-aws cluster list [<cluster_name>]
```

The `cm-cod-aws` command in the preceding text can be replaced by `cm-cod-azure` or `cm-cod-oci` in order to get a similar listing for COD Azure or COD OCI clusters.

The output from `cmha status` can be used to confirm recovery is complete.

2.13.5 COD HA Deletion

The COD clusters for AWS listing might show something like (some output truncated):

```
[root@bright92 ~]# cm-cod-aws cluster list
20:10:08:      INFO: Listing clusters in region eu-west-1
```

Cluster Name	VPC ID	Head node ID	Cluster IP	State	Type
bright92-ha	vpc-01d547e708c9eec9c	i-0224f8b38fe0b8658 (A)	54.155.161.116 (A)	running	t3.medium
		i-0f906293daa687d20 (B)	52.213.160.8 (B)		
			52.211.148.112 (HA)		

The COD cluster can be specified for removal with the `delete` option. For example, with AWS:

Example

```
[root@bright92 ~]# cm-cod-aws cluster delete bright92-ha
20:11:43:  WARNING: Some clusters have a Cloud HA EFS storage. It will also be deleted
20:11:43:      INFO: This will destroy resources associated with clusters: 'bright92-ha'.
                Would you like to continue?
20:11:43:      INFO: Proceed? [yes/no]
yes
20:11:53:      INFO: Deleting EFS fs-0dee13aa1d1a2d337...
20:12:16:      INFO: Finding instances for cluster 'bright92-ha'...
20:12:16:      INFO: Issuing termination requests for 2 instances for cluster 'bright92-ha'...
20:12:17:      INFO: Waiting until instances of cluster 'bright92-ha' are terminated...
...
20:16:40:      INFO: Done destroying cluster 'bright92-ha' resources in VPC 'on-demand bright92-ha'
```

3

Cluster Extension Cloudbursting

Cluster Extension cloudbursting (“hybrid” cloudbursting) in NVIDIA Bright Cluster Manager is the case when a cloud service provider is used to provide nodes that are in the cloud as an extension to the number of regular nodes in a cluster. Thus, the head node in a Cluster Extension configuration is always outside the cloud, and there may be some non-cloud-extension regular nodes that are outside the cloud too.

Cluster Extension cloudbursting can burst into a cloud that is running within:

- AWS (CX-AWS). This is described in Chapters 3 and 4 of the *Cloudbursting Manual*.
- Azure (CX-Azure). This is described in Chapter 5 of the *Cloudbursting Manual*.

Requirements

Cluster Extension cloudbursting requires:

- **An activated cluster license.**

One does not simply cloudburst right away in a Cluster Extension configuration. The license must first be made active, or the attempt will fail.

A check on the state of the license can be carried out with:

Example

```
[root@bright92 ~]# cmsh -c "main; licenseinfo"
License Information
-----
Licensee                /C=US/ST=NY/L=WS/O=Bright
                        Mordor/OU=Mt. Doom/CN=Bright 9.2 Cluster
Serial Number           1210883
Start Time              Mon Oct 16 01:00:00 2017
End Time                Fri Dec 31 23:59:00 2038
Version                 7.0 and above
Edition                 Advanced
Type                    Commercial
Licensed Nodes          100
Pay-per-use Nodes       yes
Licensed nodes with accelerators  Max Accelerator Nodes      80
Node Count              6
Accelerator Node Count  6
Accounting & Reporting  0
Allow edge sites        Yes
MAC Address / Cloud ID  FA:16:3E:91:14:86
```

The value of End Time, Pre-paid Nodes, and Pay-per-use Nodes in the preceding license should be checked. Pre-paid nodes are nodes that may be started without incurring any additional charges. Pay-per-use nodes (section 7.5) are nodes that incur additional charges when started.

Pre-paid can be on-premises or off-premises. Pay-per-use nodes are off-premises nodes. That is, both kinds can be used for cluster extension cloudbursting, which is off-premises.

If activation is indeed needed, then simply running the `request-license` command with the product key should in most cases provide activation. Further details on activating the license are given in Chapter 4 of the *Installation Manual*.

- **An Amazon account**, if the cloud provider is Amazon.
- **An Azure account**, if the cloud provider is Microsoft Azure.
- **An open UDP port**.

By default, this is port 1194. It is used for the OpenVPN connection from the head node to the cloud and back. To use TCP, and/or ports other than 1194, the Bright Computing knowledgebase at <http://kb.brightcomputing.com> can be consulted using the keywords “openvpn port”.

Outbound SSH access from the head node is also useful, but not strictly required.

By default, the Shorewall firewall as provided by the cluster manager on the head node is configured to allow all outbound connections, but other firewalls may need to be considered too.

- **A special proxy environment configuration setting**, if an HTTP proxy is used to access the AWS or Azure APIs.

The proxy environment configuration is carried out using the `ScriptEnvironment` directive (page 829 of the *Administrator Manual*), which is a `CMDaemon` directive that can be set and activated (page 811 of the *Administrator Manual*).

For example, if the proxy host is `my.proxy` and accepting connections on port 8080 with a username `my` and password `pass`, then the setting can be specified as:

```
ScriptEnvironment = { "http_proxy=http://my:pass@my.proxy:8080", \
  "https_proxy=http://my:pass@my.proxy:8080", "ftp_proxy=http://my:pass@my.proxy:8080" }
```

Steps

Cluster Extension cloudbursting uses a *cloud director*. A cloud director is a specially connected cloud node used to manage regular cloud nodes, and is described more thoroughly in section 3.2. Assuming the administrator has ownership of a cloud provider account, the following steps can be followed to launch Cluster Extension cloud nodes:

1. The cloud provider is logged into from Bright View, and a cloud director is configured (section 3.1).
2. The cloud director is started up (section 3.2).
3. The cloud nodes are provisioned from the cloud director (section 3.3).

The cloud nodes then become available for general use by the cluster.

Cluster Extension Cloudbursting With A Hardware VPN

The cluster manager recommends, and provides, OpenVPN by default for Cluster Extension cloudbursting VPN connectivity. If there is a wish to use a hardware VPN, for example if there is an existing hardware VPN network already in use at the deployment site, then the cluster manager can optionally be configured to work with the hardware VPN using the cluster extension configuration wizard. The wizard can also guide the cluster administrator on VPN configuration for AWS (section 4.5) or Azure (section 5.6).

Cluster Extension Cloudbursting Logging

All AWS logging goes to the CMDaemon logs in `/var/log/cmdaemon`. The `CLOUD` tag in the log is used to indicate cloud-related operations.

3.1 Cluster Extension With AWS: The Bright View Cluster Extension Wizard

Cluster Extension with the Bright View cluster extension wizard is described in sections 3.1, 3.2, and 3.3.

Cluster Extension with Azure is described in Chapter 5.

The Amazon cloud service can be configured for Cluster Extension from Bright View. This can be done via the URL `https://<head node address>:8081/bright-view/`, and then selecting the clickpath `Cloud→AWS→AWS Wizard`. A screen introducing the AWS Wizard is then displayed.

The wizard goes through the following stages:

1. Introduction (section 3.1.1)
2. AWS Credentials (section 3.1.2)
3. Select Regions (section 3.1.3)
4. Summary & Deployment (section 3.1.7)
5. Deploy (section 3.1.8)

3.1.1 Introduction

The first screen displayed by the wizard is the introduction screen (figure 3.1), which reminds the administrator about the prerequisites for cloudbursting.

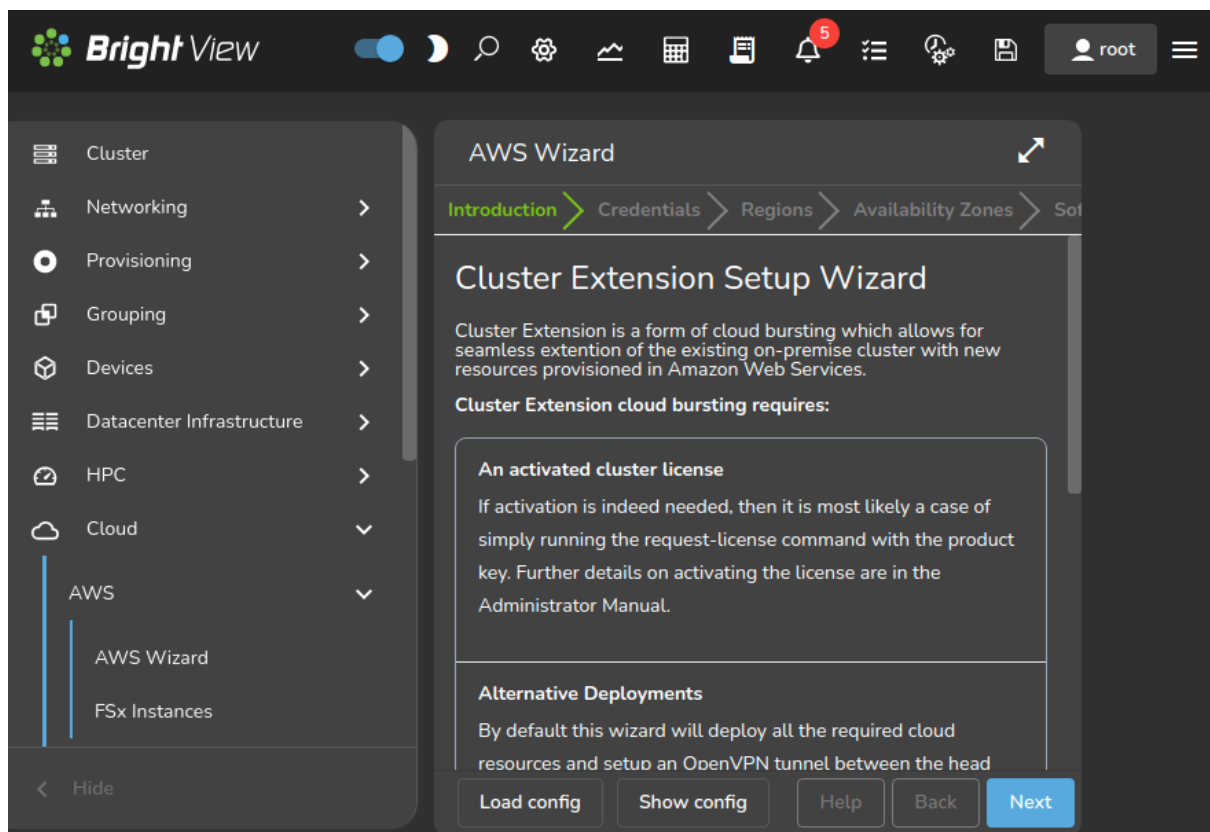


Figure 3.1: Introduction Page For Cluster Extension With Bright View

During the wizard session:

- The `Load config` button allows the wizard to load a previously-saved YAML configuration text file from a file location accessible by the browser.
- The `Show config` button allows the wizard to show a YAML configuration text file. The file can be saved to a location by the browser, by using a `Save` button that is available when the configuration is shown.

Saving the configuration at the start and end of a wizard run is usually convenient for an administrator who wishes to record the changes that are being made.

3.1.2 AWS Credentials

The `Next` button brings up the credentials page, if the credentials for the cluster extension cloudburst are not yet known to CMDaemon (figure 3.2).

Figure 3.2: AWS Key Configuration For Cluster Extension With Bright View

This asks for:

- `Provider Name`: This can be any user-defined value. If using Amazon, it would be sensible to just put in `amazon`
- `AWS Access key ID`: The AWS Access key. Typically a string that is a mixture of upper case letters and numbers.
- `AWS Secret key`: The AWS secret key. Typically a longer string made up of alphanumeric characters.

In the case of Amazon, the information is obtainable after signing up for Amazon Web Services (AWS) at https://console.aws.amazon.com/iam/home?#security_credential.

The `Validate` button validates the credentials at this point of the configuration when clicked, instead of waiting until the actual deployment. Clicking the `Next` button submits the details of this screen, and inputs for the next screen are then retrieved from Amazon.

3.1.3 Select Regions

If all goes well, the next screen (figure 3.3) displays the major region selection options for the Amazon cloud service.

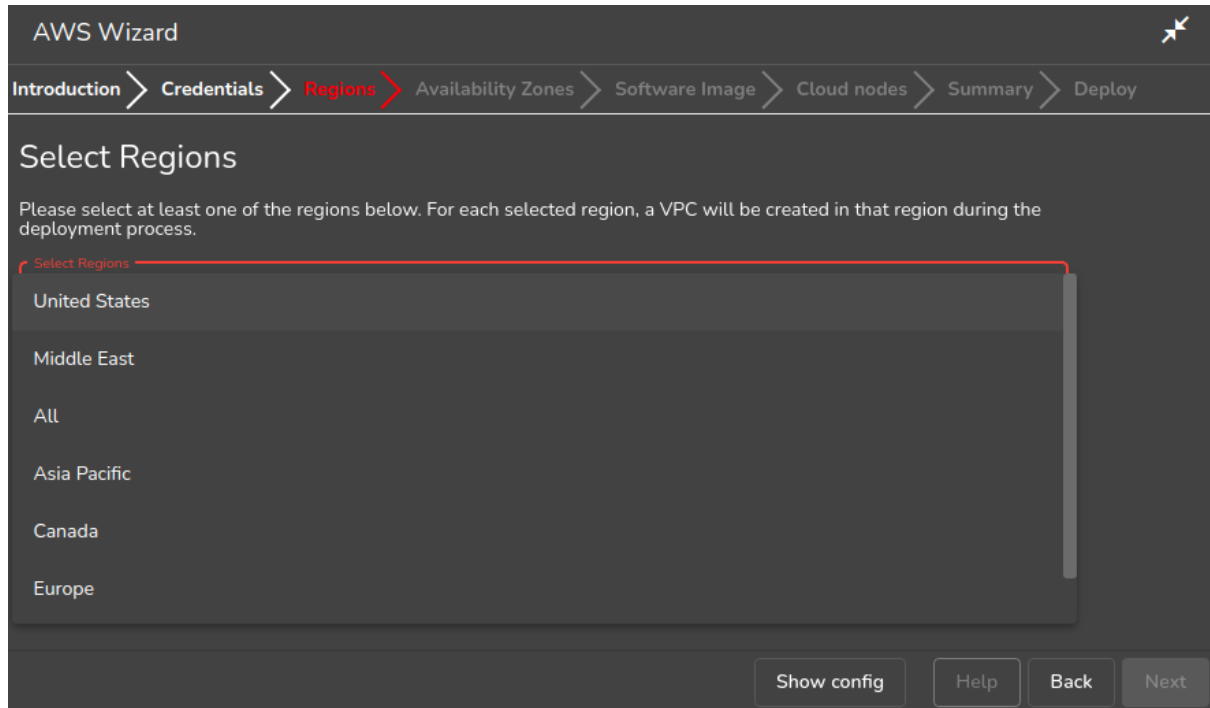


Figure 3.3: Selecting Regions With The Cluster Extension Wizard With Bright View

The regions are designated by codes, for example `us-east-1`, `eu-west-1`, and so on. The first two letters associated with the region imply a major region as follows:

- `af`: Africa
- `ap`: Asia Pacific
- `ca`: Canada
- `cn`: China
- `eu`: Europe
- `me`: Middle East
- `sa`: South America
- `us`: United States

In addition, the special `us-gov` prefix designates a region that helps customers comply with US government regulations.

Similarly, European data regulations may, for example, mean that data should be processed only within an eu region.

Other than legislative considerations, choosing capacity from a region that is geographically closer is often sensible for avoiding lag with certain applications. On the other hand, using off-peak capacity from a geographically distant location may make more sense if it is cheaper.

Further details on regions can be found at <http://docs.aws.amazon.com/AWSEC2/latest/UserGuide/using-regions-availability-zones.html>.

After the administrator has selected the regions that are to be used in deployment, the Next button can be clicked, to bring up the next screen.

3.1.4 Select Availability Zones

The Select Availability Zones screen (figure 3.4) allows subnets in the region to be specified for the private and public subnets of the cluster extension.

AWS Wizard

Introduction > Credentials > Regions > **Availability Zones** > Software Image > Cloud nodes > Summary > Deploy

Select Availability Zones

Please select at least one availability zone for each subnet of a specific region.

REGION	\${VPC.NAME}-PUBLIC SUBNET	\${VPC.NAME}-PRIVATE SUBNET
eu-west-1	eu-west-1a	eu-west-1a eu-west-1b eu-west-1c

Show config Help Back Next

Figure 3.4: Selecting Availability Zones With The Cluster Extension Wizard With Bright View

3.1.5 Select Software Images

Next, the Select Software Images screen (figure 3.5) lets the administrator select possible cloud node software images to be placed on the cloud director node. These can then be provisioned from the director to the cloud nodes. A default cloud node image is selected from one of the possible cloud node software images.

AWS Wizard

Introduction > Credentials > Regions > Availability Zones > **Software Image** > Cloud nodes > Summary > Deploy

Select Software Images

Please select at least one software image to be provisioned to the cloud director.

- /cm/images/default-image ☒

software image for cloud nodes

/cm/images/default-image

Show config Help Back Next

Figure 3.5: Selecting Images For The Cloud Director Cloud Nodes With The Cluster Extension Wizard With Bright View

3.1.6 Select Cloud Types

Next, the default cloud director type and default cloud node type can be selected (figure 3.6) . The type specifies the virtual hardware type.

AWS Wizard

Introduction > Credentials > Regions > Availability Zones > Software Image > **Cloud nodes** > Summary > Deploy

Cloud Nodes

Default cloud director type

m3.medium

Default cloud node type

m3.medium

Initial number of cloud nodes to define (more can be defined at any time)

3

Show config Help Back Next

Figure 3.6: Selecting Cloud Types With The Cluster Extension Wizard With Bright View

3.1.7 Summary & Deployment

The next screen is a Summary screen (figure 3.7).

AWS Wizard

Introduction > Credentials > Regions > Availability Zones > Software Image > Cloud nodes > **Summary** > Deploy

Summary

Overview

Provider	aws
Default region	eu-west-1
Default cloud director type	m3.medium
Default cloud node type	m3.medium
VPC regions	eu-west-1

Automatically deploying the configuration will take several minutes, during which a log window will be shown displaying the progress of the deployment.

☒ Ready for deployment

Press 'Deploy' to start deployment.

Show config Help Back Deploy

Figure 3.7: Summary Screen For The Cluster Extension Wizard With Bright View

It summarizes the selections that have been made, and lets the administrator review them. The selections can be changed, if needed, by going back to the previous screens, by directly clicking on the values. Otherwise, on clicking the Deploy button, the configuration is deployed.

3.1.8 Deploy

During configuration deployment, a progress meter indicates what is happening as the configuration is processed. Logs showing the more detailed steps can also be viewed. At the end of processing, the display indicates with the Deployed with success message that the cluster has been extended successfully (figure 3.8).

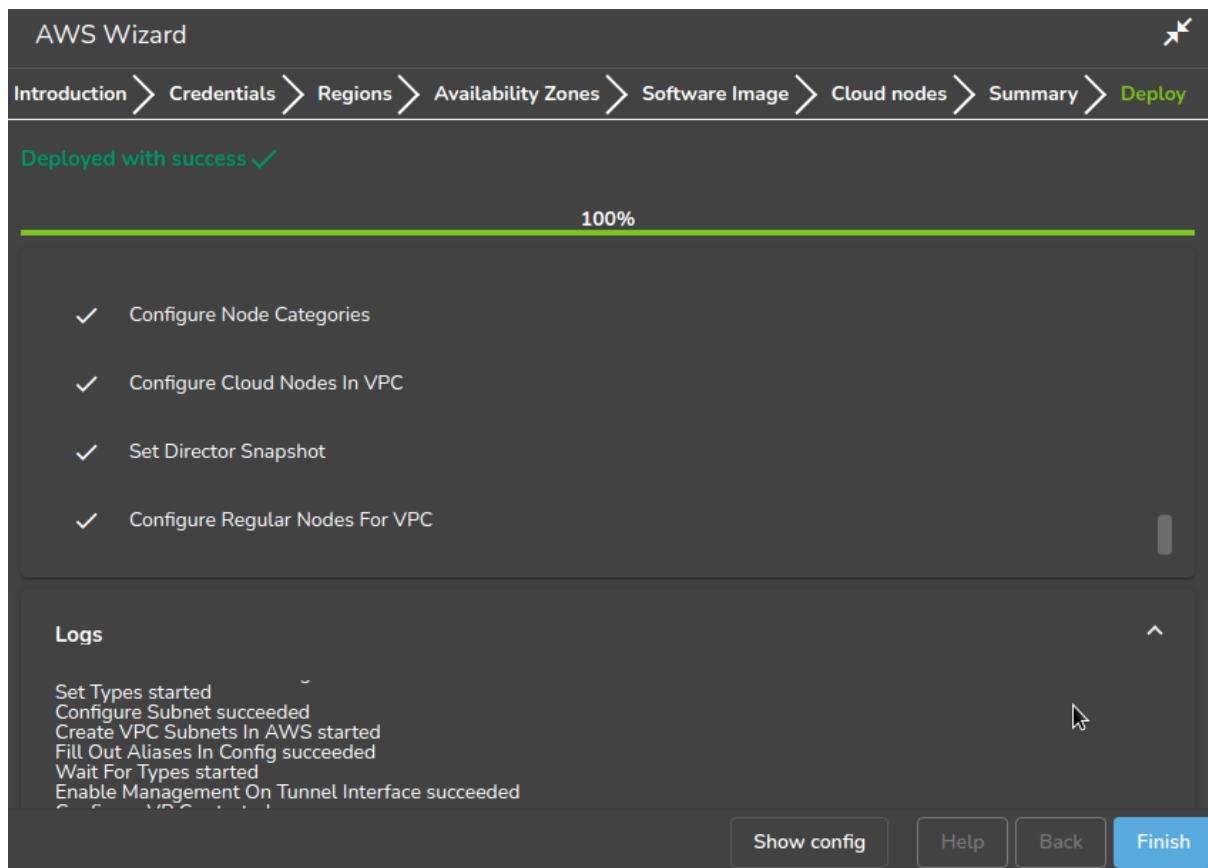


Figure 3.8: Cluster Extension Configuration Processing With Bright View

No nodes are activated yet within the cloud provider service. To start them up, the components of the cloud provider service must be started up by

- powering up the cloud directors (section 3.2)
- powering on the cloud nodes after the cloud directors are up. Often this involves creating new cloud nodes (section 3.3).

3.2 Cluster Extension With AWS: Cloud Director Startup From Scratch

The cloud director can take some time to start up the first time when it is *installing from scratch*. The bottleneck is usually due to several provisioning stages, where the bandwidth between the head node and the cloud director means that the provisioning runs typically take tens of minutes to complete. The progress of the cloud director can be followed in the Bright View event log viewer (section 12.2.11 of the *Administrator Manual*), or they can be followed in an open `cmsh` session, as the events are sent to the `cmsh` session.

The bottleneck is one of the reasons why the cloud director is put in the cloud in the first place: nodes are provisioned from a cloud director in the cloud faster than from a head node outside the cloud.

The bottleneck of provisioning from the head node to the cloud director is an issue only the first time around. The next time the cloud director powers up, and assuming persistent storage is used—as is the default—the cloud director runs through the provisioning stages much faster, and completes within a few minutes.

The reason why powering up after the first time is faster is because the image that is to power up is already in the cloud. A similar principle—of relying on data already available with the cloud provider—

can be used as a technique to make first time startup even faster. The technique is to have a pre-built image—a snapshot—of the cloud director stored already with the cloud provider. The first-time startup of a cloud director based on a snapshot restoration is discussed in section 3.4.

The remainder of this section is about starting up a cloud director from scratch—that is, a first time start, and without a pre-built image.

To recap: by default, a cloud director object is created during a run of the Cluster Extension wizard (section 3.1).

There can be only one cloud director active per region for a cluster. Because a cloud director also has properties specific to the region within which it directs nodes, it means that cloud directors can only be created from scratch, via cluster extension.

Once a cloud director object has been made in CMDaemon, then the cloud director is ready to be started up. In Bright View the cloud director can be started by powering it up from its node settings, just like a regular node. If the cloud director node is not visible, then a browser refresh should clear up the cache so that it becomes visible. For the cloud director a clickpath to power it up is:

Devices→Cloud Nodes→Cloud director→↓Power→On

As indicated earlier on, the cloud director acts as a helper instance in the cloud. It provides some of the functions of the head node within the cloud, in order to speed up communications and ensure greater resource efficiency. Amongst the functions the cloud director provides are:

- Cloud nodes provisioning
- Exporting a copy of the shared directory /cm/shared to the cloud nodes so that they can mount it
- Providing routing services using an OpenVPN server. While cloud nodes within a region communicate directly with each other, cloud nodes in one region use the OpenVPN server of their cloud director to communicate with the other cloud regions and to communicate with the head node of the cluster.

Cloud directors are not regular nodes, so they have their own category, `cloud-director`, into which they are placed by default.

The cloud-related properties of the cloud director can be viewed and edited via the clickpath:

Devices→Cloud Nodes→Cloud director→Edit

3.2.1 Setting The Cloud Director Disk Storage Device Type

Amazon provides two kinds of storage types as part of EC2:

1. **Instance storage**, using so-called ephemeral devices. Ephemeral means that the device is temporary, and means that whatever is placed on it is lost if the instance is stopped, terminated, or if the underlying disk drive fails.

Some instances have ephemeral storage associated with the instance type. For example, at the time of writing (May 2017), the `m3.medium` type of instance has 4GB of SSD storage associated with it.

Details on instance storage can be found at <http://docs.aws.amazon.com/AWSEC2/latest/UserGuide/InstanceStorage.html#instance-store-volumes>.

2. **Elastic Block Storage (EBS) volumes**: EBS is a persistent, reliable, and highly available storage. Normally, EBS is suggested for cloud director and cloud node use. The reasons for this include:

- it can be provided to all nodes in the same availability zone
- unlike instance storage, EBS remains available for use when an instance using it is stopped or terminated.

- instance storage is not available for many instance types such as t2.micro, t2.small, c4.large.

Using The Ephemeral Device As The Drive For The Cloud Director:

Since the cloud director instance type is essential, and contains so much data, it is rare to use an ephemeral device for its storage.

However, if for some reason the administrator would like to avoid using EBS, and use the instance storage, then this can be done by removing the default EBS volume suggestion for the cloud director provided by the cluster manager. When doing this, the ephemeral device that is used as the replacement must be renamed. It must take over the name that the EBS volume device had before it was removed.

- In Bright View, this can be done in the EC2 Storages window, which for a cloud director <cloud director hostname> can be viewed and modified via the clickpath:

```
Devices→Cloud Nodes→<cloud director hostname>→Edit→Settings→Cloud settings→
STORAGE→Storage→<storage type>→Edit
```

- In cmsh, this can be done in device mode, by going into the cloudsettings submode for the cloud director, and then going a level deeper into the storage submode. Within the storage submode, the list command shows the values of the storage devices associated with the cloud director. The values can be modified as required with the usual object commands. The set command can be used to modify the values.

Example

```
[bright92]% device use us-east-1-director
[bright92->device[us-east-1-director]]% cloudsettings
[bright92->device[us-east-1-director]->cloudsettings]% storage
[bright92->...->cloudsettings->storage]% list
Type      Name (key)  Drive  Size  Volume ID
-----
ebs        ebs         sdb    42GB
ephemeral  ephemeral0  sdc    0B    ephemeral0
[bright92->...->cloudsettings->storage]% remove ebs
[bright92->...->cloudsettings*->storage*]% set ephemeral0 drive sdb
[bright92->...->cloudsettings*->storage*]% list
Type      Name (key)  Drive  Size  Volume ID
-----
ephemeral  ephemeral0  sdb    0B    ephemeral0
[bright92->...->cloudsettings*->storage*]% commit
```

3.2.2 Setting The Cloud Director Disk Size

The disk size for the cloud director can be set in Bright View using the EC2 Storages window (section 3.2.1).

By default, an EBS volume size of 42GB is suggested. This is as for a standard node layout (section D.3 of the *Administrator Manual*), and no use is then made of the ephemeral device.

42GB on its own is unlikely to be enough for most purposes other than running basic hello world tests. In actual use, the most important considerations are likely to be that the cloud director should have enough space for:

- the user home directories (under /home/)
- the cluster manager shared directory contents, (under /cm/shared/)

- the software image directories (under /cm/images/)

The cluster administrator should therefore properly consider the allocation of space, and decide if the disk layout should be modified. An example of how to access the disk setup XML file to modify the disk layout is given in section 3.9.3 of the *Administrator Manual*.

For the cloud director, an additional sensible option may be to place /tmp and the swap space on an ephemeral device, by appropriately modifying the XML layout for the cloud director.

3.2.3 Tracking Cloud Director Startup

Tracking Cloud Director Startup From The EC2 Management Console

The boot progress of the cloud director <cloud director> can be followed by watching the status of the instance in the Amazon EC2 management console, as illustrated in figure 2.7. The Instance ID that is used to identify the instance can be found

- with Bright View, within the clickpath
Devices→Cloud Nodes→<cloud director>→Edit→Settings→Cloud settings→Instance ID
- with cmsh, by running something like:

Example

```
[bright92]% device use us-east-1-director
[bright92->device[us-east-1-director]]% get cloudid
i-f98e7441
[bright92->device[us-east-1-director]]% cloudsettings
[bright92->device[us-east-1-director]-cloudsettings]% get instanceid
i-f98e7441
```

Tracking Cloud Director Startup From Bright View

The boot progress of the cloud director can also be followed by

- watching the icon changes for the cloud node states in the clickpath Devices→Cloud Nodes. The icons indicating the state follow the description given in section 5.5.1 of the *Administrator Manual*

Tracking Cloud Director Startup From The Bash Shell Of The Head Node

There are some further possibilities to view the progress of the cloud director after it has reached at least the initrd stage. These possibilities include:

- an SSH connection to the cloud director can be made during the pre-init, initrd stage, after the cloud director system has been set up via an rsync. This allows a login to the node-installer shell.
- an SSH connection to the cloud director can be also be made after the initrd stage has ended, after the init process runs making an SSH daemon available again. This allows a login on the cloud director when it is fully up.

During the initrd stage, the cloud director is provisioned first. The cloud node image(s) and shared directory are then provisioned on the cloud director, still within the initrd stage. To see what rsync is supplying to the cloud director, the command “ps uww -C rsync” can be run on the head node. Its output can then be parsed to make obvious the source and target directories currently being transferred:

Example

```
[root@bright92 ~]# ps uww -C rsync | grep -o ' /cm/.*$'
/cm/shared/ syncer@172.21.255.251::target//cm/shared/
```


Tracking Cloud Director Startup From `cmsh`

The `provisioningstatus` command in `cmsh` can be used to view the provisioning status (some output elided):

Example

```
[root@bright92 ~]# cmsh -c "softwareimage provisioningstatus"
...
+ us-east-1-director
...
  Up to date images:      none
  Out of date images:    default-image
```

In the preceding output, the absence of an entry for “Up to date images” shows that the cloud director does not yet have an image that it can provision to the cloud nodes. After some time, the last few lines of output should change to something like:

Example

```
+ us-east-1-director
...
  Up to date images:      default-image
```

This indicates the image for the cloud nodes is now ready.

With the `-a` option, the `provisioningstatus -a` command gives details that may be helpful. For example, while the cloud director is having the default software image placed on it for provisioning purposes, the source and destination paths are `/cm/images/default-image`:

Example

```
[root@bright92 ~]# cmsh -c "softwareimage provisioningstatus -a"
Request ID(s):      4
Source node:        bright92
Source path:         /cm/images/default-image
Destination node:    us-east-1-director
Destination path:    /cm/images/default-image
...
```

After some time, when the shared filesystem is being provisioned, the source and destination paths should change to the `/cm/shared` directory:

```
[root@bright92 ~]# cmsh -c "softwareimage provisioningstatus -a"
Request ID(s):      5
Source node:        bright92
Source path:         /cm/shared
Destination node:    us-east-1-director
Destination path:    /cm/shared
...
```

After the shared directory and the cloud node software images are provisioned, the cloud director is fully up. Cloud node instances can then be powered up and provisioned from the cloud director.

3.3 Cluster Extension With AWS: Cloud Node Startup From Scratch

This section discusses the configuration of regular cloud node startup from scratch. Configuration of cloud node startup from snapshot is discussed in section 3.4. Regular cloud nodes are the cloud nodes that the cloud director starts up.

To configure the regular cloud nodes does not require a working cloud director. However to boot up the regular cloud nodes does require that the cloud director be up, and that the associated networks to the regular cloud nodes and to the head node be configured correctly.

If needed, additional cloud provisioning nodes (section 5.2 of the *Administrator Manual*) can be configured by assigning the provisioning role to cloud nodes, along with appropriate nodegroups (page 207 of the *Administrator Manual*) values, in order to create a provisioning hierarchy.

Creation and configuration of regular cloud node objects is conveniently carried out by cloning another regular cloud node from one of the default cloud nodes already created by the cluster extension wizard (section 3.1). A clickpath is:

Device→Cloud Nodes→<cloud node hostname>→↓Clone

Cloud node objects can also be created in `cmsh` as described in section 4.2.

The internal network for the regular cloud nodes is by default set to the VPC private network, and is somewhat similar to the internal network for regular nodes. The VPC private network can be contrasted with the VPC public network for cloud directors, which is a network that is by default assigned to cloud directors, and which floating IP addresses can connect to. Both the VPC private and VPC public networks are subnets of a cloud network. If the administrator would like to do so, the regular cloud nodes can be placed in the VPC public network and become directly accessible to the public.

If the cloud director is up, then the cloud nodes can be booted up by powering them up (section 4.2 of the *Administrator Manual*) by category, or individually.

3.4 Cluster Extension With AWS: Cloud Director And Cloud Node Startup From Snapshots

A technique that speeds up cluster deployment in the cloud is to use snapshots to start up the nodes in the cloud. Snapshots are snapshots of a shutdown state, and are stored by the cloud provider. In Amazon, they can be stored in EBS. It is cheaper to keep a machine in a stored state, rather than have it up but idling. Restoring from a snapshot is also significantly faster than starting up from scratch, due to optimizations by the cloud provider. An administrator should therefore get around to looking at using snapshots once cloudbursting is set up and the usage pattern has become clearer.

As a part of regular maintenance, snapshot configuration can be repeated whenever cloud director and cloud node files change significantly, in order to keep usage efficiency up.

3.4.1 Cloud Director Startup From Snapshots

Cloud Director Snapshot Preparation

A cloud director, for example `us-east-1-director`, can have a snapshot of its state prepared as follows by the administrator:

- The cloud director is started up from scratch (section 3.2)
- After it comes up for the first time, the administrator shuts it down cleanly. For example, with a command similar to `cmsh -c "device use us-east-1-director; shutdown"`
- After the cloud-director shutdown is complete, the administrator creates a snapshot of a cloud director using the EC2 Management Console. This can be done by selecting Elastic Block Store in the navigator column, then selecting the Volumes item within that menu. The volume associated with the cloud director can be identified by matching the Attachment Information column value

with the name `us-east-1-director` for this node, and the device to be snapshotted. In a default configuration, the device is `/dev/sdb` at the time of writing, but that may change. The Actions button in the main pane then provides a Create Snapshot item (figure 3.9).

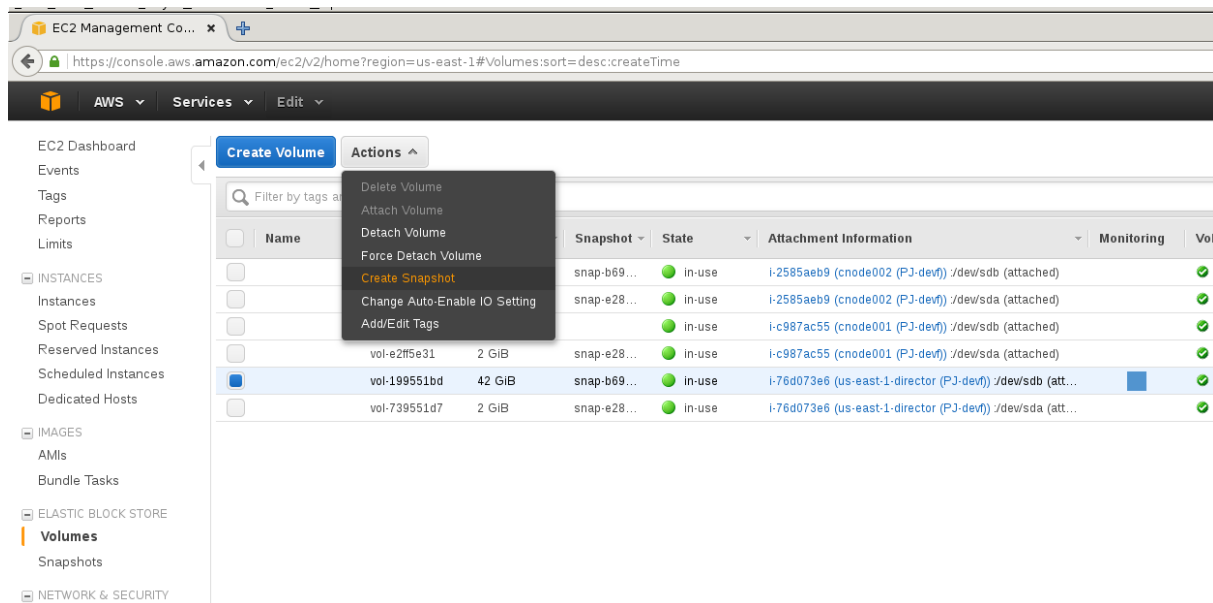


Figure 3.9: Creating A Snapshot From A Selected Volume

Using it creates a snapshot of a selected volume instance via a dialog. The snapshot ID is displayed at the end of the snapshot creation dialog, and should be noted for CMDaemon use later on, where it is saved as the value of `snapshotid`.

Created snapshots can be viewed within the Snapshots item of the Elastic Block Store menu.

Cloud Director Launch From Prepared Snapshot

To allow CMDaemon to launch the cloud director from the snapshot, the following procedure can be followed:

- The instance must be terminated so that the snapshot can actually be used by the instance on starting it again:

Example

```
[bright92->device[us-east-1-director]]% terminate
us-east-1-director terminated
```

- The snapshot ID that was noted earlier during snapshot preparation is set in the EBS storage setting configuration of the CMDaemon database, using a session similar to:

Example

```
[root@bright92 ~]# cmsh
[bright92]% device
[bright92->device]% use us-east-1-director
[bright92->device[us-east-1-director]]% cloudsettings
[bright92->...-director]->cloudsettings]% storage
[bright92->...-director]->cloudsettings->storage]% use ebs
[bright92->...-director]->cloudsettings->storage[ebs]]% set snapshotid snap-2a96d0c6
```

The cloud director can now be powered on:

Example

```
[bright92->device[us-east-1-director]]% power on
```

The cloud director now starts up much faster than when starting up from scratch.

3.4.2 Cloud Node Startup From Snapshots

When a regular cloud node is launched from scratch (section 3.3), it uses the cloud director for provisioning, rather than a node outside the cloud, because this is faster. However, having the cloud director create an EBS volume from its storage in the cloud, and then providing the image to the cloud compute nodes still involves a lot of data I/O. On the other hand, a cloud provider such as Amazon can optimize many of these steps when creating an EBS volume from a snapshot, for example, by using copy-on-write. This means that snapshot-based provisioning is even speedier than the non-snapshot, “from scratch” method.

If the administrator wants to make a snapshot that can be used as the base for speedily launching regular cloud nodes, then the same snapshot method that is used for cloud directors (section 3.4.1) should be followed to make a snapshot for a regular cloud node.

A summary of the steps that can be followed is:

- a regular cloud node is started up from scratch (section 3.3), after the cloud director is up
- after the regular cloud node has come up, it is shut down cleanly
- a snapshot is created of the cloud node using the EC2 Management Console
- the cloud node is terminated
- the snapshot ID is set:

Example

```
[bright92->device[cnode001]->cloudsettings->storage[ebs]]% set snapshotid snap-5c9s3991
```

Powering on the node now launches the regular cloud node much faster than the non-snapshot method.

CMDaemon ensures that a snapshot for one cloud node can be used by other cloud nodes too, if the disk partitioning is the same. This is useful when launching cloud nodes that do not differ much from the snapshot.

It also means that even the cloud director image can be used as a snapshot to launch a regular cloud node, if the disk partitioning and other settings allow it. However, using a regular node snapshot for launch is usually much wiser, due to the extra filesystems that a cloud director has.

3.5 Cluster Extension With AWS: Optimizing AWS For High Performance Computing (HPC)

For HPC, performance is a central concern. Optimization for the jobs that are run can be carried out by the administrator considering what are the most cost-effective aspects of the system that can be improved. The considerations in this section for AWS, apply to COD instances as well as to Cluster Extension instances.

3.5.1 Optimizing HPC Performance: EBS Volume Type

The volume type used for EBS storage can be considered. AWS provides the gp2, io1, sc1, st1, and standard storage volume types. These volume types, and their associated IOPS performances, are described at <https://docs.aws.amazon.com/AWSEC2/latest/UserGuide/EBSVolumeTypes.html>.

- In cmsh these can be set in the storage mode:

Example

```
[bright92->device[cnode001]->cloudsettings->storage[ebs]]% set volumetype io1
```

- In Bright View, the equivalent clickpath is:

```
Devices->Cloud Nodes-><cloud node hostname>->Edit->Settings->Cloud settings->STORAGE->Storage->ebs->CREATION TIME->Volume type
```

3.5.2 Optimizing HPC Performance: Placement Groups

The locality of the cloud nodes with respect to each other and with respect to the cluster that they extend from can be considered.

For cloud nodes in the same placement group, lag times are minimized between the nodes. For cloud nodes that are geographically near cluster that they extend from, the lag times are reduced between the cloud nodes and the cluster they extend from.

Localizing HPC cloud nodes within the same placement group is usually desirable. This can be achieved using the AWS web console to access the cluster extension AWS account. A placement group can be created for a region via the AWS web console for the instance.

The clickpath to carry this out is Services->EC2->Services->Placement Groups->Create Placement Group. A name should be set. The value of Strategy should be set to Cluster, to localize the nodes.

The same placement group name can then be set via cmsh for the not-yet-instantiated cloud nodes. Setting this means that those nodes are now started in that placement group.

Example

```
[bright92->device[cnode001]->cloudsettings]% set placementgroup indahood
```

3.5.3 Optimizing HPC Performance: Disabling Hyper-Threading

Hyper-Threading (HT) in many cases hinders HPC performance. When running cluster extension cloud nodes, HT can be left enabled on some instances and disabled on others, depending on the need.

To disable HT, the following can be inserted into the `/etc/rc.local` file for the cloud node image, and made executable with a `chmod +x`:

```
for cpunum in $(cat /sys/devices/system/cpu/cpu*/topology/thread_siblings_list | \
  cut -s -d\ -f2- | tr ',' '\n' | sort -un)
do echo 0 > /sys/devices/system/cpu/cpu$cpunum/online; done;
```

The delimiter used in the cut command is “-” instead of a “,”.

If HT is disabled on the cloud node, then it can be confirmed by checking the output of the `lscpu --extended` command (output truncated):

Example

```
[root@cnode001 ~]# lscpu --extended
CPU NODE SOCKET CORE L1d:L1i:L2:L3 ONLINE
0 0 0 0 0:0:0:0 yes
1 - - - ::: no
...
```

In the line just before the “...”, the “no” indicates that that logical CPU (CPU1 in this case) has been disabled.

3.5.4 Optimizing HPC Performance: Using Elastic Network Adapter Instances

Enhanced networking that is needed for some instance types is possible if the AMI used has the Elastic Network Adapter (ENA) support attribute set. By default, all AMIs provided by NVIDIA Bright Cluster Manager since release 8.1-9 have ENA, as provided by the ena kernel module. If this kernel module is absent, the administrator should update the AMI.

3.5.5 Optimizing HPC Performance: Using A Different Clock Source

Xen is the default clocksource on AWS. Occasionally, some applications can benefit from using the TSC clocksource. Because of this, the clock source is generally changed as a best practice. The clock source can be changed with the following command:

Example

```
[root@cnode001 ~]# echo "tsc" > /sys/devices/system/clocksource/clocksource0/current_clocksource
```

3.5.6 Optimizing HPC Performance: Setting The Socket Buffer Sizes And TCP/IP Parameters In The Software Image

The socket and TCP/IP window values can be modified by inserting the following values into the `sysctl.conf` file in the image:

Example

```
[root@bright92 ~]# cat >> /cm/images/default-image/etc/sysctl.conf << EOF
net.core.netdev_max_backlog = 1000000

net.core.rmem_default = 124928
net.core.rmem_max     = 67108864
net.core.wmem_default = 124928
net.core.wmem_max     = 67108864

net.ipv4.tcp_keepalive_time = 1800
net.ipv4.tcp_mem            = 12184608 16246144 24369216
net.ipv4.tcp_rmem           = 4194304 8388608 67108864
net.ipv4.tcp_syn_retries    = 5
net.ipv4.tcp_wmem           = 4194304 8388608 67108864
EOF
```

4

Cluster Extension Cloudbursting With AWS Using The Command Line And cmsh

The command line and cmsh can be used to set up Cluster On Demand clusters for AWS and Azure, as discussed in Chapter 2. The command line and cmsh can also be used to set up Cluster Extension clusters, as are discussed in this chapter for AWS, and in Chapter 5 for Azure.

4.1 The cm-cluster-extension Script For Cluster Extension Clusters

4.1.1 Running The cm-cluster-extension Script On The Head Node For Cluster Extension Clusters

The cm-cluster-extension script is run from the head node. It is a part of the cluster manager cluster-tools package. It allows cloudbursting to be carried out entirely from the command line for Cluster Extension setups. It is a command line way of carrying out the configuration carried out by the GUI steps of section 3.1 for cloud provider login and cloud director configuration. After the script has completed its setup, then cmsh power commands can launch the required cloud nodes (sections 4.1.2 and 4.2).

The cm-cluster-extension script can be run in CLI mode (page 55) , or as a TUI dialog (page 57).

Running The cm-cluster-extension Command Line Options As A Shell Dialog

The administrator can specify command line options to cm-cluster-extension, as shown in its help text. The help text is displayed with the -h|--help option:

```
[root@bright92 ~]# cm-cluster-extension -h
```

```
usage: Cluster Extension cm-cluster-extension [-c <config_file>] [--remove] [--remove-provider <provider_name>]
        [--remove-region [<provider_name>.<region_name>]]
        [--terminate-instances] [--remove-fsx-instances]
        [--yes-i-really-mean-it] [--test-networking] [--test-environment]
        [--test-configuration] [--test-everything]
        [--enable-external-network-connectivity]
        [--azure-cloud-name AZURE_CLOUD_NAME] [-v] [--no-distro-checks]
        [--json] [--output-remote-execution-runner]
        [--on-error-action debug,remotedebug,undo,abort] [--skip-packages]
        [--min-reboot-timeout <reboot_timeout_seconds>] [--dev] [-h]
```

optional arguments:

```
-h, --help          Print this screen
```

common:

Common arguments

`-c <config_file>` Load runtime configuration for plugins from a YAML config file

removing cluster extension:

Flags which can be used for removing CX

`--remove` Remove definitions of all objects required for cluster extension, e.g. cloud nodes, directors, cloud networks and cloud interfaces

`--remove-provider <provider_name>`
Remove specified CX provider

`--remove-region [<provider_name>.<region_name>`
Remove specified CX region

`--terminate-instances`
Terminate all non-terminated VMs.

`--remove-fsx-instances`
Remove FSX instances.

`--yes-i-really-mean-it`
Required for additional safety

testing cluster extension:

Flags which can be used for troubleshooting

`--test-networking` Perform networking checks (e.g. check if API endpoints are reachable)

`--test-environment` Run environment checks (e.g. if proper RPMs are installed)

`--test-configuration` Run configuration checks, which check if cluster extension is properly configured (e.g. if cloud director has correct interfaces, if cloud credentials are valid, if CMDaemon can create/delete objects in the cloud)

`--test-everything` Run all of the above mentioned checks.

cluster extension to Azure:

Options specific to this cloud type.

`--azure-cloud-name AZURE_CLOUD_NAME`
Used for deploying to a non-public Azure Cloud. E.g.: AzureUSGovernment

advanced:Various **advanced** configuration options flags.

`-v, --verbose` Verbose output

`--no-distro-checks` Disable distribution checks based on `ds.json`

`--json` Use json formatting for log lines printed to stdout

`--output-remote-execution-runner`
Format output for CMDaemon

`--on-error-action debug,remotedebug,undo,abort`
Upon encountering a critical error, instead of asking the user for choice, setup will do selected action.

`--skip-packages` Skip the any stages which install packages. Requires packages to be already installed.

`--min-reboot-timeout <reboot_timeout_seconds>`
How long to wait for nodes to finish reboot (default and minimum allowed: 300 seconds).

--dev Enables additional command line arguments

examples:

```
cm-cluster-extension (start interactive menu, wizard)
cm-cluster-extension -c <config> (configure bursting to AWS)

cm-cluster-extension --remove (remove bursting)
cm-cluster-extension --remove --yes-i-really-mean-it
(remove bursting, no confirmation)
*WARNING* This will remove the cloud extension configuration. Any data located on your cloud nodes
will be lost, unless you back it up beforehand.
cm-cluster-extension --test-everything
```

This tool looks for, and uses if found, the following environment variables:

```
AWS_USERNAME, AWS_ACCOUNT_ID, AWS_ACCESS_KEY_ID, AWS_SECRET_ACCESS_KEY
AZURE_SUBSCRIPTION_ID, AZURE_TENANT_ID, AZURE_CLIENT_ID, AZURE_CLIENT_SECRET
```

It can be run with the options directly (some output skipped):

Example

```
[root@bright92 ~]# cm-cluster-extension --test-networking
Please wait...
Found an optional config file, '/root/cm-setup.conf'. Will attempt to load it.
Executing 26 stages
##### Starting execution for 'Running networking checks'
Connecting to CMDaemon
- cloudstorage
- clusterextension
#### stage: clusterextension: Testing tcp connection to ec2.us-east-1.amazonaws.com:443
#### stage: clusterextension: Testing tcp connection to ec2.us-west-1.amazonaws.com:443
...
#### stage: clusterextension: Testing udp OpenVPN connectivity

Took:      00:09 min.
##### Finished execution for 'Running networking checks', status: completed

Running networking checks finished!
```

Running The cm-cluster-extension TUI

The more user-friendly way to run cm-cluster-extension is to run it without options. This brings up the main screen for its TUI (figure 4.1).

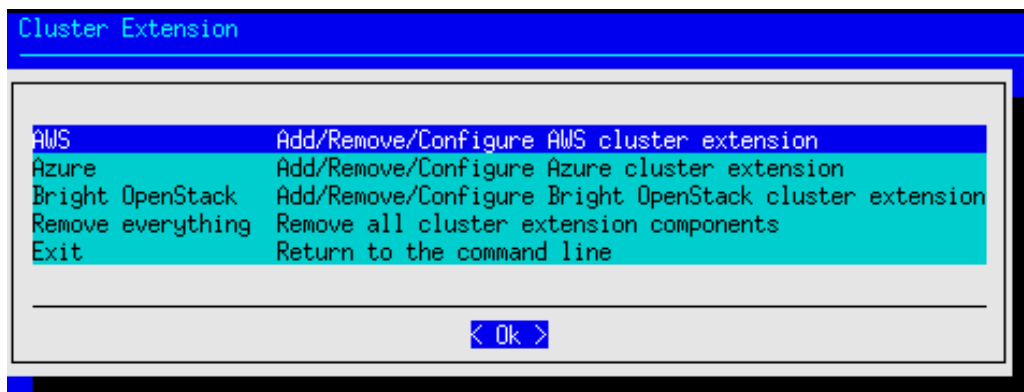


Figure 4.1: Configuration Processing With cm-cluster-extension: Main Screen

Cluster extension cloudbursting deployment can be carried out by selecting AWS (described in this chapter) or Azure (Chapter 5) from the main screen.

After AWS is selected, a new AWS provider can be set if none is already set up. If an AWS region has been configured previously, then its configuration can be removed. Testing only the network connectivity to the various AWS regions is also possible (figure 4.2).

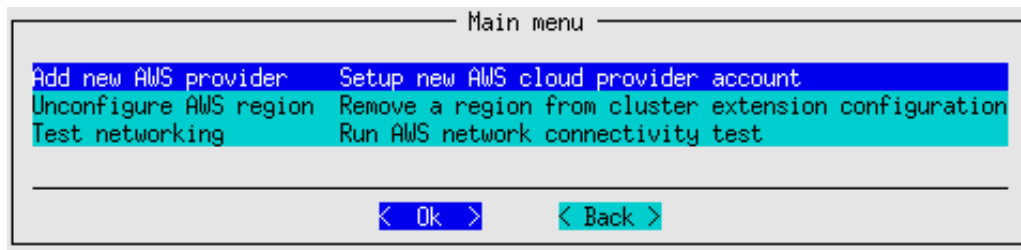


Figure 4.2: Configuration Processing With `cm-cluster-extension`: Add, Unconfigure, Or Test

If a new AWS provider is selected, then a screen comes up asking for the credentials for Amazon (figure 4.3):

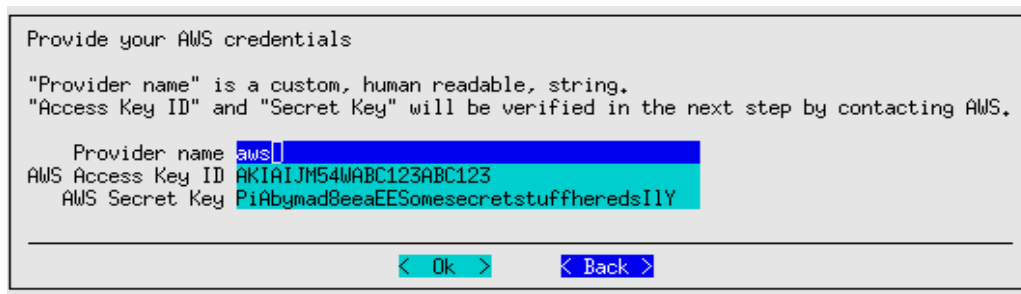


Figure 4.3: Configuration Processing With `cm-cluster-extension`: Obtaining Credentials

To paste the credentials from the clipboard, the cluster administrator may find it helpful to know that a paste to the TUI can usually be carried out with a `<shift><insert>`.

After checking and accepting the credentials, the administrator is asked to choose a setup type for the wizard. This can be a default setup, or it can be an advanced setup (figure 4.4):


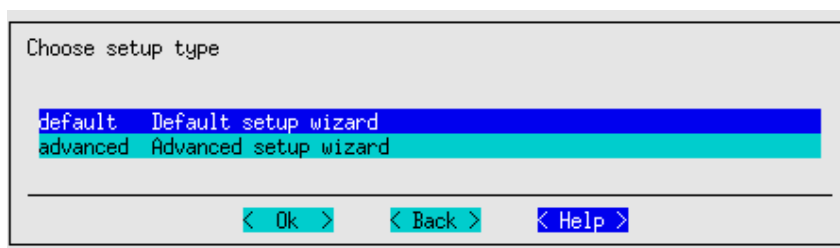


Figure 4.4: Configuration Processing With `cm-cluster-extension`: Default Setup Or Advanced Setup

The default setup is recommended for most use cases. The default setup configures an OpenVPN network connection to the cluster extension. The advanced setup allows the network connection to the cluster extension to use Direct Connect for AWS, or another hardware-based VPN.

After a default or advanced setup has been chosen, the initial number of cloud nodes to be set up in the cloud can be set (figure 4.5). A default of 3 is suggested.

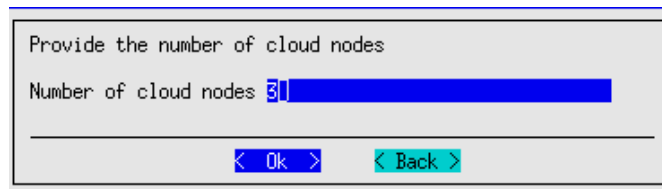


Provide the number of cloud nodes

Number of cloud nodes 30

< Ok > < Back >

Figure 4.5: Configuration Processing With cm-cluster-extension: Setting The Initial Number Of Cloud Nodes

After setting an initial number of cloud nodes, the major regions into which these can be deployed are displayed (figure 4.6):

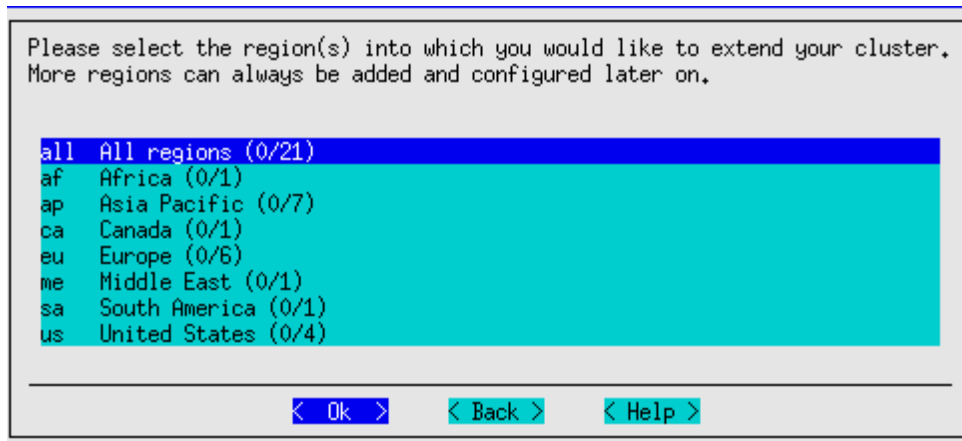


Please select the region(s) into which you would like to extend your cluster. More regions can always be added and configured later on.

all	All regions (0/21)
af	Africa (0/1)
ap	Asia Pacific (0/7)
ca	Canada (0/1)
eu	Europe (0/6)
me	Middle East (0/1)
sa	South America (0/1)
us	United States (0/4)

< Ok > < Back > < Help >

Figure 4.6: Configuration Processing With cm-cluster-extension: Major Regions Selection

After selecting a major region, the available regions under it into which the cloud nodes can be deployed are displayed (figure 4.7):

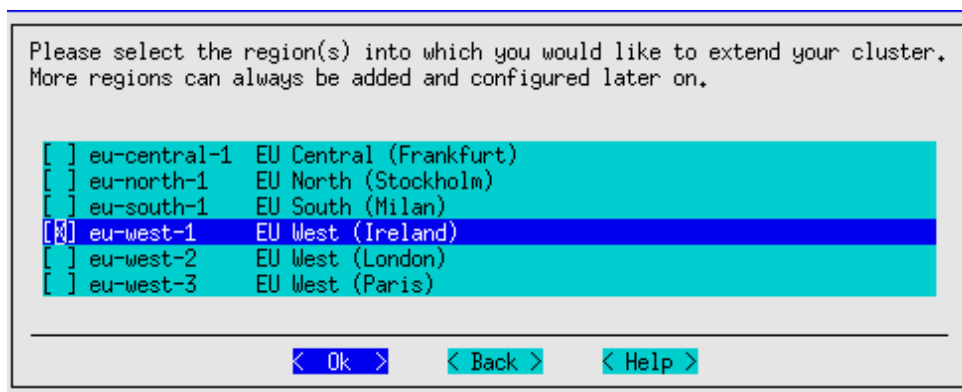

Please select the region(s) into which you would like to extend your cluster. More regions can always be added and configured later on.

<input type="checkbox"/>	eu-central-1	EU Central (Frankfurt)
<input type="checkbox"/>	eu-north-1	EU North (Stockholm)
<input type="checkbox"/>	eu-south-1	EU South (Milan)
<input checked="" type="checkbox"/>	eu-west-1	EU West (Ireland)
<input type="checkbox"/>	eu-west-2	EU West (London)
<input type="checkbox"/>	eu-west-3	EU West (Paris)

< Ok > < Back > < Help >

Figure 4.7: Configuration Processing With cm-cluster-extension: Regions Selection

After selecting one or more regions, the default region into which the cloud nodes can be deployed can be set (figure 4.8):

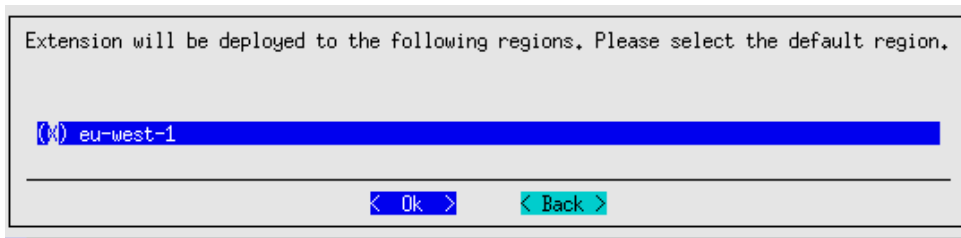


Figure 4.8: Configuration Processing With `cm-cluster-extension`: Default Region Selection

After setting the default region, the availability zone must be set for the public subnets (figure 4.9):

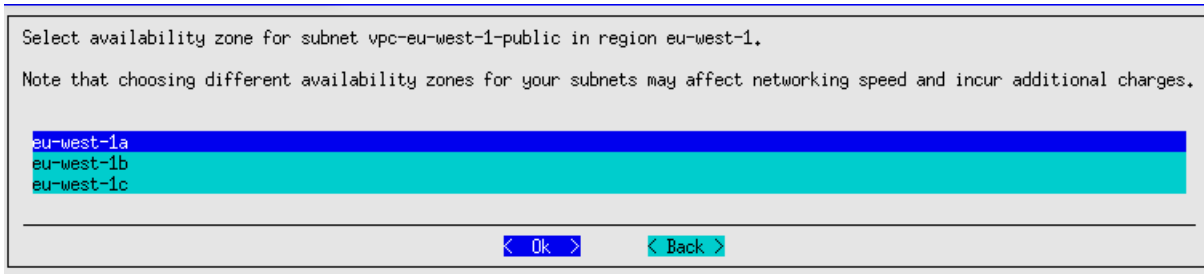


Figure 4.9: Configuration Processing With `cm-cluster-extension`: Availability Zone Selection For Subnets

A similar screen is displayed for the private subnets.

After setting the availability zones for the public and private subnets, a default instance type must be set for the regular cloud nodes. The major instance type is first set. For example, the `m3` type is a common major instance type that can be set (figure 4.10):

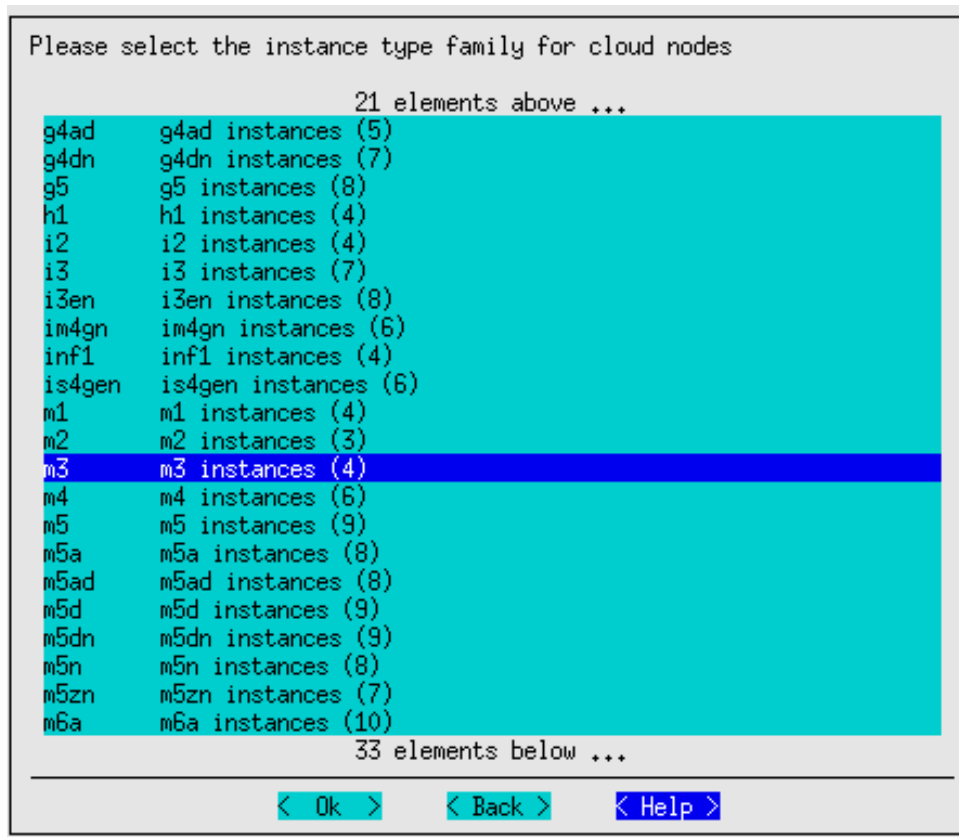


Figure 4.10: Configuration Processing With cm-cluster-extension: Major Instance Type

After selecting the major instance type, the specific default instance type can be set for the regular cloud nodes. The m3.medium type, (3.75GB RAM, 4GB SSD, 3 EC2 compute units) is a common default that can be used: (figure 4.11):

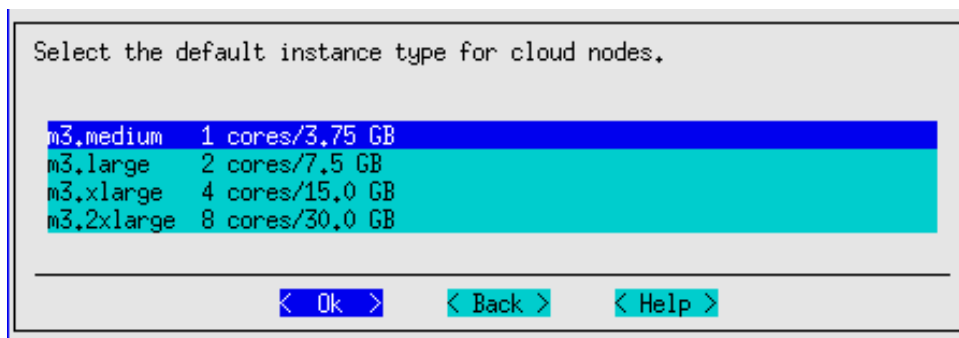


Figure 4.11: Configuration Processing With cm-cluster-extension: Default Instance Type

After setting the default instance type for the regular cloud nodes, screens similar to figures 4.10 and 4.11) are displayed to guide the administrator into setting a default instance type screen for the cloud director node type.

After having set the default instance types for the regular and cloud director nodes, the VPN connection to the cluster extension is configured.

If the advanced setup (figure 4.4) was selected earlier in the wizard, then the administrator can select the type of VPN connection to the cluster extension (figure 4.12):

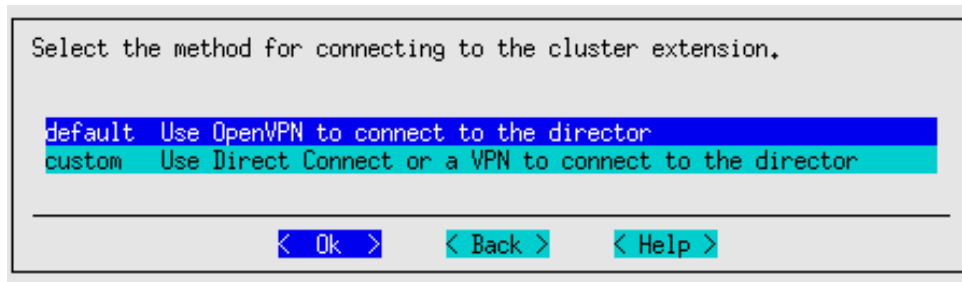


Figure 4.12: Configuration Processing With `cm-cluster-extension`: Custom VPN Configuration

- This can be the OpenVPN option that is automatically configured if the advanced setup is not chosen.
- With the advanced setup it is also possible to configure
 - Direct Connect (for AWS)
 - or another hardware-based VPN

As part of VPN configuration, the wizard guides the administrator through the process of configuring the cluster extension so that the extension:

- creates a new VPC for each cluster region. Alternatively, an existing VPC can be set.
- creates subnets for its private and public networks per region by default. Alternatively, existing subnets can be used instead, but the cloud director must be able to contact the on-premises head node.
- creates a security group for each region by default. Alternatively, existing security groups can be used instead.

After the VPN connection is configured, the summary screen (figure 4.13) is displayed. This lets the administrator look things over before deployment:

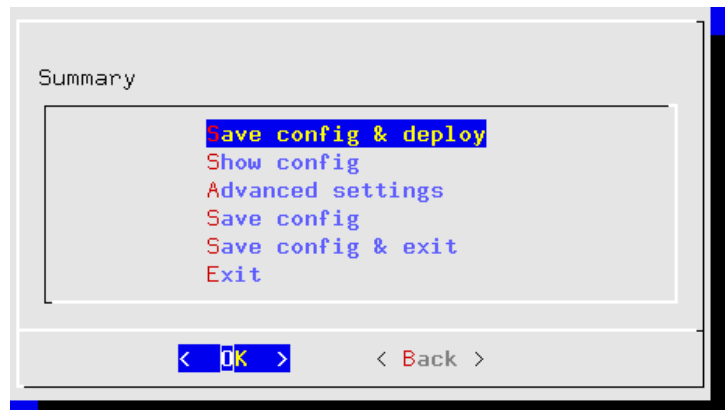


Figure 4.13: Configuration Processing With `cm-cluster-extension`: Summary Screen

The summary screen allows the following:

- An administrator can just go ahead, save the configuration, and deploy the cluster extension. This is usually the expected action.
- The configuration settings YAML file can be viewed. To scroll, the PageUp and PageDown keys are used.

- The advanced configuration settings screen can be accessed in addition to the standard settings. The advanced settings are usually left alone.
- The configuration file, *<configuration file>*, can be saved and the TUI can be exited. By default, the value of *<configuration file>* is set to `cm-cluster-extension.conf` in the home directory of the user. On exiting the TUI, deployment with that configuration can be carried out manually by running:

```
cm-cluster-extension -c <configuration file>
```

After `cm-cluster-extension` has carried out a successful deployment, the cloud nodes (the cloud director and regular cloud nodes) can be launched.

4.1.2 Launching The Cloud Director For Cluster Extension Clusters

Launching the cluster in the cloud requires that the cloud director (section 3.2) and cloud nodes be powered up. This can be done using Bright View as described in sections 3.2 and 3.3. It can also be carried out in `cmsh`, for example, the cloud director `eu-west-1-director` can be powered up from device mode with:

Example

```
cmsh -c "device power on -n eu-west-1-director"
```

If the administrator is unsure of the exact cloud director name, one way it can easily be found is via tab-completion within the device mode of `cmsh`. Alternatively, the cloud directors for AWS can be listed with:

Example

```
cmsh -c "device; list -c aws-cloud-director"
```

As explained in section 3.2, the cloud director takes some time to power up. Its status can be followed in the notice messages sent to the `cmsh` session, or in the Bright View event viewer. The status can also be queried via the `status` command in device node. For example, a `watch` instruction such as:

```
[root@bright92 ~]# watch 'cmsh -c "device status -n eu-west-1-director"'
```

will show a series of outputs similar to:

```
eu-west-1-director ..... [ PENDING ] (Waiting for instance to start)
eu-west-1-director ..... [ PENDING ] (Waiting for instance to start)
eu-west-1-director ..... [ PENDING ] (IP assigned: 54.220.240.166)
eu-west-1-director ..... [ PENDING ] (setting up tunnel)
eu-west-1-director ..... [ INSTALLER_REBOOTING ]
eu-west-1-director ..... [ INSTALLING ] (recreating partitions)
eu-west-1-director ..... [ INSTALLING ] (FULL provisioning to "/")
eu-west-1-director ..... [ INSTALLING ] (provisioning started)
eu-west-1-director [ INSTALLER_CALLINGINIT ] (switching to local root)
eu-west-1-director ..... [  UP  ]
```

4.2 Launching The Cloud Nodes

Once the cloud director is up on the cloud provider, the regular cloud nodes can also be powered up. This does however first require that the corresponding cloud node objects exist. That is, that `CMDaemon` must have a representation of the cloud nodes, even if they do not yet exist on the cloud provider. The objects must each have an IP address assigned to them that is consistent with that of the cloud director that manages them. That is, the network address of the cloud nodes must be what the cloud director expects.

The cluster manager's cluster extension utilities create 3 cloud node objects by default (figure 4.7, page 59). Cloning them is an easy way to extend the number of deployable cloud nodes.

With Bright View, this can be done with the `Clone` command to assign properties to the clone that match the original (section 3.3), but advance the relevant IP addresses by 1. In `cmsh`, the `clone` command works the same way.

To launch a cloud node that has an object, a command can be run as follows:

```
[bright92->device[cnode001]->interfaces]% device power on -n cnode001
```

4.2.1 Creating And Powering Up Many Nodes

For a large number of cloud nodes, the creation and assignment of IP addresses can be done with the `clone` option of the `foreach` command, (section 2.5.5 of the *Administrator Manual*), together with a node range specification. This is the same syntax as used to create non-cloud regular nodes with `cmsh`.

Earlier on in this section, starting from page 57, a TUI session was run that ended up creating

- the cloud director `eu-west-1-director` and
- regular node objects `eu-west-1-cnode001` up to `eu-west-1-cnode003`.

Continuing with the end result of that session, cloning many further regular cloud nodes can now be carried out by cloning `eu-west-1-cnode003`:

Example

```
[bright92->device]% foreach --clone eu-west-1-cnode003 -n eu-west-1-cnode0[04-12] ()
Warning: The Ethernet switch settings were not cloned, and have to be set manually
...
[bright92->device*]% commit
Successfully committed 9 Devices
[bright92->device]%
```

As a reminder, the node range option `-n eu-west-1-cnode004..eu-west-1-cnode012` would also be valid for the preceding example, and perhaps easier to comprehend, although longer.

The IP addresses are assigned to the cloud nodes via heuristics based on the value of `eu-west1-cnode003` and its cloud director.

Powering up many cloud nodes can be carried out using `cmsh` with the node range option as follows:

Example

```
[bright92->device]% power on -n eu-west-1-cnode0[02-10]
```

4.3 Submitting Jobs With `cmjob` And Cloud Storage Nodes, For Cluster Extension Clusters

The `cmjob` command is a user command wrapper that submits job scripts to a workload manager in a Cluster Extension cluster, so that jobs are considered for running in the cloud. Its usage for an end user is covered in section 4.7 of the *User Manual*.

The `cmjob` command is available from the cluster manager repository as part of the `cmdaemon-cmjob` package. The `cmjob` command needs the `cmjob` environment module (section 2.2 of the *Administrator Manual*) to be loaded by the end user before use.

In addition, the cluster administrator must have created a `cmjob` certificate for the user that is using the `cmjob` utility. By default, the certificate key pair is `/.cm/cmjob.pem` and `/.cm/cmjob.key` when the certificate is created.

Example


```
[root@bright92 ~]# cmsh
[bright92]% user use henry
[bright92->user[henry]]% set createcmjobcertificate yes; commit
```

The value of `createcmjobcertificate` can take on these 2 values:

- no: the default, with no access to `cmjob`
- yes: gives access to `cmjob`, as well as the AWS FSx and Azure ANF integrations, if those integrations are enabled

If the `cmjob` command is run by the user to submit a job, then the job is submitted to the workload manager, and the *data-aware scheduling* mechanism is initiated.

A cluster with data-aware scheduling is a cluster that ensures that it has the data needed for the cloud computing job already accessible on *cloud storage nodes*.

Cloud storage nodes are nodes that are set up by the cluster manager, before the job is executed in the cloud. Because data stored can be written and read from many cloud storage nodes for each job that is placed in the cloud, the data throughput in the cloud becomes more efficient than if only one storage space were used.

Cloud storage nodes are powered up automatically if `cmjob` has been installed and configured. They must however be powered down explicitly, and this must be done before the cloud director that it depends on is powered down.

4.3.1 Installation And Configuration of cmjob For Data-aware Scheduling To The Cloud

The configuration of data-aware scheduling means configuring the cluster so that the tools that allow data-aware scheduling to work correctly are configured. The configuration that is carried out depends on the workload manager that is to be used.

If `cmjob` has not yet been set up, or if it needs reconfiguration, then the following steps should be carried out:

1. The `cmdaemon-cmjob` package is installed. It must be installed on the head node and in the software image that is to be used for compute cloud nodes and storage cloud nodes.

Example

```
[root@bright92 ~]# yum install cmdaemon-cmjob
[...]
[root@bright92 ~]# yum --installroot /cm/images/default-image install cmdaemon-cmjob
[...]
```

2. The `cm-cloud-storage-setup` utility is run. Example runs are provided later, starting on page 66, but an explanatory background is given here first.

The utility is part of the `cluster-tools` package, which is installed by default. The utility

- configures `cmjob` properties
- creates
 - *templates for cloud storage nodes*
 - *storage policies for cmjob*

Templates For Cloud Storage Nodes And Storage Policy

Templates for cloud storage nodes: are a cloud node definition associated with a cloud provider. Templates for cloud storage nodes, more conveniently called template nodes, provide a template that is used by the cloud storage nodes. Template nodes, being templates, are never powered on, and are therefore always in a Down state in `cmsh` and Bright View. Actual cloud storage nodes, on the other hand, can be powered on by the cluster manager, so that they can be used to store cloud job data.

In addition, any network interfaces associated with a template node can generally be regarded as non-functioning as far as the administrator is concerned. One feature of template nodes however is that the tunnel IP address set in the template is an offset to the network address that is used to assign IP addresses to actual storage nodes.

A storage policy: defines other parameters for how storage for cloud jobs is handled. Its parameters include:

- **Name:** the name set for the policy
- **Bucket Name:** the S3 bucket used for cloud jobs to transfer input and output job data
- **Default job output size:** specifies the default free storage space that is provisioned for the result that a job produces
- **Storage node name prefix:** specifies a prefix for how storage nodes are to be named. The prefix is `cstorage` by default. The number suffix scheme is as for regular nodes. Thus, by default, the storage nodes are `cstorage001`, `cstorage002` and so on.
- **Template for cloud nodes:** the template to use as the prototype for storage nodes

Example

Configuration Of `cmjob` Properties With `cm-cloud-storage-setup`

The `cm-cloud-storage-setup` is a TUI utility that configures `cmjob` properties for a cloud deployment. When run with the `-h` or `--help` option its usage is displayed:

```
[root@bright92 ~]# cm-cloud-storage-setup -h
Please wait...
usage: Cloud storage setup cm-cloud-storage-setup [-v] [-h] [-c <config_file>]
                                         [--dev]
                                         [--on-error-action
                                         {debug,remotedebug,undo,abort}]
                                         [--output-remote-execution-runner]
                                         [--json]
                                         [--no-distro-checks]
                                         [--min-reboot-timeout <reboot_timeout_seconds>]
                                         [--skip-reboot] [--remove]

optional arguments:
  --skip-reboot          Don't reboot the nodes

common:
  Common arguments

  -v                    Verbose output
  -h, --help            Print this screen
  -c <config_file>      Load runtime configuration for modules from a YAML config file

advanced:
```

Various **advanced** configuration options flags.

```
--dev                Enables additional command line arguments
--on-error-action {debug,remotedebug,undo,abort}
                    Upon encountering a critical error, instead of asking the user for
                    choice, setup will undo (revert) the deployment stages.
--output-remote-execution-runner
                    Format output for CMDaemon
--json               Use json formatting for log lines printed to stdout
--no-distro-checks
--min-reboot-timeout <reboot_timeout_seconds>
                    How long to wait for nodes to finish reboot (default and minimum allowed:
                    300 seconds).
```

Remove storage:

```
--remove            Cleanup storage setup
```

The administrator is usually expected to run `cm-cloud-storage-setup` without arguments. This brings up a TUI, which starts with an introductory page (figure 4.14):



Figure 4.14: Cloud Storage Configuration Processing With `cm-cloud-storage`: Main Screen

Continuing on brings up the network selection screen, which sets the network in which the cloud storage is to be placed (figure 4.15):

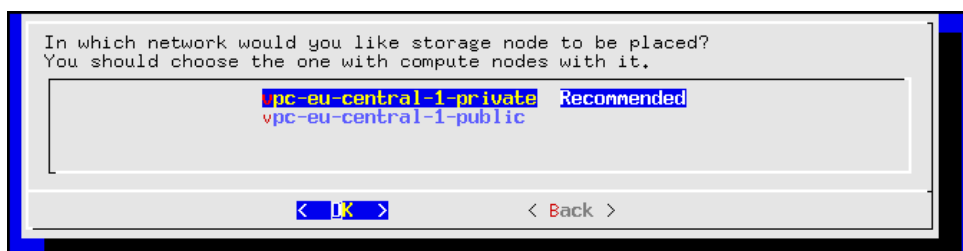
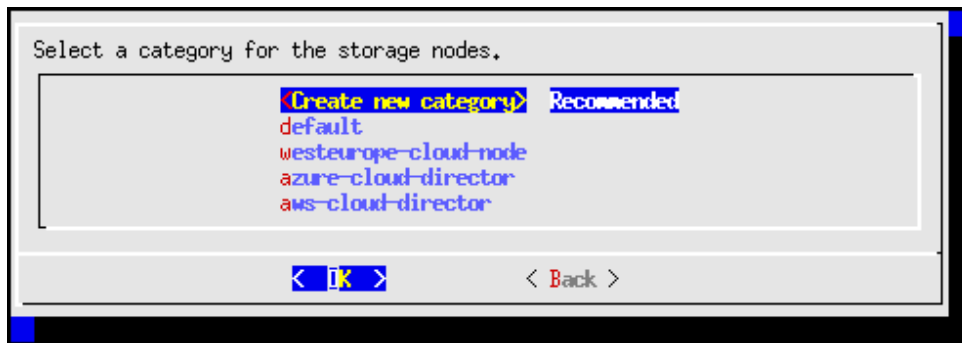
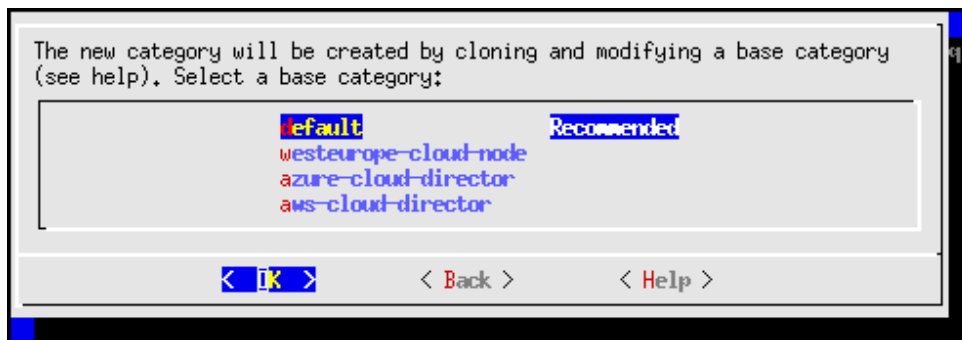


Figure 4.15: Cloud Storage Configuration Processing With `cm-cloud-storage`: Network Selection

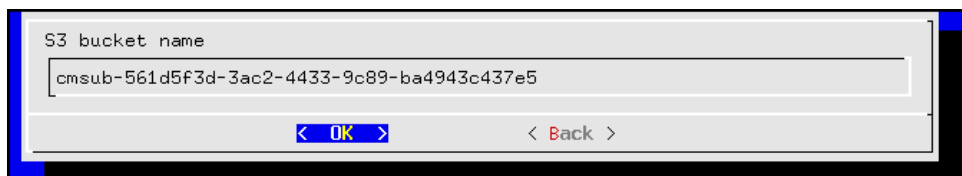
After having selected the network, a category for the storage nodes is set (figure 4.16):

Figure 4.16: Cloud Storage Configuration Processing With `cm-cloud-storage`: Category Selection

It is recommended that a new category be created (figure 4.17):

Figure 4.17: Cloud Storage Configuration Processing With `cm-cloud-storage`: Category Creation

A bucket name can be set (figure 4.18):

Figure 4.18: Cloud Storage Configuration Processing With `cm-cloud-storage`: S3 Bucket Entry

A workload manager is set for the cloud storage (figure 4.19):

Figure 4.19: Cloud Storage Configuration Processing With `cm-cloud-storage`: Workload Manager Selection

It is recommended that a new queue be created for jobs that use the storage (figure 4.20):

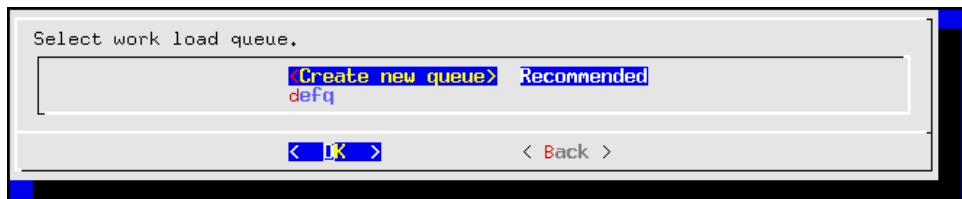


Figure 4.20: Cloud Storage Configuration Processing With cm-cloud-storage: Queue Creation

The queues can be assigned to the cloud category (figure 4.21):

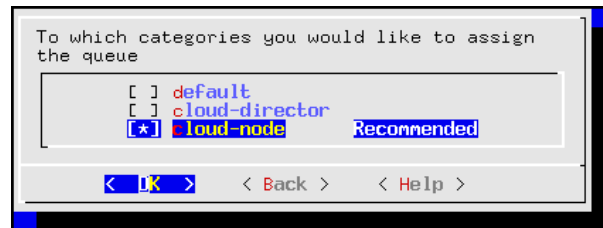


Figure 4.21: Cloud Storage Configuration Processing With cm-cloud-storage: Setting The Queue Category

The summary screen allows the configuration to be saved and to be deployed (figure 4.22):

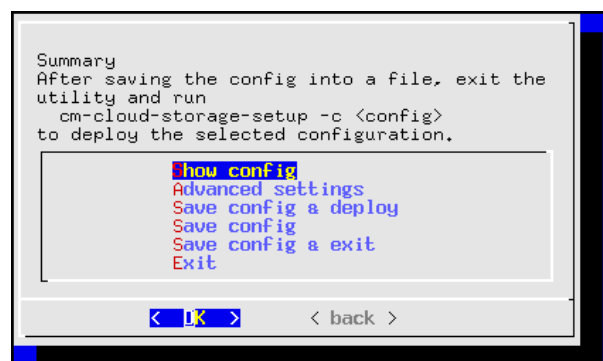


Figure 4.22: Cloud Storage Configuration Processing With cm-cloud-storage: Summary Screen

If the configuration is to be saved, then the file path should be specified (figure 4.23):



Figure 4.23: Cloud Storage Configuration Processing With cm-cloud-storage: Save & Deploy Screen

/root/cm-cloud-storage-setup.conf is the suggested default. On exit, the saved configuration can be run with:

Example

```
[root@bright92 ~]# cm-cloud-storage-setup -c cm-cloud-storage-setup.conf
```

Configuring cmjob Properties With cmsh

The storage node policy settings can be modified via CMDaemon using cmsh:

```
[root@bright92 ~]# cmsh
[bright92]% cmjob
[bright92->cmjob[cmjob]]% storagenodepolicies
[bright92->cmjob[cmjob]->storagenodepolicies]% list
Name (key)          Template for cloud nodes
-----
us-east-1-policy    us-east-1-storage-template
[bright92->cmjob[cmjob]->storagenodepolicies]% use us-east-1-policy
[bright92->cmjob[cmjob]->storagenodepolicies[us-east-1-policy]]% show
Parameter          Value
-----
Default job output size      30.0GiB
Exported directories         home
Intermediate storage         <submode>
Max download time            2h
Max jobs per node            10
Max storage nodes            5
Max upload time              2h
Minimum Storage volume size  30.0GiB
Name                         us-east-1-policy
Revision
Storage node idle time limit  15m
Storage node name prefix     us-east-1-cstorage
Storage volume filesystem     ext3
Template for cloud nodes     us-east-1-storage-template
Tunnel IP start address      0.0.100.0
[bright92->cmjob[cmjob]->storagenodepolicies[us-east-1-policy]]% intermediatestorage
[bright92->cmjob[cmjob]->storagenodepolicies[us-east-1-policy]->intermediatestorage]% show
Parameter          Value
-----
Bucket name        bright921b86bdc32219494f9a21
Max object lifetime 4w 2d
Region              us-east-1
Revision
Type                 AWSIntermediateStorage
SecGroupFSx          sg-0f1fe4fc6d3d49e66
Default FSx Instance Capacity (GiB) 1200
Max FSx Instance Capacity (GiB)     7200
Max FSx Instance Count Per User     5
[bright92->cmjob[cmjob]->storagenodepolicies[us-east-1-policy]->intermediatestorage]%
```

By default the S3 bucket storage expires after 30 days.

Cloud jobs running under cmjob are listed under the cloudjobs submode:

```
[root@bright92 ~]# cmsh
[bright92]% cmjob
[bright92->cmjob[cmjob]]% cloudjobs
[bright92->cmjob[cmjob]->cloudjobs]% list
Name (key)  jobStatus          storageNode          user
-----
slurm-35    Error: Job failed. Exit code: 0. Status: FAILED  us-east-1-cstorage001  fred
slurm-36    Error: Failed to acquire storage node: Failed t+  us-east-1-cstorage001  fred
slurm-37    Running...
```

4.3.2 Integration Of cmjob With AWS FSx For Lustre

FSx for Lustre is a high-performance highly scalable distributed file system that is available as a cloud service within some AWS regions. A Bright cluster that has burst into such a region can use FSx for Lustre to create a shared storage volume that can be read from, and can be written to, by many compute nodes simultaneously.

On a cluster that has burst into such a region, cmjob can provide workload managers with an FSx for Lustre instance to store input and output data.

Sequential workload manager jobs can then continue to use the same FSx for Lustre instance. This means that the output of one job can immediately become the input of the next one without having to transmit the data to and from an S3 bucket, or to and from the head node.

Additionally, workload manager jobs that run on multiple compute nodes in parallel can obtain their shared input from the same FSx for Lustre instance.

Providing shared storage to cloud compute nodes via FSx for Lustre is an alternative to providing it via cloud storage nodes (section 4.3). The storage node approach is not sufficiently scalable when there are more than several dozen compute nodes working simultaneously with the same storage node. FSx for Lustre is significantly more scalable and far more performant than storage nodes—although at a higher cost.

The cluster manager currently offers three different methods of integrating cmjob with FSx for Lustre:

1. *On-demand FSx*: An FSx file system is created on a per-job basis and is deleted automatically when the job completes.
2. *User-managed FSx*: A user creates an FSx instance and then submits one or more jobs that use that same FSx instance. These jobs can execute in sequence or simultaneously. When the last job has finished, the user is responsible for deleting the FSx instance.
3. *Admin-managed FSx*: An administrator creates an FSx instance and shares it with one or more users. These users are able to use the instance in the same way as with User-managed FSx, but they cannot delete the instance or see each other's files.

Prerequisites

To be able to use the integration of cmjob with FSx for Lustre, the following requirements need to be met:

- The cluster must be bursting into an AWS region that supports FSx for Lustre. AWS does not offer this feature in all regions. The AWS documentation at <https://aws.amazon.com/about-aws/global-infrastructure/regional-product-services/> describes the regions that support FSx for Lustre.
- AWS needs to offer Lustre installation packages for the operating system and kernel that is used to extend into AWS. While the necessary Lustre package could perhaps be obtained directly from the Lustre project, it cannot be guaranteed that these packages are compatible with the FSx for Lustre file systems that are offered by AWS. The AWS packages are built and tested to work only with specific kernel versions.
- At the time of writing (May 2020), the supported operating systems are CentOS and Redhat 7.5, 7.6, 7.7. A list of supported operating systems as well as the packages for installing the Lustre client for such systems can be found at <https://docs.aws.amazon.com/fsx/latest/LustreGuide/install-lustre-client.html>.

Enabling cmjob integration with FSx for Lustre:

The integration of cmjob with FSx for Lustre can be accomplished in two ways, either:

- through the cm-cloud-storage-setup wizard (section 4.3.1)

or

- manually

Enabling `cmjob` integration through the wizard: When running `cm-cloud-storage-setup`, the administrator is asked to choose if FSx support should be enabled. If it is set to be enabled, then:

- If FSx support is not available, then the administrator is informed that one of the requirements was not met (page 71 under the heading “Prerequisites”).
- If FSx support is available, then no further action is required from the administrator.

After the deployment has finished, all users with the `createcmjobcertificate` property set to `yes` can create user-managed and on-demand FSx volumes through `cmjob`. These volumes can then be used for running jobs.

Enabling `cmjob` integration manually: The manual integration approach should be followed when `cmjob` has already been configured on a cluster. That is, if the `cm-cloud-storage-setup` tool has already been run but the cluster has been running without FSx support so far.

Two separate actions need to be executed to manually add FSx for Lustre integration:

1. Installation of the required packages to the images

The AWS documentation should mention the packages that are required to install the Lustre Client. Often these two packages are needed: `kmod-lustre-client` and `lustre-client`. Care must be taken to match the package version to the Linux kernel version of the images. The packages must be installed to the images under `/cm/images` that are used by the director and by all compute nodes within that cluster extension.

Example

At the time of writing (May 2020), for a CentOS 7.7 system, with a 3.10 kernel, the instructions at <https://docs.aws.amazon.com/fsx/latest/LustreGuide/install-lustre-client.html> suggested the following steps:

```
[root@bright92 ~]# cm-chroot-sw-img /cm/images/<image used by director and compute nodes>
...
[root@bright92 /]# wget https://fsx-lustre-client-repo-public-keys.s3.amazonaws.com/\
fsx-rpm-public-key.asc -O /tmp/fsx-rpm-public-key.asc
...
[root@bright92 /]# wget https://fsx-lustre-client-repo.s3.amazonaws.com/el/7/\
fsx-lustre-client.repo -O /etc/yum.repos.d/aws-fsx.repo
[root@bright92 /]# rpm --import /tmp/fsx-rpm-public-key.asc
...
[root@bright92 /]# vi /etc/yum.repos.d/aws-fsx.repo

    change references from el/7/ to el/7.7/ and exit out of editor

[root@bright92 /]# yum clean all
...
[root@bright92 /]# yum install -y kmod-lustre-client lustre-client
...
[root@bright92 /]# exit
```

2. Addition of the FSx tokens to the `cloudjob` profiles

Every user that should be able to create FSx for Lustre instances should have their `createcmjobcertificate` property set to `yes`. Then, one or both of the following FSx tokens should be appended to the `cloudjob` profile:

- ON_DEMAND_FSX_TOKEN
- USER_MANAGED_FSX_TOKEN.

Example

A user, fred is already using cluster extension with AWS, but without FSx. Now the user would like to launch and manage FSx storage on demand.

The administrator should generate the cmjob certificate for the user:

```
[bright92->user[fred]]% set createcmjobcertificate yes; commit
```

The administrator should also add the desired tokens to the cloudjob profile:

```
[bright92]% profile use cloudjob
[bright92->profile*[cloudjob*]]% append tokens ON_DEMAND_FSX_TOKEN USER_MANAGED_FSX_TOKEN
[bright92->profile*[cloudjob*]]% get tokens
SUBMIT_CLOUD_JOB_DESCRIPTION_TOKEN
GET_CLOUD_JOB_DESCRIPTION_TOKEN
ON_DEMAND_FSX_TOKEN
USER_MANAGED_FSX_TOKEN
[bright92->profile*[cloudjob*]]% commit
```

The token assignment is global, and not per-user.

When the two preceding actions have been carried out, the director and all compute nodes should be rebooted. A user should then be able to create and submit jobs with a user-managed FSx instance, or submit jobs with an OnDemand FSx instance, depending on which tokens were assigned to the cloudjob profile.

Configuration

Through cmsh, an administrator can set profile tokens (section 6.4 of the *Administrator Manual*) to control how users can work with FSx for Lustre. An administrator can also set quotas that control how many FSx instances a user can have simultaneously, and how large these FSx instances can be. The aim of this is to help manage costs.

Profile tokens: The following profile tokens are available for user management in FSx for Lustre:

- ON_DEMAND_FSX_TOKEN: allows a user to use the `--on-demand-fsx` flag when submitting jobs with cmjob.
- USER_MANAGED_FSX_TOKEN: allows a user to create, manage and delete FSx instances.
- DELETE_ANY_FSX_INSTANCE_TOKEN: allows a user to delete FSx instances that are owned by other users. Normally reserved for root only.
- LIST_ALL_FSX_INSTANCES_TOKEN: allows a user to see FSx instances owned by other users that are not shared with that user. Normally reserved for root only.
- SHARE_FSX_INSTANCE_TOKEN: allows a user to share FSx instances with other users. Only the owner is allowed to share it. Normally reserved for root only.

Settings: The following `cmsh` navigation path:

```
cmsh→cmjob→storagenodepolicies→use <policy>→intermediatestorage
```

leads to these storage parameters:

- Max FSx Instance Capacity (GiB)
- Max FSx Instance Count Per User

which control quota limits for FSx instances.

Each quota affects both on-demand and user-managed FSx instances. So if a user has already reached the maximum number of user-managed FSx instances, then the user cannot submit a job that uses an OnDemand FSx instance.

The same navigation path also leads to the storage parameter:

- Default FSx Instance Capacity (GiB)

which controls the default capacity when a user or admin creates a user-managed or admin-managed FSx instance.

Usage

As listed earlier, the three methods that the cluster manager provides for `cmjob` integration with FSx for Lustre are:

1. on-demand FSx,
2. user-managed FSx, and
3. admin-managed FSx.

How to run these methods using `cmjob` is covered in the next sections.

Using on-demand FSx: When using `cmjob` to submit a job, a user can now choose whether to use EBS-backed storage nodes or an FSx for Lustre file system to host the input data and output data. For a user there is little difference between how two shared storage options are used, besides their performance.

The steps are:

1. an EBS volume or FSx for Lustre file system is created as shared storage,
2. the input data is copied from the head node to this shared storage
3. all compute nodes chosen by the workload manager mount this shared storage, and then run their jobs,
4. storing their output data on the same shared storage.
5. the output data is uploaded from the shared storage to the head node
6. the EBS volume or FSx for Lustre file system is deleted.

Submitting a job to run with storage nodes is the default.

If a user wants a job to use FSx for Lustre, then the user must set the `--on-demand-fsx` flag when submitting the job:

Example

```
cmjob submit --on-demand-fsx job.sh
```

The capacity of the on-demand FSx instance is determined by doubling the size of the input data. This calculation takes into account both the data uploaded from the head node, and labeled data downloaded from an S3 bucket. If the user thinks that the calculated capacity is not large enough to hold the output data (the output includes temporary data), then the capacity can be increased with the `--expected-output-size` option. The specified size is combined with the size of the input data and rounded up to the nearest valid FSx volume size. The option also works for EBS storage.

Using user-managed FSx: cmjob with a user-managed FSx file system operates differently from an on-demand system. With user-managed FSx, the user is responsible for creating and deleting the FSx file system.

In some cases this can be more expensive than using the on-demand approach, especially if the user forgets to delete an FSx instance after no longer needing it.

However with user-managed FSx a user can run multiple concurrent jobs with the same FSx file system. It is also possible to run multiple jobs in sequence, each using the output of the previous job as input, without having the overhead of copying files over from the FSx file system to an S3 bucket, and vice versa. Depending on the size of the workload, this option may be cheaper, or more desirable, than on-demand FSx.

To create an FSx instance, the user executes cmjob with the `create-fs-instance` option as follows:

Example

```
cmjob create-fsx-instance <name> --capacity <capacity>
```

`<name>` can be a sequence of alphanumeric characters and dashes, and `<capacity>` is the total size of the FSx file system in gigabytes and is ideally set to a multiple of 1200, to prevent rejection by AWS. If not specified, the default value is used. The name does not have to be unique.

To delete an FSx instance, the user can run cmjob with the `delete-fsx-instance` option:

Example

```
cmjob delete-fsx-instance <name or FSx ID>
```

If the name is not unique, then the user can always specify the FSx ID. The ID can be found using the `list-fsx-instances` option. This lists all existing FSx instances, their names, unique IDs and statuses:

Example

```
cmjob list-fsx-instances
```

Once the FSx instance has reached a status of Available (which can take a few minutes), it is possible to submit a job with this instance.

Example

```
cmjob submit job.sh --fsx-instance <name or FSx ID>
```

Using admin-managed FSx: Using cmjob with an admin-managed file system is very similar to using it with a user-managed file system. The main difference is that the admin is responsible for creating and deleting the file system, and that the file system of the admin is shared with specific users. To share the file system, the `share-fsx-instance` option can be run by the admin, together with the `--with` option, as follows:

Example

```
cmjob share-fsx-instance <name or FSx ID> --with <user names>
```

Users do not need FSx-specific tokens to submit a job with an FSx instance. Using this approach for user-managed FSx instances gives the cluster administrator more control over the creation and deletion of FSx instances.

To stop sharing an FSx instance, the admin can run the `--stop-sharing` option:

Example

```
cmjob share-fsx-instance <name or FSx ID> --stop-sharing
```

Tracking FSx costs: All FSx instances created via `cmjob` have a `BCM Owner` tag assigned to them. This tag allows the cluster administrator to track the FSx costs on a per-user basis using AWS's cost management capabilities.

4.4 Miscellaneous Cloud Tools

4.4.1 Setting Exclude Lists With `excludelistsnippets`

The `excludelistsnippets` submode allows extra exclude list entries to be created and configured for a provisioned file system.

These extra exclude list snippets are added to the regular exclude lists described in section 5.6 of the *Administrator Manual*. The addition of these exclude list snippets to the regular lists is done by setting a mode parameter to the snippets. The mode parameter sets the exclude list that is associated with an exclude list snippet, as indicated by the following table:

Mode	Exclude list
sync	excludelistsyncinstall (active by default)
full	excludelistfullinstall
update	excludelistupdate (active by default)
grab	excludelistgrab
grab new	excludelistgrabnew

An exclude list snippet with an associated mode parameter behaves as if its entries are run along with the regular exclude list that is associated with it.

For example, to exclude the files `/useless/test1` and `/useless/test2`, a snippet called `test` may be created as follows:

Example

```
[bright92->fspart]% use /cm/shared
[bright92->fspart[/cm/shared]]% excludelistsnippets
[bright92->fspart[/cm/shared]->excludelistsnippets]%
[bright92->fspart[/cm/shared]->excludelistsnippets]% add test
[bright92->fspart*[/cm/shared*]->excludelistsnippets*[test*]]% set modefull yes
[bright92->fspart*[/cm/shared*]->excludelistsnippets*[test*]]% set excludelist
[bright92->fspart*[/cm/shared*]->excludelistsnippets*[test*]]% set excludelist /useless/test1
[bright92->fspart*[/cm/shared*]->excludelistsnippets*[test*]]% append excludelist /useless/test2
[bright92->fspart*[/cm/shared*]->excludelistsnippets*[test*]]% show
```

Parameter	Value
-----	-----
Lines	2
Name	test
Revision	

```
Exclude list          /useless/test1,/useless/test2
Disabled              no
No new files          no
Mode sync             yes
Mode full             yes
Mode update           yes
Mode grab             no
Mode grab new         no
```

When the test snippet is used, its corresponding `.rsync` file has the following configuration:

```
[root@bright92 cmd]# grep useless /var/spool/cmd/*shared.rsync

- /useless/test1
- /useless/test2
```

4.4.2 The provisioningassociations Mode

The provisioningassociations mode is not strictly restricted to cloud use, because it can also be used outside the cloud.

It allows direct access to provisioning associations via `cmsh`. The provisioningassociations mode can be used to set properties for the following file systems:

1. `/cm/shared`: as used by the cloud director
2. `/cm/shared`: as used by the edge director
3. `/tftpboot`: as used by the boot role
4. `/cm/node-installer`: as used by the boot role
5. `<image>`: for nodes with a provisioning role: for the image-to-image rsync to other provisioning nodes

The exclude lists for standard image-to-node sync to a regular (non-provisioning) node cannot be altered this way, and should be done in the normal category exclude list way (section 5.6 of the *Administrator Manual*), or via `excludelistsnippets` (section 4.4.1).

The trigger command in `fspart` mode (page 214 of the *Administrator Manual*) triggers an update for a non-image partition. It is not needed for images under `/cm/image`, such as item 5 in the exclude list items that the provisioningassociations mode can be used for (page 77).

Setting Properties Of Edge Director FSParts

The provisioning associations properties can be accessed for an edge director as follows:

Example

```
[bright92]% device use edge-director
[bright92->device[edge-director]]% roles
[bright92->device[edge-director]->roles]% use edgedirector
[bright92->device[edge-director]->roles[edgedirector]]%
provisioningassociations
[bright92->device[edge-director]->roles[edgedirector]->provisioningassociations]% list
FSPart (key)      Sync point      Disabled
-----
/cm/shared                no
[bright92->device[edge-director]->roles[edgedirector]->provisioningassociations]% show /cm/shared
Parameter          Value
```

```

-----
Revision
Sync point
Type                                FSPartBasicAssociation
FSPart                              /cm/shared
On shared storage                    no
Disabled                            no
Backup directory
Is root                             no

```

Setting sync for a non-shared filesystem for an edge director: Edge directors can be configured with high availability (HA) (section 2.1.1 of the *Edge Manual*) during the `cm-edge-setup` run (section 2.1.1 of the *Edge Manual*).

- The administrator can set up `/cm/shared` on the edge directors to be shared via a network attached storage (NAS) that is within the edge site network. This would be similar to how HA head nodes are by default configured with NFS (Chapter 17 of the *Administrator Manual*).

For trying it out, it could even be the NFS from the head node that is the NAS, even though this would probably be a bad design choice in a production environment, because edge sites normally need to be able to function with autonomy from the head node.

- Alternatively, the administrator can set up `/cm/shared` on the edge directors to be non-shared, and regularly sync from the active director to the passive director instead.

If the cluster administrator wants `/cm/shared` on the edge directors not to be shared, then syncing that filesystem part between the edge directors needs to be carried out in some way. If the provisioning association parameter revision is set with a key-value setting of `ha=yes` for the FSPart (page 214 of the *Administrator Manual*) of `/cm/shared`, then CMDaemon takes care of syncing from the active edge director to the passive edge director.

For example, if directors called `my-director` and `my-director2` have been set up during the `cm-edge-setup` HA configuration run, then the settings that instruct CMDaemon to update `/cm/shared` on the passive edge director can be set up as follows in `cmsh`:

Example

```

[root@bright92 ~]# cmsh
[bright92]% device use my-director
[bright92->device[my-director]]% roles
[bright92->device[my-director]->roles]% use edgedirector
[bright92->device[my-director]->roles[edgedirector]]% provisioningassociations
[bright92->device[my-director]->roles[edgedirector]->provisioningassociations]% list
FSPart (key)      Sync point      Disabled
-----
/cm/shared                no
[bright92->device[my-director]->ro...sioningassociations]% use /cm/shared
[bright92->device[my-director]->ro...sioningassociations[/cm/shared]]% set revision ha=yes
[bright92->device*[my-director*]->...sioningassociations*[/cm/shared*]]% commit
[bright92->device[my-director]->ro...sioningassociations[/cm/shared]]% device use my-director2
[bright92->device[my-director2]->r...sioningassociations[/cm/shared]]% set revision ha=yes
[bright92->device*[my-director2*]-...sioningassociations*[/cm/shared*]]% commit
[bright92->device[my-director2]->r...sioningassociations[/cm/shared]]%

```

4.5 Connecting To AWS With Direct Connect Or A Hardware VPN

For simple configurations, the cluster manager recommends, and provides, OpenVPN by default for cluster extension cloudbursting VPN connectivity. If there is a wish to use Direct Connect or a hardware VPN (for example, an IPSec tunnel), then the cluster manager can be configured to work with those.

The AWS cluster extension always runs in an AWS Virtual Private Cloud (VPC). In the default deployment scenario, the head node communicates with the cloud nodes using an OpenVPN connection between the head node and the cloud director. In the case of a Direct Connect connection or a hardware VPN, the head node can be configured to communicate directly with the cloud director and cloud nodes.

Setting up Direct Connect or a VPN for a cluster extension can be carried out according to these three steps:

1. VPC creation (section 4.5.1). This step can be skipped if an existing VPC is to be used.
2. Connecting the local network to the VPC (section 4.5.2). The connection can be with, for example, Direct Connect, or a hardware VPN. This step can be skipped if the local network is already connected to an existing VPC via a Direct Connect or a hardware VPN connection.
3. Configuring and deploying the cluster extension (section 4.5.3).

4.5.1 Creating a VPC

The Amazon Virtual Private Cloud (VPC) is a logically isolated section of the AWS cloud. A VPC allows complete control over the networking environment for cloud resources used by the cluster extension. The VPC enables the cloud director and cloud nodes to securely communicate with each other and can be extended to the local network of the cluster. Documentation for Amazon VPC can be found at:

<https://docs.aws.amazon.com/vpc/latest/userguide/what-is-amazon-vpc.html>

A new VPC can be created and configured for the cluster extension as follows:

1. After logging in to the AWS management console, <https://console.aws.amazon.com/console/>, the following clickpath can be followed:
Services→VPC→VPC Dashboard→VPCs→Create VPC.
2. An IPv4 CIDR block can be set to a desired range. This range should not conflict with the address space used on-premises. A possible range could be, for example: 10.42.0.0/16
3. Once the VPC range is set, a subnet can be set via the navigation options under:
VIRTUAL PRIVATE CLOUD→Subnets→Create subnet.
4. The VPC created in step 2 is selected as the VPC during the Create subnet dialog. An IPv4 CIDR block that is a subnet of the VPC range must also be defined in the Create subnet dialog. A possible subnet range would be, for example: 10.42.0.0/24

4.5.2 Connecting The Local Network To The VPC

Amazon offers two options to connect the local network to the VPC: Direct Connect and VPN.

Connecting Via Direct Connect

To connect the local network to the VPC via Direct Connect requires a private virtual interface. Amazon's instructions to use AWS Direct Connect to access a VPC are at:

<https://docs.aws.amazon.com/directconnect/latest/UserGuide/Welcome.html>

Connecting Via A Site-To-Site Connection Using A VPN

Connecting an on-premises network to the virtual network using a VPN requires an *Amazon Site-to-Site connection*. Amazon's instructions for configuring a site-to-site VPN connection are at:

<https://docs.aws.amazon.com/vpn/latest/s2svpn/SetUpVPNConnections.html>

The site-to-site connection consists of 4 components:

1. a customer gateway (routes traffic from VPC to local network)
2. a target gateway (routes traffic from local network to VPC)
3. a security group
4. a connection

The target gateway can either be a virtual private gateway or a transit gateway, depending on the configuration of the other AWS resources.

If the customer gateway device does not support BGP, then the site-to-site connection needs to be configured for static routing. The default Static IP Prefixes are: 10.141.0.0/16, 192.168.200.0/24.

4.5.3 Configuring And Deploying The Cluster Extension

Once IP connectivity from on-prem to the AWS virtual network is running, the final step is creating the cluster extension using the newly created site-to-site connection.

Getting Through Shorewall

First, the firewall rules on the head node must be adjusted to accept traffic from the subnet. The file `/etc/shorewall/rules` can be edited so that the `net` section allows packets from the CIDR subnet. A quick and dirty way to do it is to append to the file with:

```
[root@bright92 ~]# echo "ACCEPT net:<subnet CIDR> fw - -" >> /etc/shorewall/rules
[root@bright92 ~]# shorewall reload
```

Cluster Extension Advanced Settings Configuration

A cluster extension can now be created using the `cm-cluster-extension` utility in TUI mode as explained in section 4.1.1, page 57.

However, on reaching the summary screen (figure 4.13, page 62), the cluster administrator should not immediately select the `Save config & deploy` option, but should first go to the `Advanced settings` option, which opens up an `Advanced plugin configuration` screen (figure 4.24):

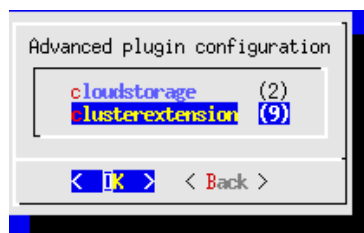


Figure 4.24: Cluster Extension Configuration Processing: Advanced Plugins Screen

The `clusterextension` option should be selected, which opens up an advanced options settings screen (figure 4.25):

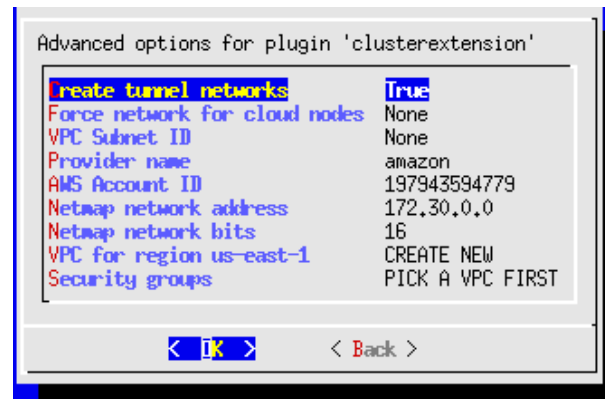


Figure 4.25: Cluster Extension Configuration Processing: Advanced Plugins For 'clusterextension' Options Screen

In this screen:

- the `Create tunnel networks` option should be set to `False`
- the VPC for region `<region>` should be set to the VPC created for the cluster extension. The cluster extension is what is being connected to via Direct Connect or via a site-to-site connection
- The `Security groups` to use should be set for the cloud nodes and the cloud director.

Custom Security Groups Configuration

For the security group it is important to realize that the default security groups, as created by the cluster extension utility, do not accept traffic from the IPSec tunnel. It is recommended to create a custom security group, and to use that for both the director and the nodes. To create this security group:

1. From the AWS management console, the following clickpath is followed:

VPC Dashboard→Security Groups→Create security group

2. The cluster extension VPC is selected
3. A new inbound rule is added, to accept all traffic from the cluster and the VPC. For example: 192.168.200.0/24 and 10.42.0.0/16.

The TUI advanced settings screens can be backed out of by selecting `Back` twice. The option `Save config & deploy` can then be selected to create the cluster extension.

Cloud Node Certificate Autosigning

By default the cluster manager does not issue certificates for nodes on the external network. This means that for cloud nodes the certificates need to be issued manually, once for every new cloud node.

Alternatively, to automatically sign certificate requests by cloud nodes, autosign can be enabled by the administrator for external networks. Autosigning may be a security concern, as this allows anyone on the external network to request a node certificate. Autosign can be enabled on `externalnet` in `cmsh` as follows:

```
[root@bright92~]# cmsh
[bright92]% network
[bright92->network]% set externalnet allowautosign always
[bright92->network]% commit
```

The cluster extension can now be deployed as explained in section 4.1.2.

5

Cluster Extension Cloudbursting With Azure

5.1 Introduction To Cluster Extension Cloudbursting With Azure

Cluster extension cloudbursting with AWS is covered in Chapter 3, where a GUI approach is described, and is also covered in section 4.1, where a text interface approach is described,

Cluster extension cloudbursting with Microsoft Azure is covered in this chapter (Chapter 5). The procedure is somewhat similar to that for AWS:

- The prerequisites to cloudburst into Azure are the same as those of cloudbursting into AWS, and are as previously described on page 37.

In summary, the prerequisites are as follows:

- an activated cluster license should be ensured
 - an Azure account should exist
 - the cluster manager must be registered as an Azure AD application (page 85)
 - UDP port 1194 should be open
- The techniques to cloudburst into Azure are also the same as that of cloudbursting into AWS, and are as previously described on page 38.

In summary, the techniques are as follows:

- a cloud director is set up in the cloud then started up
 - cloud nodes are then provisioned from the cloud director
- The deployment of cluster extension cloudbursting for Azure is carried out in a similar way to how it is done for AWS.

In summary, the tools used to deploy cluster extension cloudbursting for Azure are as follows:

- the TUI `cm-cluster-extension` utility, run from the command line (section 5.2)
- the Azure Wizard, run from Bright View.

5.2 Cluster Extension Into Azure

Section 4.1.1 introduces the `cm-cluster-extension` TUI wizard, which is run on the head node when configuring a cluster extension for Azure or AWS. After the cluster extension configuration is completed, the cluster is capable of extending into the cloud by having cloud nodes power up into the cloud. This section (section 5.2) covers how `cm-cluster-extension` can be run for Azure, and how clouds nodes can be deployed for Azure.

There is also a Bright View browser-based wizard for cluster extension into Azure. The browser wizard is accessible via the clickpath: Cloud→Azure→Azure Wizard. If the browser wizard is used, then the documentation here (section 5.2) for `cm-cluster-extension` can be followed since it is a very similar procedure.

Running The `cm-cluster-extension` Command Line Options As A Shell Dialog

The `cm-cluster-extension` utility can be run as a dialog from the command line environment, as described in the section starting from page 55. Running it as a TUI session is however easier, and is described next.

Running The `cm-cluster-extension` TUI Dialog For Cluster Extension Into Azure

The `cm-cluster-extension` utility can be run as a more user-friendly TUI session within the text environment. In a session described starting from page 57, an AWS cluster extension configuration is generated and deployed. In the session that is now described here, an Azure cluster extension configuration is generated and deployed instead:

As in the AWS case, the `cm-cluster-extension` script is run without options, to bring up the TUI main screen (figure 5.1):

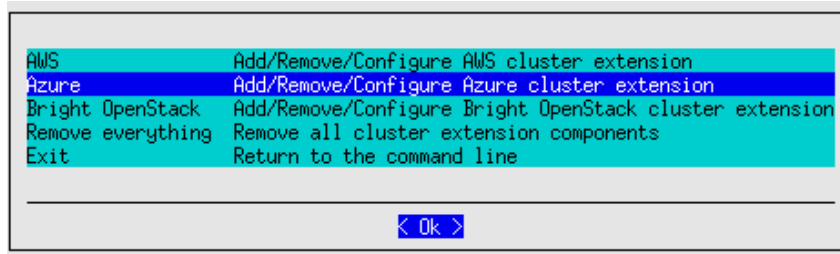


Figure 5.1: Configuration Processing With `cm-cluster-extension`: Azure Selection

After Azure is selected, a new Azure provider can be set if none is already set up. If an Azure region has been configured previously, then its configuration can be removed. Testing only the network connectivity to the various Azure regions is also possible (figure 5.2).



Figure 5.2: Configuration Processing With `cm-cluster-extension`: Add, Unconfigure, Or Test

If a new Azure provider is selected, then a screen comes up asking for the credentials for Azure (figure 5.3):

```

Provide your Azure credentials

"Provider name" is a custom, human readable, string.

Provider name azure
Subscription ID 2b8fad2b-aaf1-425a-bf45-36cfd495107e
Tenant ID 8cb88849-6e18-46d6-b0fa-551a47a31681
Client ID afe23456-06b9-4241-80a9-17ba71ccb911
Client Secret MNLJe/6bkowCq40zfs09Jz7HRwL7rvPEmpkugTr9IuE=

< Ok > < Back >

```

Figure 5.3: Configuration Processing With `cm-cluster-extension`: Azure Credentials

The inputs that are required here are Azure credentials, and exist for an activated Azure account which has had the cluster manager registered as an application.

How the cluster manager can be registered as an Azure application: Registration of an Azure application can be carried out with the Azure portal at <https://portal.azure.com>. The portal is accessible with an active Azure account. After logging in, navigating to locations via clickpaths described next is possible. The steps to ensure a registration are then as follows:

- User settings should first be checked to see if users can register applications. A clickpath to view this is:

Azure Active Directory→User settings→Users can register applications

The state should be set to yes.

- The subscriptions should be checked for permissions. The clickpath to view subscriptions is simply:

Subscriptions

Within the subscription display the role can be viewed to determine if the account has adequate permissions to assign an AD application to a role. The account must have `Microsoft.Authorization/*/Write` access to assign an Azure AD application to a role. Assigning the Contributor role allows this access. Role-based access control (RBAC) is discussed at <https://docs.microsoft.com/en-us/azure/active-directory/role-based-access-control-manage-access-rest>

- The user, for example, `<fred>`, should be checked for permissions. A suitable clickpath would be:

Azure Active Directory→Users and groups→`<fred>`→Azure resources

The Azure resources for the user, who is assigned the subscription, should show the role and assignment value. Suitable settings would be:

```

ROLE: Contributor
ASSIGNED TO: <fred>

```

- Network, Compute, and Storage namespaces must be registered.

A convenient way to check that this is the case, is to use the Azure CLI tool from the head node. Instructions for installing it are available at <https://docs.microsoft.com/en-us/cli/azure/install-azure-cli>.

After installation, a list of namespaces can be seen by running:

```
az provider list --query "[].{Provider:namespace, Status:registrationState}" --out table
```

If the tool is run for the first time, then the tool gives the user a code and a URL. Using these, the user can authenticate the head node via a web browser.

The required namespaces can be registered, if needed, with:

```
az provider register --namespace Microsoft.Network --wait
az provider register --namespace Microsoft.Compute --wait
az provider register --namespace Microsoft.Storage --wait
az provider register --namespace Microsoft.ADHybridHealthService --wait
az provider register --namespace Microsoft.Authorization --wait
az provider register --namespace Microsoft.Billing --wait
az provider register --namespace Microsoft.ClassicSubscription --wait
az provider register --namespace Microsoft.Commerce --wait
az provider register --namespace Microsoft.Consumption --wait
az provider register --namespace Microsoft.Features --wait
az provider register --namespace Microsoft.MarketplaceOrdering --wait
az provider register --namespace Microsoft.Resources --wait
az provider register --namespace Microsoft.support --wait
```

- Create Azure Active Directory application:

With all the permissions in place, the application can now be registered via the clickpath: Azure Active Directory→App registrations

The application name and application URL values can be arbitrary since they are not actually used by cm-cluster-extension. The application type should be set to: Web app / API

- The Client ID and Client Secret values are only available to Azure admin users, or the Azure application owners. Regular users cannot obtain these values.

If the security settings allow Azure users to define their own Azure applications, then they can in theory create their own Azure application under the subscription, and use the data for that Azure application to get a Client ID and Client Secret.

The credentials can now be picked up from the Azure portal account via the clickpaths shown in the following table:

TUI	Clickpath From Azure Portal Menu After Azure Portal Login
Subscription ID	Subscriptions→SUBSCRIPTION ID
Tenant ID	Azure Active Directory→Properties→Directory ID
Client ID	Azure Active Directory→App registrations→APPLICATION ID
Client Secret	Azure Active Directory→App registrations→APPLICATION ID→Keys→[the generated key must be noted]*

*After filling in the DESCRIPTION and EXPIRES fields at the end of this clickpath, and saving the values, the key is generated, and displayed once. The key must be noted down by the user because it cannot be retrieved.

The Provider Name in figure 5.3 can be set to any user-defined value. For Azure, a sensible, if unimaginative value, is simply azure.

To paste the credentials from the clipboard, the cluster administrator may find it helpful to know that a paste to the TUI can usually be carried out with a <shift><insert>.

After checking and accepting the credentials, legal terms may need to be accepted. The Bright Azure integration makes use of several node-installer images which are published in the Azure marketplace. In order to use those images, Azure requires the administrator to accept the legal terms for those images. The script automatically detects if the terms were already accepted in the past, in which case it proceeds

to the next step. If the terms still need to be accepted, then several links to the legal terms are presented, along with a prompt to accept them. The output looks similar to the following (some output ellipsized):

Example

```
#### stage: cx_azure: Ask Terms Acceptance
```

To use Azure VM images, you need to accept the following terms:

```
- License (bcmni-azure-9-2:bcm-ni-azure-9-2-v1): https://download.microsoft.com/download/F/D/8/FD8BA8F...
- Privacy Policy (bcmni-azure-9-2:bcm-ni-azure-9-2-v1): https://www.brightcomputing.com/privacy-policy
- Marketplace Terms (bcmni-azure-9-2:bcm-ni-azure-9-2-v1): https://mpcprodsa.blob.core.windows.net/market...
- License (bcmni-azure-9-2-free:bcm-ni-azure-9-2-v2): https://download.microsoft.com/download/F/D/8/FD8BA...
- Privacy Policy (bcmni-azure-9-2-free:bcm-ni-azure-9-2-v2): https://www.brightcomputing.com/privacy-policy
- Marketplace Terms (bcmni-azure-9-2-free:bcm-ni-azure-9-2-v2): https://mpcprodsa.blob.core.windows.net/mar...
Accept (y/n)?
```

After checking and accepting the legal terms, the administrator is asked to choose a setup type for the wizard. This can be a default setup, or it can be an advanced setup (figure 5.4):

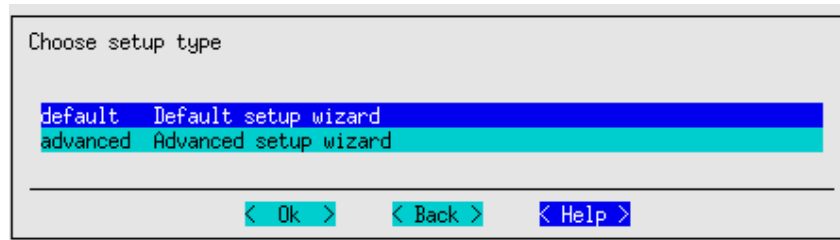


Figure 5.4: Configuration Processing With cm-cluster-extension: Default Setup Or Advanced Setup

The default setup is recommended for most use cases. The default setup configures an OpenVPN network connection to the cluster extension. The advanced setup allows the network connection to the cluster extension to use ExpressRoute (for Azure). or another hardware-based VPN.

After a default or advanced setup has been chosen, the initial number of cloud nodes to be set up in the cloud can be set (figure 5.5). A default of 3 is suggested.

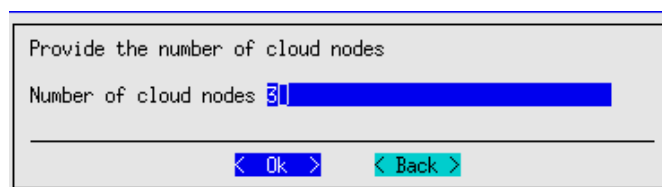


Figure 5.5: Configuration Processing With cm-cluster-extension: Setting The Initial Number Of Cloud Nodes

After setting an initial number of cloud nodes, the major regions into which these can be deployed are displayed (figure 5.6):



Figure 5.6: Configuration Processing With cm-cluster-extension: Major Regions Selection

After selecting a major region, the available regions under it into which the cloud nodes can be deployed are displayed (figure 5.7):

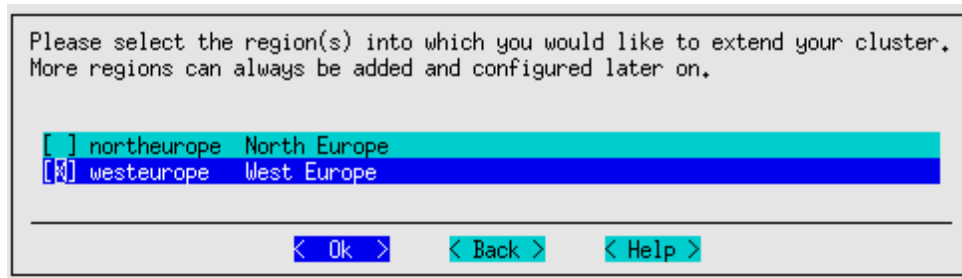


Figure 5.7: Configuration Processing With cm-cluster-extension: Regions Selection

After selecting one or more regions, the default region into which the cloud nodes can be deployed can be set (figure 5.8):

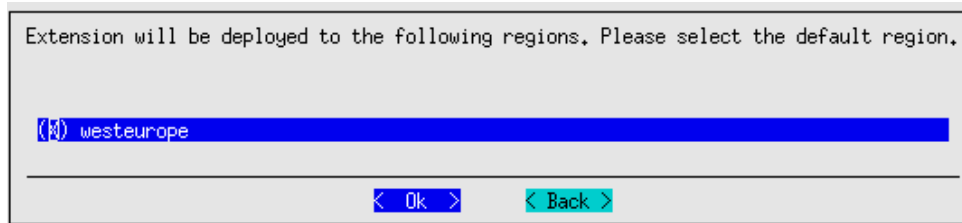


Figure 5.8: Configuration Processing With cm-cluster-extension: Default Region Selection

Azure regions are regional data centers, and the cloud director for a region helps manage the regular cloud nodes in that region when the cluster is extended into there.

After setting the regions up, a default instance type must be set for the regular cloud nodes. The

instance type family is first set. For example, the Dv3 type is an instance family type that can be set (figure 5.9):

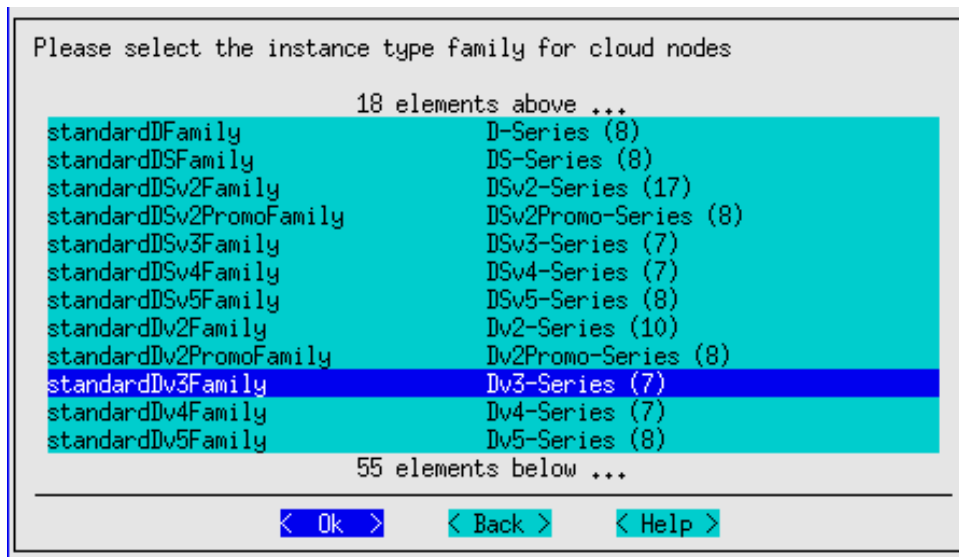


Figure 5.9: Configuration Processing With cm-cluster-extension: Instance Type Family

After selecting the instance type family, the specific default instance type can be set for the regular cloud nodes. The `Standard_D2_v3` type, (2 cores, 8GB RAM) is a common default that can be used (figure 5.10):

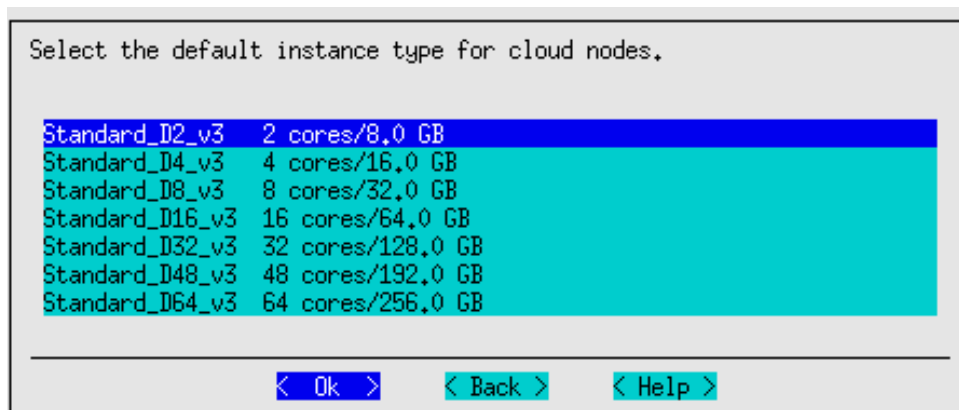


Figure 5.10: Configuration Processing With cm-cluster-extension: Default Instance Type

Azure intance types are documented online at

- <https://docs.microsoft.com/en-us/azure/virtual-machines/windows/sizes> and
- <https://docs.microsoft.com/en-us/azure/virtual-machines/vm-naming-conventions>.

Eventually, when the wizard has finished deployment of the Azure instance, a summary listing of the supported types can be viewed in cmsh with:

```
[root@b80 ~]# cmsh -c "cloud use azure ; types ; list"
```

or via the Bright View clickpath:

Cloud→Azure→Azure VM Sizes

After setting the default instance type for the regular cloud nodes, screens similar to figures 5.9 and 5.10) are displayed to guide the administrator into setting a default instance type screen for the cloud director node type. The same default instance type suggested for regular cloud nodes earlier, `Standard_D2_v3`, is typically adequate for cloud director nodes too, for small clusters.

After having set the default instance types for the regular and cloud director nodes. the VPN connection to the cluster extension is configured.

If the advanced setup (figure 5.4) was selected earlier in the wizard, then the administrator can select the type of VPN connection to the cluster extension (figure 5.11):

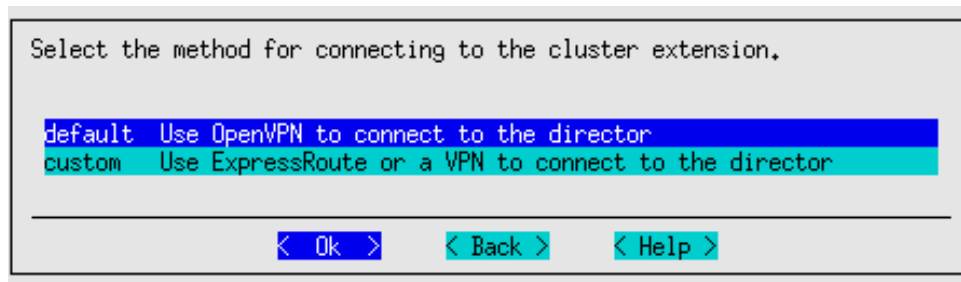


Figure 5.11: Configuration Processing With `cm-cluster-extension`: Custom VPN Configuration

- This can be the OpenVPN option that is automatically configured if the advanced setup is not chosen.
- With the advanced setup it is also possible to configure
 - ExpressRoute (for Azure)
 - or another hardware-based VPN

As part of VPN configuration, the wizard guides the administrator through the process of configuring the cluster extension so that the extension:

- creates a resource group for each region by default. Alternatively, existing resource groups can be used instead.
- creates a subnet per region by default. Alternatively, existing subnets can be used instead, but the cloud director must be able to contact the on-premises head node.
- creates a storage account for each region by default. Alternatively, existing storage accounts can be used per region instead.
- creates a security group for each region by default. Alternatively, existing security groups can be used instead.

After the VPN connection is configured, the summary screen (figure 4.13) is displayed. This lets the administrator look things over before deployment:

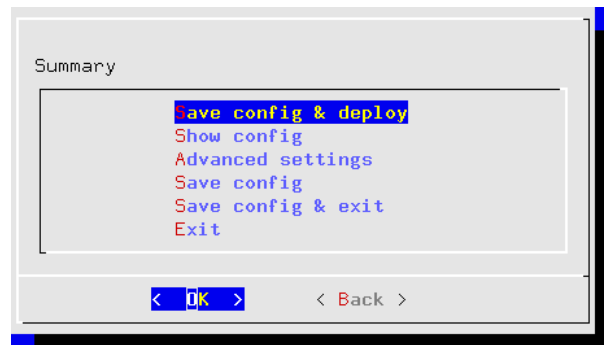


Figure 5.12: Configuration Processing With `cm-cluster-extension`: Azure Options Summary Screen

The summary screen allows the following:

- An administrator can just go ahead, save the configuration, and deploy the cluster extension. This is usually the expected action.
- The configuration settings YAML file can be viewed. To scroll, the PageUp and PageDown keys are used.
- An advanced configuration settings screen can be accessed in addition to the standard settings. The advanced settings are usually left alone.
- The configuration file, *<configuration file>*, can be saved and the TUI can be exited. By default, the value of *<configuration file>* is set to `cm-cluster-extension.conf` in the home directory of the user. On exiting the TUI, deployment with that configuration can be carried out manually by running:

```
cm-cluster-extension -c <configuration file>
```

Deployment Of An Azure Configuration Created With `cm-cluster-extension`

During configuration deployment, as the configuration is processed, text output indicates the progress. At the end of processing, the message

```
Azure Cloud extension configuration finished
```

indicates that the cluster has been extended successfully.

No nodes are activated yet within Azure. To start them up, the components of the cluster extension service for Azure must be started up by

- powering up the cloud directors, as introduced for AWS in section 3.2. The procedure for Azure is similar.
- powering on the cloud nodes after the cloud directors are up. This may require first creating new cloud nodes, as introduced for AWS in section 3.3. The procedure for Azure is similar.

When powering up, the cloud director can be installed from scratch (section 3.2), or from a snapshot. For example, running the `power on` command from the device mode of `cmsh` on a head node shows amongst others the following states (some output elided or ellipsized):

Example

```
[bright92->device]% power on westeurope-director
cloud ..... [ PENDING ] westeurope-director
... [notice] bright92: New certificate request with ID: 9
... [notice] bright92: westeurope-director [ INSTALLER REBOOTING ]
... [notice] bright92: westeurope-director [   INSTALLING   ] (node installer started)
```

```
... [notice] bright92: New certificate request with ID: 10 (ldaps)
... [notice] bright92: westeurope-director [ INSTALLER_CALLINGINIT ] (switching to local root)
... [notice] bright92: westeurope-director [ UP ]
```

Example

```
[root@bright92 ~]# ps uww -C rsync | grep -o ' /cm/.*$'
/cm/shared/ syncer@172.21.255.251::target//cm/shared/
```

Tracking Cloud Node Startup From cmsh

The `provisioningstatus` command in the `softwareimage` mode of `cmsh` can be used to view the provisioning status of cloud directors from the head node, or of cloud nodes from the cloud director (some output elided):

Example

```
[root@bright92 ~]# cmsh -c "softwareimage provisioningstatus"
...
+ westeurope-director
...
Up to date images:      none
Out of date images:    default-image
Nodegroups:            westeurope-director-dependents
```

In the preceding output, the absence of an entry for “Up to date images” shows that the cloud director does not yet have an image that it can provision to the cloud nodes. After some time, the last few lines of output should change to something like:

Example

```
+ westeurope-director
...
Up to date images:      default-image
Nodegroups:            westeurope-director-dependents
```

This indicates the image for the cloud nodes is now ready. The image used for a device is defined by the value of `image` under `cloudsettings` for the cloud director, or cloud node:

Example

```
[root@bright92 ~]# cmsh -c "device use westeurope-director; cloudsettings; get image"
marketplace-free-node-installer-image
```

By default, this value is the Azure marketplace image for the current cluster manager version.

With the `-a` option, the `provisioningstatus -a` command gives details that may be helpful. For example, while the cloud director is having the default software image placed on it for provisioning purposes, the source and destination paths are `/cm/images/default-image`:

Example

```
[root@bright92 ~]# cmsh -c "softwareimage provisioningstatus -a"
Request ID(s):          4
Source node:            bright92
Source path:            /cm/images/default-image
Destination node:       westeurope-director
Destination path:       /cm/images/default-image
...
```

After some time, when the shared filesystem is being provisioned, then an indication of progress is shown by the Request ID incrementing, and the source and destination paths changing to the /cm/shared directory:

```
[root@bright92 ~]# cmsh -c "softwareimage provisioningstatus -a"
Request ID(s):      5
Source node:        bright92
Source path:         /cm/shared
Destination node:    westeurope-director
Destination path:    /cm/shared
...
```

After the shared directory and the cloud node software images are provisioned, the cloud director is fully up. Cloud node instances can then be powered up and provisioned from the cloud director. The instances can be started up from scratch (section 3.2), or from snapshot (section 3.4).

Cluster Extension Cloudbursting Logging

All Azure logging goes to the CMDaemon logs in /var/log/cmdaemon, where the CLOUD tag is used to indicate cloud-related operations.

5.3 Cluster Extension Into Azure: Cloud Node Startup From Scratch

This section discusses the configuration of regular cloud node startup from scratch.¹

To *configure* regular cloud nodes in Azure from scratch does not require a working cloud director. However to *boot up* the regular cloud nodes does require that the cloud director be up, and that the associated networks to the regular cloud nodes and to the head node be configured correctly.

If needed, additional cloud provisioning nodes (section 5.2 of the *Administrator Manual*) can be configured by assigning the provisioning role to cloud nodes, along with appropriate nodegroups (page 207 of the *Administrator Manual*) values, in order to create a provisioning hierarchy.

Similarly to how it is done in AWS, the creation and configuration of regular cloud node objects in Azure is conveniently carried out by cloning another regular cloud node, from one of the default cloud nodes already created by the cluster extension wizard (section 5.2). A clickpath to do this cloning in Bright View is:

```
Devices→Cloud Nodes→<cloud node hostname>→↓Clone
```

Cloud node objects can also be created in cmsh as described in section 4.2.

5.4 Cluster Extension Into Azure: shutdown Vs power off

An Azure cloud node has two stopped states:

1. **stopped**: A node running within Azure can be set to this state by running the shutdown command:
 - within the device mode of cmsh
 - with Bright View, using the clickpath:
 Devices → Cloud Nodes → <cloud node hostname> → ↓OS → Shutdown
 - Or by clicking the stop button for that node within the Azure web portal, once.
2. **stopped (deallocated)**: A node running within Azure can be set to this state by running the power off command:

¹The configuration of cloud director and node startup from snapshot is also possible. How to do this for AWS is discussed in section 3.4. Doing this for Azure is rather more complicated and confusing. At the time of writing (August 2017), configuring this is therefore planned as a wizard-assisted option for a future version of the cluster manager, with a priority that depends on the level of interest for this feature from customers.

- within the device mode of `cmsh`
- with Bright View, using the clickpath:
Devices→Cloud Nodes→<cloud node hostname>→↓Power→Off
- Or by clicking on the stop button within the Azure web portal, twice.

Carrying out a `power off` command is like a hard power off command, which can under some unusual conditions cause filesystem corruption. It is therefore safer to run the `shutdown` command first, wait for the node to shut down via the OS. After that, running the `power off` command ensures that the node is deallocated.

From a financial point of view when using Azure, a node that is shut down but not deallocated continues to incur costs. However, a node that is deallocated does not continue to incur costs.

5.5 Submitting Jobs With `cmjob` And Cloud Storage Nodes, For Azure Cluster Extension Clusters

The `cmjob` utility, a job submission wrapper for end users for cluster extension clusters, is introduced and documented for AWS cluster extension in section 4.3. As a summary, its configuration procedure consists of:

- Making sure the `cmdaemon-cmjob` package is installed on the head node and the cloud image
- Ensuring the users that are to use `cmjob` have the `createcmjobcertificate` property set to `yes`
- Making sure that cloud storage nodes are set up. The administrator can run `cm-cloud-storage-setup` to configure the cloud storage nodes.

The details of the configuration procedure for `cmjob` for Azure cluster extension is almost identical to that for AWS. The configuration procedure documented in section 4.3 can therefore also be followed for Azure.

How the end user can use `cmjob` is documented in section 4.7 of the *User Manual*.

5.5.1 Integration Of `cmjob` With Azure NetApp Files

Azure NetApp Files (ANF) is a high-performance highly scalable network file service that is available as a cloud service within most Azure regions. A Bright cluster that has burst into such a region can use ANF to create a shared storage volume that can be read from, and can be written to, by many compute nodes simultaneously.

On a cluster that has burst into such a region, `cmjob` can provide workload managers with an ANF volume to store input and output data.

Sequential workload manager jobs can use the same ANF volume. This means that the output of one job can immediately become the input of the next one without having to transmit the data to and from Azure cloud storage, or to and from the head node.

Additionally, workload manager jobs that run on multiple compute nodes in parallel can obtain their shared input from the same ANF volume.

Providing shared storage to cloud compute nodes via ANF is an alternative to providing it via cloud storage nodes (section 4.3). The storage node approach is not sufficiently scalable when there are more than several dozen compute nodes working simultaneously with the same storage node. ANF is significantly more scalable and far more performant, although at a higher cost.

The cluster manager currently offer three different methods of integrating `cmjob` with Azure NetApp Files:

1. *On-Demand ANF*: An ANF file system is created on a per-job basis and is deleted automatically when the job completes.

2. *User-managed ANF*: A user creates an ANF volume and then submits one or more jobs that use that same ANF volume. These jobs can execute in sequence or simultaneously. When the last job has finished, the user is responsible for deleting the ANF volume.
3. *Admin-managed ANF*: An administrator creates an ANF volume and shares it with one or more users. These users are able to use the volume in the same way as with user-managed ANF, but they cannot delete the volume or see each other's files.

Prerequisite

To be able to use the integration of cmjob with ANF NetApp Files, the cluster must be bursting into an Azure region that supports Azure NetApp Files. Azure does not offer this feature in all regions. The Azure documentation should be checked to see if a region offers ANF for Azure.

Enabling cmjob Integration With Azure NetApp

The integration of cmjob with ANF can be accomplished in two ways, either:

- through the cm-cloud-storage-setup wizard (section 4.3.1)
- or
- manually

Enabling cmjob integration through the wizard: During the cm-cloud-storage-setup wizard run, when the guidance for the Azure extension is being carried out, the administrator is asked if ANF support should be enabled. If the administrator agrees to this, then ANF support is set up. After the deployment has finished, all users that have the createcmjobcertificate property set to yes can then create user-managed and on-demand ANF volumes through cmjob.

Enabling cmjob integration manually: The manual integration approach should be followed when cmjob has already been configured on a cluster. That is, if the cm-cloud-storage-setup tool has been run, but the cluster has been running without ANF support so far.

To add cmjob integration with ANF manually, the following manual action is all that is needed:

Every user that should be able to create ANF volumes should have their createcmjobcertificate property set to yes. Then, one or both of the following ANF tokens should be appended to the cloudjob profile:

- ON_DEMAND_ANF_TOKEN
- USER_MANAGED_ANF_TOKEN.

Example

A user, fred is already using cluster extension with Azure, but without ANF. Now the user would like to be able to launch and manage ANF storage on demand.

The administrator should generate the cmjob certificate for the user:

```
[bright92->user[fred]]% set createcmjobcertificate yes; commit
```

The administrator should also add the desired tokens to the cloudjob profile:

```
[bright92]% profile use cloudjob
[bright92->profile*[cloudjob*]]% append tokens ON_DEMAND_ANF_TOKEN USER_MANAGED_ANF_TOKEN
[bright92->profile*[cloudjob*]]% get tokens
SUBMIT_CLOUD_JOB_DESCRIPTION_TOKEN
GET_CLOUD_JOB_DESCRIPTION_TOKEN
ON_DEMAND_ANF_TOKEN
USER_MANAGED_ANF_TOKEN
[bright92->profile*[cloudjob*]]% commit
```

The token assignment is global, and not per-user.

No directors need to be updated or rebooted. All users with the `createcmjobcertificate` property set to `yes` should then be able to create and submit jobs with a user-managed ANF volume, or submit jobs with an on-demand ANF volume, depending on which tokens were assigned to the `cloudjob` profile.

Configuration

Through `cmsh`, an administrator can use profile tokens (section 6.4 of the *Administrator Manual*) to control how users can work with ANF. An administrator can also set quotas that control how many ANF volumes a user can have simultaneously and how large these ANF volumes can be. The aim of this is to help manage costs.

Profile tokens:

- `ON_DEMAND_ANF_TOKEN`: allows a user to use the `--on-demand-anf` flag when submitting jobs with `cmjob`.
- `USER_MANAGED_ANF_TOKEN`: allows a user to create, manage and delete ANF volumes.
- `DELETE_ANY_ANF_VOLUME_TOKEN`: allows a user to delete ANF volumes that are owned by other users. Normally reserved for root only.
- `LIST_ALL_ANF_VOLUMES_TOKEN`: allows a user to see ANF volumes owned by other users. Normally reserved for root only.
- `SHARE_ANF_VOLUME_TOKEN`: allows a user to share ANF volumes with other users. Only the owner is allowed to share it. Normally reserved for root only.

Settings: The following `cmsh` navigation path

```
cmsh→cmjob→storagenodepolicies→use <policy>→intermediatestorage
```

leads to these storage parameters:

- Max ANF Volume Capacity (TiB)
- Max ANF Volume Count Per User

which control quota limits for ANF volumes for the number and size of ANF volumes, for when a user or an administrator creates a user-managed or administrator-managed ANF volume.

The count is combined. If a user has already reached the maximum number of user-managed ANF volumes, then the user cannot submit a job that uses an on-demand ANF volume.

Also in the same navigation path is the storage parameter:

- Default ANF Volume Capacity (TiB)

which controls the default capacity when a user or admin creates a user-managed or admin-managed ANF volume.

Usage

As listed earlier, the three methods that the cluster manager provides for `cmjob` integration with ANF are:

1. on-demand ANF,
2. user-managed ANF, and
3. admin-managed ANF.

How to run these methods using `cmjob` is covered in the next sections.

Using on-demand ANF: When using `cmjob` to submit a job, a user can choose whether to use an Azure storage volume or an ANF file system to host the input data and output data. For a user there is little difference between the ways in which the two shared storage options are used, beside performance.

The steps are:

1. an Azure storage volume or an ANF file system is created as shared storage,
2. the input data is copied from the head node to this shared storage
3. all compute nodes chosen by the workload manager mount this shared storage, and then run their jobs,
4. storing their output data on the same shared storage.
5. the output data is uploaded from the shared storage to the head node
6. the Azure volume or ANF file system is deleted.

Submitting a job to run with Azure storage nodes is the default.

If a user wants a job to use ANF, then the user must set the `--on-demand-anf` flag when submitting the job:

Example

```
cmjob submit --on-demand-anf job.sh
```

The capacity of the OnDemand ANF volume is determined by doubling the size of the input data. This calculation takes into account both the data uploaded from the head node, and labeled data downloaded from the Azure cloud storage. If the user thinks that the calculated capacity is not large enough to hold the output data (the output includes temporary data), then the user can increase the capacity with the `--expected-output-size` parameter. The specified size is combined with the size of the input data and rounded up to the nearest valid ANF volume size.

Using user-managed ANF `cmjob` with a user-managed ANF file system operates differently from an on-demand system. With user-managed ANF, the user is responsible for creating and deleting the ANF file system.

In some cases, this can be more expensive than using the on-demand approach, especially if the user forgets to delete the ANF volume after no longer needing it.

However, with user-managed ANF a user can run multiple concurrent jobs with the same ANF file system. It is also possible to run multiple jobs in sequence, each using the output of the previous job as input, without having the overhead of the files being copied from the ANF file system to Azure cloud storage, and vice versa. Depending on the size of the workload, this option may be cheaper, or more desirable, than on-demand ANF.

To create an ANF volume, the user can execute `cmjob` with the `create-anf-volume` option:

Example

```
cmjob create-anf-volume <name or ID> --capacity <capacity>
```

Here:

- `<name or ID>` can be a sequence of alphanumeric characters and dashes. It does not have to be unique.
- `<capacity>` is the total size of the ANF file system in terabytes. If not specified, the default value is used. The default value can be managed via:
`cmsh→cmjob→storagenodepolicies→use <policy>→intermediatestorage.`

To delete an ANF volume, a user can run `cmjob` with the `delete-anf-volume` option:

Example

```
cmjob delete-anf-volume <name or ID>
```

To obtain a list of all existing ANF volumes with their names and statuses, the user can run `cmjob` with the `list-anf-volumes` option:

Example

```
cmjob list-anf-volumes
```

Once the ANF volume has reached a status of `AVAILABLE` (which can take a few minutes), it is possible to submit a job with this volume name or ID with the `--anf-volume` option.

Example

```
cmjob submit job.sh --anf-volume <name or ID>
```

Using admin-managed ANF Using `cmjob` with an admin-managed file system is very similar to using it with a user-managed file system. The main difference is that the administrator is responsible for creating and deleting the file system, and that the file system of the administrator is shared with specific users. To share the file system, the `share-anf-volume` option can be run by the administrator, together with the `--with` option, as follows:

Example

```
cmjob share-anf-volume <name or ID> --with <user names>
```

With admin-managed ANF, users do not need any ANF-specific tokens to submit a job with an ANF volume. Using admin-managed ANF volumes instead of user-managed ANF volumes gives the administrator more control over the creation and deletion of ANF volumes.

To stop sharing the ANF volume, the admin can run the `--stop-sharing` option:

Example

```
cmjob share-anf-volume <name or ID> --stop-sharing
```

Tracking NetApp costs: All Azure NetApp Files capacity pools created via `cmjob` have a `BCM Owner` tag assigned to them. This tag allows the cluster administrator to track the NetApp costs on a per-user basis using Azure's cost management capabilities.

5.6 Creating An Azure Cluster Extension Using ExpressRoute Or A Hardware VPN

For simple configurations, the cluster manager recommends, and provides, OpenVPN by default for cluster extension cloudbursting VPN connectivity. If there is a wish to use Direct Connect or a hardware VPN (for example, an IPSec tunnel), then the cluster manager can be configured to work with those.

The Azure cluster extension always runs in an Azure Virtual Network. In the default deployment scenario, the head node communicates with the cloud nodes using an OpenVPN connection between the head node and the cloud director. In the case of an ExpressRoute connection or a hardware VPN, the head node can be configured to communicate directly with the cloud director and cloud nodes.

Setting up ExpressRoute or a VPN for a cluster extension can be carried out according to these three steps:

1. Virtual network creation (section 5.6.1). This step can be skipped if an existing virtual network is to be used.
2. Connecting the local network to the virtual network (section 5.6.2). The connection can be with, for example, ExpressRoute, or a hardware VPN. This step can be skipped if the local network is already connected to an existing virtual network via an ExpressRoute or a hardware VPN connection.
3. Configuring and deploying the cluster extension (section 5.6.3).

5.6.1 Creating A Virtual Network

The Azure virtual network is the fundamental building block for building private networks in Azure. A virtual network allows the cloud director and cloud nodes to communicate with each other securely, and can be extended to the on-premises networks. Documentation for creating a virtual network can be found at:

<https://docs.microsoft.com/en-us/azure/virtual-network/quick-create-portal>

A new virtual network can be created and configured for the cluster extension as follows:

1. After logging in to the Azure portal, <https://portal.azure.com>, from the home page, <https://portal.azure.com/#home>, the following clickpath can be followed:

+ Create a resource→Azure Marketplace→Networking→Virtual network

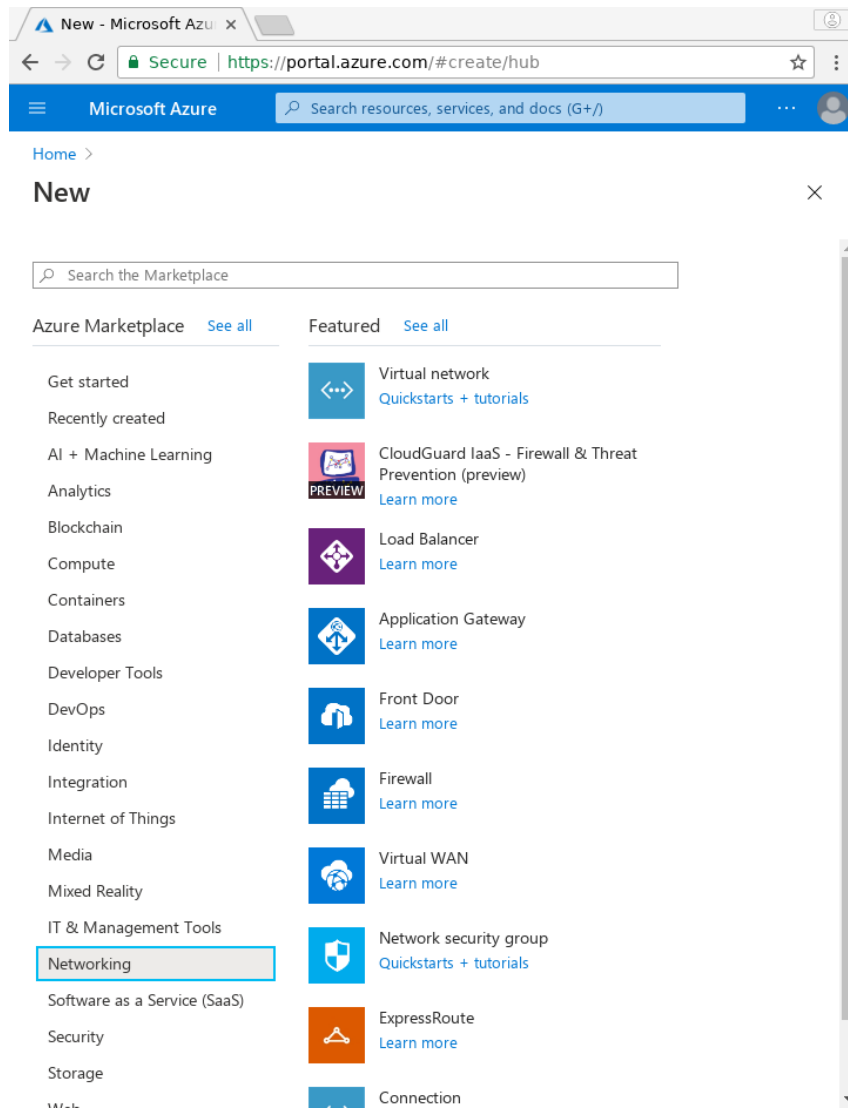


Figure 5.13: Azure Marketplace Networking Screen

2. A resource group should be selected or a new resource group should be created for the virtual network in the Basics tab:

The screenshot shows the 'Create virtual network' wizard in the Azure portal, specifically the 'Basics' tab. The browser address bar shows the URL: <https://portal.azure.com/?quickstart=true#create/Microsoft.VirtualNetwork-ARM>. The page title is 'Create virtual network'. Below the title, there are tabs for 'Basics', 'IP Addresses', 'Security', 'Tags', and 'Review + create'. The 'Basics' tab is selected. The main content area describes Azure Virtual Network (VNet) and provides a link to 'Learn more about virtual network'. Below this, there are two sections: 'Project details' and 'Instance details'. In the 'Project details' section, the 'Subscription' dropdown is set to 'Free Trial' and the 'Resource group' dropdown is empty, with a 'Create new' link below it. In the 'Instance details' section, the 'Name' field is empty and the 'Region' dropdown is set to '(US) East US'. At the bottom of the form, there are three buttons: 'Review + create' (blue), '< Previous' (disabled), and 'Next : IP Addresses >' (disabled). A link 'Download a template for automation' is also present.

Create virtual network

Basics IP Addresses Security Tags Review + create

Azure Virtual Network (VNet) is the fundamental building block for your private network in Azure. VNet enables many types of Azure resources, such as Azure Virtual Machines (VM), to securely communicate with each other, the internet, and on-premises networks. VNet is similar to a traditional network that you'd operate in your own data center, but brings with it additional benefits of Azure's infrastructure such as scale, availability, and isolation. [Learn more about virtual network](#)

Project details

Subscription *

Resource group *

[Create new](#)

Instance details

Name *

Region *

[Review + create](#) [< Previous](#) [Next : IP Addresses >](#) [Download a template for automation](#)

Figure 5.14: Creating A Resource Group In The Basics Tab

3. An IPv4 CIDR block can be set to a desired range via the IP Addresses tab, reached by clicking on the Next : IP Addresses button:

The screenshot shows the 'Create virtual network' page in the Azure portal, specifically the 'IP Addresses' tab. The page is titled 'Create virtual network' and has a close button (X) in the top right corner. Below the title, there are tabs for 'Basics', 'IP Addresses' (which is selected), 'Security', 'Tags', and 'Review + create'. A descriptive text states: 'The virtual network's address space, specified as one or more address prefixes in CIDR notation (e.g. 192.168.1.0/24).' Under the 'IPv4 address space' section, there is a text input field containing '10.0.0.0/16' and a note '10.0.0.0 - 10.0.255.255 (65536 addresses)'. Below this, there is a checkbox labeled 'Add IPv6 address space' with a help icon. Another descriptive text states: 'The subnet's address range in CIDR notation (e.g. 192.168.1.0/24). It must be contained by the address space of the virtual network.' Below this, there are '+ Add subnet' and 'Remove subnet' buttons. A table lists the subnets:

Subnet name	Subnet address range
default	10.0.0.0/24

At the bottom of the page, there are three buttons: 'Review + create' (in blue), '< Previous', and 'Next : Security >'. There is also a link 'Download a template for automation'.

Figure 5.15: Creating IP Address Ranges In The IP Addresses Tab

This range should not conflict with the address space used on-premises. A possible range could be, for example, 10.77.0.0/16

- Once the virtual network range is set, a subnet can be entered via the + Add subnet option, which opens up a dialog.

Add subnet ✕

Subnet name *
subname ✓

Subnet address range * ⓘ
10.77.0.0/24 ✓
10.77.0.0 - 10.77.0.255 (251 + 5 Azure reserved addresses)

SERVICE ENDPOINTS

Create service endpoint policies to allow traffic to specific azure resources from your virtual network over service endpoints. [Learn more](#)

Services ⓘ
0 selected ▼

Add Cancel

Figure 5.16: Creating IP Address Ranges In The IP Addresses Tab: Subnet Addition

A possible subnet could be, for example, 10.77.0.0/24. The Add button then adds it.

5. The clickpath:

Review + create → Create

goes on to deploy the virtual network.

5.6.2 Connecting The Local Network To The Virtual Network

Azure offers two virtual network gateway types to connect the local network to the virtual network: ExpressRoute and VPN.

Connecting Via ExpressRoute

To connect the local network to the virtual network via ExpressRoute requires using an *ExpressRoute circuit connection*. Azure's instructions for this are at:

<https://docs.microsoft.com/en-us/azure/expressroute/expressroute-howto-linkvnet-portal-resource-manager>

Connectng Via A Site-To-Site Connection Using A VPN

Connecting an on-premises network to the virtual network using a VPN requires an Azure site-to-site connection. Azure's instructions for configuring a site-to-site IPsec VPN connection are at:

<https://docs.microsoft.com/en-us/azure/vpn-gateway/vpn-gateway-howto-site-to-site-resource-manager-portal>

In Azure this consists of three components:

1. a virtual network gateway (routes traffic from local network to virtual network)
2. a local network gateway (routes traffic from virtual network to local network)
3. a connection

The local network gateway needs to define the address ranges of the local network. The default address ranges for the local network are: 10.141.0.0/16, 10.2.0.0/16, and 192.168.200.0/24.

The virtual network gateway requires a gateway subnet. The address range for the gateway subnet should be a subnet of the virtual network that does not overlap with the subnet address range for the cluster extension, for example: 10.77.1.0/24.

5.6.3 Configuring And Deploying The Cluster Extension

Once IP connectivity from on-prem to the Azure virtual network is running, the final step is creating the cluster extension using the newly created site-to-site connection.

Getting Through Shorewall

First, the firewall rules on the head node must be adjusted to accept traffic from the virtual network. The file `/etc/shorewall/rules` can be edited so that the `net` section allows packets from the CIDR subnet. A quick-and-dirty way to do it is to append to the file with:

```
[root@bright92 ~]# echo "ACCEPT net:<subnet CIDR> fw - -" >> /etc/shorewall/rules
[root@bright92 ~]# shorewall reload
```

Cluster Extension Advanced Settings Configuration

A cluster extension can now be created using the `cm-cluster-extension` utility in TUI mode as explained in section 5.2.

However, on reaching the summary screen (figure 5.12, page 91), the cluster administrator should not immediately select the `Save config & deploy` option, but should first go to the `Advanced settings` option, which opens up an `Advanced plugin configuration` screen (figure 5.17):

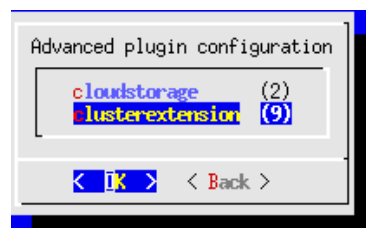


Figure 5.17: Cluster Extension Configuration Processing: Advanced Plugins Screen

The `clusterextension` option should be selected, which opens up an advanced options settings screen for Azure (figure 5.18):

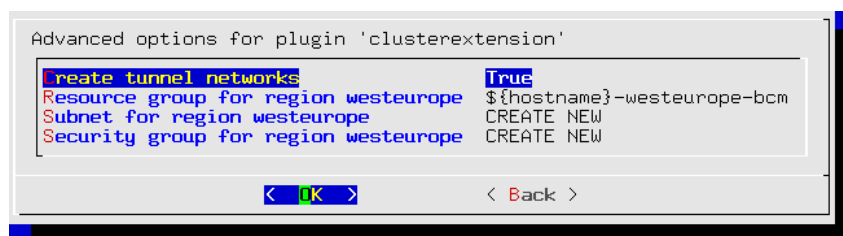


Figure 5.18: Cluster Extension Configuration Processing: Advanced Plugins For 'clusterextension', Azure Options Screen

In this screen:

- the `Create tunnel networks` option should be set to `False`
- the `Subnet for region <region>` should be set to the subnet that has been created for the cluster extension. The cluster extension is what is being connected to via ExpressRoute or via site-to-site connection

The TUI advanced settings screens can be backed out of by selecting `Back` twice. The option `Save config & deploy` can then be selected to create the cluster extension.

Cloud Node Certificate Autosigning

By default the cluster manager does not issue certificates for nodes on the external network. This means that for cloud nodes the certificates need to be issued manually, once for every new cloud node.

Alternatively, to automatically sign certificate requests by cloud nodes, `autosign` can be enabled by the administrator for external networks. Autosigning may be a security concern, as this allows anyone on the external network to request a node certificate. Autosign can be enabled on `externalnet` in `cmsh` as follows:

```
[root@bright92~]# cmsh
[bright92]% network
[bright92->network]% set externalnet allowautosign always
[bright92->network]% commit
```

The cluster extension can now be deployed as explained on page 91.

5.7 Viewing And Setting Azure Generation 1 And Generation 2 Cloud Nodes

5.7.1 Introduction

Azure introduced Generation 2 (Gen2) VMs in 2019. These boast a number of new features, including increased memory, Intel Software Guard Extensions (Intel SGX), and virtualized persistent memory (vPMEM). Gen2 VMs use the new UEFI-based boot architecture rather than the BIOS-based architecture used by Gen1 VMs. Compared to Gen1 VMs, Gen2 VMs might have improved boot and installation times.

It is not possible to change the generation once a VM has been created. The generation to be used must therefore be specified before deploying a cloud instance.

More information on generation 2 VMs can be found at the feature documentation at <https://docs.microsoft.com/en-us/azure/virtual-machines/generation-2>.

5.7.2 Implementation Of Hyper-V Generation Choice In The Cluster Manager

Additional fields were introduced in NVIDIA Bright Cluster Manager 9.2 to allow the generation to be specified, for the `Azure VMSize`, `CloudProvider`, and `CloudSettings` entities.

Also introduced in 9.2 were new “hybrid” node-installer images, which support Gen1 (BIOS-based) and Gen2 (UEFI-based) VMs. The images are partitioned with GPT and contain an ESP partition for UEFI boot. The old, BIOS-only images cannot be used for Gen2 VMs.

In the Azure Marketplace Bright provides separate SKUs for Gen1 and Gen2 images, although internally they are the same.

If a cloud node instantiated from a non-Marketplace node-installer image VHD, then `CMDaemon` first creates a generation-specific Azure Image resource out of the VHD in the cluster extension resource group. That image resource is then used to create the VM.

Some Azure VM sizes support both Gen1 and Gen2, while others are generation-specific.

To see which VM size supports which generation of Hyper-V, cloud types can be listed in `cmsh` with the `hypervgenerations` parameter:

Example

```
[bright92->cloud[azure]]% types
[bright92->cloud[azure]->types]% list -f name,hypervgenerations
name (key)          hypervgenerations
-----
Basic_A0            V1
Basic_A1            V1
Basic_A2            V1
Basic_A3            V1
Basic_A4            V1
Standard_A0         V1
Standard_A1         V1
...
Standard_B12ms      V1,V2
Standard_B16ms      V1,V2
Standard_B11s       V1,V2
Standard_B1ms       V1,V2
```

Formats for the list command are discussed on page 34 of the *Administrator Manual*.

Gen1 or Gen2 availability for a cloud is indicated by the tag V1 or V2 respectively.

For historical reasons, and because of the many VM sizes available, the cluster manager currently (September 2022) creates Gen1 VMs by default. This is not expected to remain the case.

Switching to Gen2 from Gen1 is a matter of using a VM size that supports V2, and then changing the Hyper-V generation parameter.

For the cloud provider the change can be carried out as follows, and all cloud nodes then become Gen2:

Example

```
[bright92->cloud[azure]]% set defaulthyper-vgeneration v2
[bright92->cloud*[azure*]]% commit
[bright92->cloud[azure]]%
```

Alternatively, each VM can have its Hyper-V generation setting changed within the cloudsettings submode:

Example

```
[bright92->device[westeurope-director]->cloudsettings]% get hyper-vgeneration
V1 (azure)
[bright92->device[westeurope-director]->cloudsettings]% set hyper-vgeneration v2; commit
[bright92->device[westeurope-director]->cloudsettings]%
```

5.8 Running NVIDIA A100 GPUs On Cloud Nodes

GPU hardware detection by the Linux kernel may be very delayed, or even be unsuccessful, on cloud nodes that run NVIDIA A100 GPUs. A100 hardware is made available on some instance types such as, for example, Standard_NC96ads_A100_v4. To work around this issue, the pci-hyperv and pci-hyperv-intf kernel modules must be loaded to the kernel used by cloud node images.

In a default Azure setup, this can typically be carried out by adding the kernel modules to the existing kernel modules used by the cloud node category:

Example

```
[bright92->category]% use centralus-cloud-node
[bright92->category[centralus-cloud-node]]% kernelmodules
[bright92->category[centralus-cloud-node]->kernelmodules]% add pci-hyperv
```

```

[bright92->category*[centralus-cloud-node*]->kernelmodules*[pci-hyperv*]]% add pci-hyperv-intf
[bright92->category*[centralus-cloud-node*]->kernelmodules*[pci-hyperv-intf*]]% commit
[bright92->category[centralus-cloud-node]->kernelmodules[pci-hyperv-intf]]%
[bright92->category[centralus-cloud-node]->kernelmodules[pci-hyperv-intf]]% exit
[bright92->category[centralus-cloud-node]->kernelmodules]% list
Module (key)          Parameters
-----
pci-hyperv
pci-hyperv-intf
[bright92->category[centralus-cloud-node]->kernelmodules]%
... [notice] bright92: Initial ramdisk for category centralus-cloud-node based on image default-image
is being generated
... [notice] bright92: Initial ramdisk for category centralus-cloud-node based on image default-image
was generated successfully

```

Booting the cloud nodes with these kernel modules configured allows the GPUs to be detected correctly.

6

Cluster-On-Demand For OpenStack

6.1 Introduction

Bright Cluster Manager version 9.0 was the last version to support OpenStack.

Bright Cluster Manager 9.0, when it runs OpenStack, lets ordinary users of the cluster run a Cluster On Demand (COD) within it. A COD is a complete cluster that is managed by Bright Cluster Manager, which means that a regular user can become a cluster administrator of a virtual cluster running under the hosting cluster. This kind of setup is a case of running a cluster within a cloud service, with the cloud in this case is provided by a local-to-the-cluster Bright OpenStack. Analogous setups where the cloud service is provided by AWS, Azure, or OCI, can also be managed with BCM (Chapter 2).

In Bright jargon these setups are conveniently called COD-OS, COD-AWS, and COD-Azure.

For COD-OS, Bright provides a client, `cm-cod-os`, to launch a COD within a Bright 9.0 OpenStack cluster.

The COD-OS Client Docker Image

The `cm-cod-os` client can be run from a Docker image:

- The Docker instance that runs from the image can be hosted on a standalone PC that is not part of a Bright cluster, or it can be hosted on a Bright node.
- Section 2.4.1 describes the procedure for installing and configuring COD on Docker on a Bright node in more detail.

For convenience, a session setting up COD-OS would be a procedure similar to:

```
root@bright92:~# cm-docker-setup
... install Docker on node001 for example...
root@bright92:~# ssh node001
root@node001:~# module load docker
root@node001:~# docker pull brightcomputing/cod:latest
latest: Pulling from brightcomputing/cod
09f376ebb190: Pull complete
...
root@node001:~# alias cm-cod-os='docker run --rm -it --network host -v /root:/root \
brightcomputing/cod:latest cm-cod-os'
```

The `cm-cod-os` command can now be run from node001.

The client can run on a cluster node, or from a remote location.

Uses For COD-OS

Some possible uses for a Bright OpenStack COD instance are:

- a staging environment to test the production configuration of a software running on a Bright cluster
- a way to do batch job processing using whatever workload manager the user would like, instead of being limited to one due to the possibility of the workload managers interfering with each other.
- a way to run virtual Bright clusters to try things out on, so that a user can become familiar with administrating Bright cluster, without breaking a production system.

COD-OS Configuration Files Vs Arguments; User Privilege; Nesting

The `cm-cod-os` client is a Python script that can be run with configuration files (section 6.3) and expects some environment variable settings. If arguments are used by the script, then the arguments override the corresponding configuration file values.

The `cm-cod-os` client is usually run by an ordinary user, and not the administrator, of the host cluster. The ordinary user then typically becomes the owner and administrator of the COD. The COD is thus a virtual cluster that is hosted by the BCM 9.0. The virtual cluster is what is called a nested cluster, which means that nested virtualization must be supported by the processor hosting it.

6.2 The `cm-cod-os` Arguments

6.2.1 The `cm-cod-os` Top Level Arguments

Options to `cm-cod-os` can be viewed with the help option, `-h` | `--help`:

Example

```
[fred@bright92 ~]$
usage: cm-cod-os [-h] [--config CONFIG] [--no-system-config] [-v]
               [--show-configuration]
               cluster,c,cluster create,cc,cluster list,cl,cluster
               delete,cd,cremove,node,n,image,i,image list,il,image
               delete,id,vnc,v,vnc list,vl,flavor,config ...
```

Cluster-on-demand by Bright Computing

positional arguments:

```
cluster,c,cluster create,cc,cluster list,cl,cluster delete,cd,cremove,node,n,image,i,\
image list,il,image delete,id,vnc,v,vnc list,vl,flavor,config
  cluster (c)           Cluster operations
  cluster create (cc)    Create cluster
  cluster list (cl)      List clusters
  cluster delete (cd,cremove) Delete all resources in a cluster
  node (n)              Node operations
  image (i)             Image subcommands
  image list (il)        Lists cluster images
  image delete (id)      Deletes image from glance
  vnc (v)               VNC subcommands
  vnc list (vl)          List VNC ports
  flavor                Flavor subcommands
  config                Configuration operations
```

optional arguments:

```

-h, --help          show this help message and exit
--config CONFIG, -c CONFIG
--no-system-config
-v, -vv, -vvv
--show-configuration

```

6.2.2 The cm-cod-os Context Tree

cm-cod-os has a hierarchy of options. Some special positional subcommand options allow particular hierarchies to be accessed. The context of such a special positional subcommand option decides the hierarchy available.

In Bright terminology, such a “special positional subcommand option” is therefore more conveniently called a “context”. If the context is one level deeper in the hierarchy, then it is called a “subcontext” for precision. However, in more loose usage, the word “context” is generally just assumed to include the idea of “subcontext”.

The syntax is indicated by:

```
cm-cod-os [context [subcontext]] options
```

The cm-cod-os tree has its context and subcontext branches organized as follows:

```

cod
+ cluster
    +create
    +list
    +delete
    +description
    +shelve
    +show
    +start
    +stop
    +tag
    +lock
    +unlock
    +console

+ config
    +dump
    +generate
    +show

+ node
    +create

+ image
    +list
    +stats
    +repo-list
    +install
    +download
    +repo-download
    +delete
    +show
    +tag
    +update
    +usage

+ vnc
    +list

+ flavor

```

```
+list
```

6.2.3 The `cm-cod-os` Contexts And Optional Arguments Help Text

Most contexts and subcontexts, like at the top level of `cm-cod-os`, have around 10 contexts and argument options or less. For example, the `cm-cod-os→cluster` help text has the following contexts and options:

Example

```
[fred@bright92 ~]$ cm-cod-os cluster -h
usage: cm-cod-os cluster [-h] {create,c,list,l,delete,d,remove,description,shelve,show,start,stop,tag,lock,unlock,console} ...

positional arguments:
  {create,c,list,l,delete,d,remove,description,shelve,show,start,stop,tag,lock,unlock,console}
    create (c)          Create cluster
    list (l)            List clusters
    delete (d, remove) Delete all resources in a cluster
    description          View/change cluster description
    shelve              This command shelves all instances in a cluster. It performs a clean shutdown first.
    show                This command shows details for a (list of) cluster(s) and all related objects.
    start               Start/unshelve cluster(s)
    stop                Stop cluster(s)
    tag                 Manipulate Heat stack tags of a cluster (add, remove, or reset)
    lock                Prevents a cluster from being deleted with the 'cluster delete' command. The lock is
                        set with a specific time limit to expire. WARNING: Note that this doesn't prevent the
                        cluster from being removed outside of 'cm-cod-os' (e.g. via the OpenStack CLI or the
                        Horizon dashboard)
    unlock              Removes a lock that was created with 'cluster lock' command.
    console              Get web-based VNC console URLs for cluster nodes of an user. Gets all cluster nodes by
                        default, or only specified cluster's nodes.

optional arguments:
  -h, --help            show this help message and exit
```

The `cm-cod-os cluster create` Options Help Text

Probably the most used path in the `cm-cod-os` command hierarchy for a user is `cm-cod-os→cluster→create`. This can be used to create a cluster in many different ways, so naturally it has the most options.

Example

```
[fred@bright92 ~]$ cm-cod-os cluster create -h
usage: cm-cod-os cluster create [options]

Create cluster

cluster create parameters:
  -n NODES, --nodes NODES
                        Number of compute nodes to be created according to one
                        of the following formats (several space separated
                        groups can be specified): node_number
                        node_number:node_flavor node_number:node_template_path
                        node_number:node_template_path:node_flavor You find an
                        example of what node templates look like in:
                        /usr/local/lib/python3.9/site-
                        packages/clusterondemandopenstack/static/cod-os-node-
```



```

        template.yml.
--append-to-root-bashrc ENV=VAR
        Lines to append to the /root/.bashrc file on the head
        node.
--prebs COMMAND
        Command(s) executed by cloud-init before cm-bright-
        setup (before CMDaemon starts). Useful for package
        update. Multiple arguments are allowed.
--postbs COMMAND
        Command(s) executed by cloud-init post cm-bright-setup
        (Once CMDaemon starts).
--run-cm-bright-setup {TRUE,FALSE}
        Whether or not to initialize the cluster by running cm-
        bright-setup (activate license, etc).
--admin-email ADMIN_EMAIL
        Admin email address to set in CMDaemon.
--wlm {openpbs, pbspro, dont-configure, slurm, sge, pbspro-ce}
        Workload Manager of choice. This can also be configured
        later. Note that this list is a subset of the WLM
        systems supported across different versions of Bright.
        Therefore, some WLM systems are only configurable later
        on, after the cluster has been created. Defaults to
        'dont-configure'. dont-configure - do not configure any
        (can be configured later).
--name NAME
        (default: auto) Name of the cluster to create. By
        default the name is generated from version, distro and
        creation timestamp.
--wait-ssh SECONDS
        Wait up to that many seconds for SSH to come up.
--wait-cmdaemon SECONDS
        Wait up to that many seconds for CMDaemon to come up.
--wait-for-nodes SECONDS
        Wait for up to that many seconds for the compute nodes
        to come up.
--internal-cidr INTERNAL_CIDR
        CIDR of the cluster's internal network.
--internal-mtu NUMBER
        MTU of the cluster's internal network.
--timezone TIMEZONE
        Timezone of the cluster.
--copy-file SRC_PATH[:DST_PATH] [SRC_PATH_2[:DST_PATH_2] ... ]
        Colon separated source path and destination path. If
        only the source path is specified, it will be used as
        the destination path. Note: -Using a tilde (~) will be
        expanded to the user home. Note: The source path can
        be an HTTP URL. Note: The keyword {COD_BRIGHT_VERSION},
        if present, will be replaced with the value of COD
        Bright Versions. Example1: /etc/file.conf Example2:
        /home/user/custom-file.conf:/etc/file.conf
        Example3: http://localhost/path1:/destination/path1
        /source/path2:/destination/path2.
--copy-file-with-env COPY_FILE_WITH_ENV
        Same as --copy-file but replaces instances of
        ${ENV_VAR} inside of the file being copied with the
        content of the environment variable 'ENV_VAR' as well
        as {COD_BRIGHT_VERSION} by the bright version in the
        file path.
--store-head-node-ip PATH_TO_FILE
        Once the cluster has been created, store the IP of the

```

```

        head node in a file. Useful for automation.
--ask-to-confirm-cluster-creation {TRUE,FALSE}
        Ask for confirmation when creating a new cluster. Use
        -y to skip this question.
-m HEAD_NODE_TYPE, --head-node-type HEAD_NODE_TYPE
        Flavor for the head node. Use flavor name from 'cm-cod-
        os flavor list'.
--secondary-head-node-type SECONDARY_HEAD_NODE_TYPE
        Flavor for the secondary head node. Use flavor name
        from 'cm-cod-os flavor list'.
--nas-node-type NAS_NODE_TYPE
        Flavor for the NAS node. This node is created in HA
        clusters to provide shared storage, based on NFS, to
        both head nodes. Use flavor name from 'cm-cod-os flavor
        list'.
--ha
        Setup HA for the cluster head nodes.
--ha-tags HA_TAGS
        Overrides --tags, but only when --ha is used.
--head-node-az HEAD_NODE_AVAILABILITY_ZONE, --head-node-availability-zone
        HEAD_NODE_AVAILABILITY_ZONE
        Name of the availability zone to create the head node
        on. If not specified, OpenStack's scheduler will
        decide. This argument can also be used to force the
        head node onto a specific hypervisor. To do so, specify
        "<availability_zone>:<hypervisor>", e.g.
        "default:hyper01".
--ssh-key-pair SSH_KEY_PAIR
        Name of the key pair used to access the head node.
--failover-cidr FAILOVER_CIDR
        CIDR of the cluster's failover network.
--ingress-icmp INGRESS_ICMP
        CIDR from which to allow ingress ICMP traffic to the
        head node. Specify 'None' to disable ICMP all together.
--inbound-rule INBOUND_RULE
        One or several inbound traffic rules for the cluster's
        head node in the following format:
        [src_cidr[:src_port],]dst_port[:protocol]. Where port
        can be a single port or a dash separated range and
        supported protocols are: tcp, udp. A wildcard value
        will be assumed for every optional non-provided
        parameter (e.g. all ports, all protocols, all IPs)
        Examples: '80' '21:udp' '11.0.0.0/24,20-23:TCP'
        '12.0.0.0/32:6000-6500,443'.
--send-email-first-boot
        Send an email on the first boot to the cluster
        administrator.
-d, --dry-run
        Dry run - do not actually create the cluster. Useful
        with --template.
--description DESCRIPTION
        Cluster description.
-t OUTPUT_FILE, --template OUTPUT_FILE
        Generate resulting heat template to the file. Use '-'
        as the file name to output the template to stdout.
        Useful with --dry-run.
--power-control
        Enable support for power control.
--locked LOCKED
        Create the cluster already locked (see 'cm-cod-os

```

cluster lock'). It's possible to specify the amount of days/hours/minutes in the following form: '2d3h4m', '2d', '3d4h', '5h' or 'forever'.

`--cluster-tags CLUSTER_TAGS`

Additional tags which should be set on the Heat stack of the newly create cluster. They can be simple strings (E.g. 'mytag'), or key value pairs (e.g. `COD::mytag=myvalue`). Key value pairs must start with 'COD::' to be properly parsed as such in all parts of the cod tool.

(92 additional parameters can be displayed with the `--advanced-help` argument)

image selection parameters:

`--image IMAGE_SPEC` Single image selector statement. See cm-cod-os image list `--help`. Overrides filter arguments such as `--version`, `--distro`, etc.

`--head-node-image UUID|IMAGE-NAME|IMAGE-SET`

Single image selector statement for the head node image. Can either be an image UUID, the name of that image or the name of the image set. Overrides the head node image selected by `--image` and all other image filter arguments.

`--node-image NODE_IMAGE`

Single image selector statement for node image (as in advanced mode) '`--node-image none`' will force the cluster to not use a node image at all. Overrides the head node image selected by `--image` and all other image filter arguments.

(2 additional parameters can be displayed with the `--advanced-help` argument)

root login method to the head node:

`--log-cluster-password`

Log cluster password to the screen and log files. This option is mandatory if no custom password, nor SSH keypairs, were specified.

`--cluster-password CLUSTER_PASSWORD`

The root user password to the cluster. If not specified, a random one will be generated (use `--log-cluster-password` to see it). This is also the root user SQL password on the head node. Upon cluster creation the password is stored in the `/cm/local/apps/cmd/etc/cmd.conf` on the head node.

`--ssh-password-authentication {TRUE,FALSE}`

If set to true, it will be possible to SSH to the head node using a password. This option should NOT be used in untrusted environments as it exposes the head node to brute force login attacks.

`--access-validation`

Causes the cluster creation process to abort early if it won't be able to guarantee that the SSH access to the cluster will be possible. Disabling it is useful when e.g. the public SSH key is being delivered to the image in some other way, than the usual command line argument. Note, that access validation does not attempt to actually connect to the cluster. Instead, it merely

tries to predict whether the cluster will be accessible to the user, given the specified argument combination.

--ssh-pub-key-path PATH_TO_FILE

Path to an SSH public key file. The key will be added to the authorized keys on the cluster. And the tool will use the corresponding private key to access the cluster.

(6 additional parameters can be displayed with the --advanced-help argument)

node volume parameters:

--node-root-volume-size SIZE_IN_GB

Root volume size in GB.

--node-root-volume-type NODE_ROOT_VOLUME_TYPE

Compute node root disk volume type. Allows for specifying a special volume type with different Quality of Service policy (more IOPS etc).

--head-node-root-volume-size SIZE_IN_GB

Head node root disk size in GB. Should be bigger than the Image size.

--head-node-root-volume-type HEAD_NODE_ROOT_VOLUME_TYPE

Head node root disk volume type. Allows for specifying a special volume type with different Quality of Service policy (more IOPS etc).

--head-node-extra-volume-type HEAD_NODE_EXTRA_VOLUME_TYPE

Head node extra disk volume type. Allows for specifying a special volume type with different Quality of Service policy (more IOPS etc).

--head-node-extra-volume-size SIZE_IN_GB

Second volume for the extra.

(1 additional parameters can be displayed with the --advanced-help argument)

Bright Cluster Manager licensing information:

--license-unit LICENSE_UNIT

License unit.

--license-locality LICENSE_LOCALITY

License locality.

--license-country LICENSE_COUNTRY

Two characters.

--license-product-key LICENSE_PRODUCT_KEY

Bright Cluster Manager Product Key.

--license-organization LICENSE_ORGANIZATION

Name of your organization.

--license-state LICENSE_STATE

Name of your state or province.

(4 additional parameters can be displayed with the --advanced-help argument)

Confirm operations:

-y, --yes

Do not ask for confirmation when executing operations.

(1 additional parameters can be displayed with the --advanced-help argument)

SSH local configuration:

```
--ssh-config-path SSH_CONFIG_PATH
    Path to local ssh config to save COD cluster ssh
    configuration in.
--update-ssh-config
    Updates the contents of ~/.ssh/config, this is used to
    maintain the local ssh configuration access with ssh,
    scp and related tools.
--ssh-config-alias-prefix SSH_CONFIG_ALIAS_PREFIX
    Prefix to be used when populating host entries for the
    cluster head nodes in the COD section of ~/.ssh/config.
    Default is ''.
    (1 additional parameters can be displayed with the --advanced-help argument)
```

common parameters:

```
-h, --help
    Show this message and exit.
-H, --advanced-help
    Don't omit advanced configuration parameters from the
    help output. Implies --help.
--explain EXPLAIN
    Show detailed information about the immediately
    following parameter. Which can be a name, a regular
    expression, ENV VAR or another flag.
-v, -vv, -vvv, --verbose
    Verbosity level.
--print-stack-trace-on-failure
    Print the stack trace on failure, even if -v wasn't
    specified.
    (12 additional parameters can be displayed with the --advanced-help argument)
```

configuration parameters:

```
-c CONFIG, --config CONFIG
    Extra config files.
    (12 additional parameters can be displayed with the --advanced-help argument)
```

image filter parameters:

```
--cloud-type CLOUD_TYPE
    Filter images by cloud type. Set 'any' for any cloud
    type. Useful with --advanced.
--version VERSION
    (default: all versions) show only images from this
    version.
--status STATUS
    Status of the image.
--arch ARCH
    (default: x86_64) show only images of this CPU
    architecture.
--distro DISTRO
    (default: all distros) show only images from this
    distro. This is a regex.
--distro-default DISTRO_DEFAULT
    List of distributions. If the user didn't explicitly
    specify a distro, iterate over this list and use the
    first distribution, for which the image is found.
    Ignored if combined with --distro. Each list element is
    a regex.
--revision NUMBER
    Select images with this revision.
--package-groups PACKAGE_GROUP
    Select images with these package groups installed (use
    'none' to pick an image with no package groups)
```

```

        installed, use 'any' (default) to pick an image with
        any set of package groups installed.
--tags TAGS          List of tags, the images must have them all. (AND).
                    --tags any will pick images with any set of tags.
--all-revisions      Pick all revisions for each image ID.
--latest NUMBER      Pick this many latest images for each image ID.
--advanced           Filter image by its name or UUID rather than ImageID.
                    Will also change listing output.
--except-latest NUMBER
                    Pick all images besides this number of the latest
                    images for each image ID.
(9 additional parameters can be displayed with the --advanced-help argument)

```

node definition parameters:

```

--node-disk-setup-path PATH_TO_XML
                    Path to the XML file with the disk setup which is to be
                    used for the nodes.
--node-disk-setup NODE_DISK_SETUP

--node-az DEFAULT_NODE_AVAILABILITY_ZONE, --default-node-az DEFAULT_NODE_AVAILABILITY_ZONE, --node-
availability-zone DEFAULT_NODE_AVAILABILITY_ZONE, --default-node-
availability-zone DEFAULT_NODE_AVAILABILITY_ZONE
Default name of the availability zone to create the
compute nodes on. Will not override the availability
zone that is specified in the node template. If not
specified, OpenStack's scheduler will decide. This
argument can also be used to force the compute node
onto a specific hypervisor. To do so, specify
"<availability_zone>:<hypervisor>", e.g.
"default:hyper01".
(5 additional parameters can be displayed with the --advanced-help argument)

```

openstack authentication parameters:

```

--os-auth-url URL    OpenStack Authentication URL. This should typically be
                    the public Keystone API endpoint (v3), e.g. 'http://my-
                    example-cloud:5000/v3'. This can also be set with
                    OS_AUTH_URL environment variable.
--os-username USERNAME
                    Username of the OpenStack user which is to be used for
                    authentication with keystone (--os-auth-url). The user
                    should have a OpenStack role assigned in the project
                    specified with --os-project-name. This can also be set
                    with OS_USERNAME environment variable.
--os-password PASSWORD
                    OpenStack password for the OpenStack user specified
                    with --os-username. This can also be set with
                    OS_PASSWORD environment variable. Avoid setting the
                    password via the command line, it's unsafe. If no
                    password is provided beforehand, the user will be
                    presented with an interactive prompt, and asked to
                    provide it at runtime.
--os-project-name PROJECT_NAME
                    The name of the OpenStack project (a.k.a. tenant). The
                    OpenStack user (--os-username) which is used for

```

authentication should have a OpenStack role assigned in this project. This can also be set with OS_PROJECT_NAME environment variable.

(6 additional parameters can be displayed with the --advanced-help argument)

Some sections were omitted

6 sections with a total of 20 parameters can be displayed with the --advanced-help argument

Create cluster

cluster create parameters:

```
-n NODES, --nodes NODES
    Number of compute nodes to be created according to one
    of the following formats (several space separated
    groups can be specified): node_number
    node_number:node_flavor node_number:node_template_path
    node_number:node_template_path:node_flavor You find an
    example of what node templates look like in:
    /cm/local/apps/python3/lib/python3.7/site-
    packages/clusterondemandopenstack/static/cod-os-node-
    template.yml.

--wlm {dont-configure, sge, pbspro-ce, pbspro, slurm}
    Workload Manager of choice. This can also be configured
    later. Note that this list is a subset of the WLM
    systems supported across different versions of Bright.
    Therefore, some WLM systems are only configurable later
    on, after the cluster has been created. Defaults to
    'dont-configure'. dont-configure - do not configure any
    (can be configured later).

--copy-file SRC_PATH[:DST_PATH] [SRC_PATH_2:[DST_PATH_2] ... ]
    Colon separated source path and destination path. If
    only the source path is specified, it will be used as
    the destination path. Note: -Using a tilde (~) will be
    expanded to the user home. Note: The source path can
    be an HTTP URL. Note: The keyword {COD_BRIGHT_VERSION},
    if present, will be replaced with the value of COD
    Bright Versions. Example1: /etc/file.conf Example2:
    /home/user/custom-file.conf:/etc/file.conf
    Example3: http://localhost/path1:/destination/path1
    /source/path2:/destination/path2.

--copy-file-with-env COPY_FILE_WITH_ENV
    Same as --copy-file but replaces instances of
    ${ENV_VAR} inside of the file being copied with the
    content of the environment variable 'ENV_VAR' as well
    as {COD_BRIGHT_VERSION} by the bright version in the
    file path.

--name NAME
    (default: auto) Name of the cluster to createBy default
    the name is generated from version, distro, label.

--timezone TIMEZONE
    Timezone of the cluster.
```

```

--store-head-node-ip PATH_TO_FILE
    Once the cluster has been created, store the IP of the
    head node in a file. Useful for automation.
--ask-to-confirm-cluster-creation {TRUE,FALSE}
    Ask for confirmation when creating a new cluster. Use
    -y to skip this question.
--run-cm-bright-setup {TRUE,FALSE}
    Whether or not to initialize the cluster by running cm-
    bright-setup (activate license, etc).
-m HEAD_NODE_TYPE, --head-node-type HEAD_NODE_TYPE
    Flavor for the head node. Use flavor name from 'cm-cod-
    os flavor list'.
--secondary-head-node-type SECONDARY_HEAD_NODE_TYPE
    Flavor for the secondary head node. Use flavor name
    from 'cm-cod-os flavor list'.
--nas-node-type NAS_NODE_TYPE
    Flavor for the NAS node. This node is created in HA
    clusters to provide shared storage, based on NFS, to
    both head nodes. Use flavor name from 'cm-cod-os flavor
    list'.
--ha
    Setup HA for the cluster head nodes.
--head-node-az HEAD_NODE_AVAILABILITY_ZONE, --head-node-availability-zone
    HEAD_NODE_AVAILABILITY_ZONE
    Name of the availability zone to create the head node
    on. If not specified, OpenStack's scheduler will
    decide. This argument can also be used to force the
    head node onto a specific hypervisor. To do so, specify
    "<availability_zone>:<hypervisor>", e.g.
    "default:hyper01".
--ssh-key-pair SSH_KEY_PAIR
    Name of the key pair used to access the head node.
--internal-cidr INTERNAL_CIDR
    CIDR of the cluster's internal network.
--failover-cidr FAILOVER_CIDR
    CIDR of the cluster's failover network.
--internal-mtu NUMBER
    MTU of the cluster's internal network.
--ingress-icmp INGRESS_ICMP
    CIDR from which to allow ingress ICMP traffic to the
    head node. Specify 'None' to disable ICMP all together.
--wait-ssh SECONDS
    Wait up to that many seconds for SSH to come up.
--wait-cmdaemon SECONDS
    Wait up to that many seconds for CMDaemon to come up.
--prebs COMMAND
    Command(s) executed by cloud-init before cm-bright-
    setup (before CMDaemon starts). Useful for package
    update. Multiple arguments are allowed.
--postbs COMMAND
    Command(s) executed by cloud-init post cm-bright-setup
    (Once CMDaemon starts).
--append-to-root-bashrc ENV=VAR
    Lines to append to the /root/.bashrc file on the head
    node.
--admin-email ADMIN_EMAIL
    Admin email address to set in CMDaemon.
--inbound-rule INBOUND_RULE
    One or several inbound traffic rules for the cluster's

```


head node in the following format:
 [src_cidr[:src_port],[dst_port[:protocol]]. Where port
 can be a single port or a dash separated range and
 supported protocols are: tcp, udp. A wildcard value
 will be assumed for every optional non-provided
 parameter (e.g. all ports, all protocols, all IPs)
 Examples: '80' '21:udp' '11.0.0.0/24,20-23:TCP'
 '12.0.0.0/32:6000-6500,443'.

--send-email-first-boot
 Send an email on the first boot to the cluster
 administrator.

-d, --dry-run
 Dry run - do not actually create the cluster. Useful
 with --template.

--description DESCRIPTION
 Cluster description.

-t OUTPUT_FILE, --template OUTPUT_FILE
 Generate resulting heat template to the file. Use '-'
 as the file name to output the template to stdout.
 Useful with --dry-run.

-y, --yes
 Do not ask for confirmation when creating a new
 cluster.

--wait-for-nodes SECONDS
 Wait for up to that many seconds for the compute nodes
 to come up.

--power-control
 Enable support for power control.
 (76 additional parameters can be displayed with the --advanced-help argument)

image selection parameters:

--version VERSION
 Bright Cluster Manager version.

--distro DISTRO
 Linux distribution name.

--package-groups PACKAGE_GROUPS
 Package group.

--image IMAGE_SPEC
 Single image selector statement. See cm-cod-os image
 list --help. Overrides filter arguments such as
 --version, --distro, etc.

--head-node-image UUID|IMAGE-NAME|IMAGE-SET
 Single image selector statement for the head node
 image. Can either be a Glance image UUID, the name of
 that Glance image or the name of the image set.
 Overrides the head node image selected by --image and
 all other image filter arguments.

--node-image NODE_IMAGE
 Single image selector statement for node image (as in
 advanced mode) '--node-image none' will force the
 cluster to not use a node image at all. Overrides the
 head node image selected by --image and all other image
 filter arguments.

--tags TAGS
 Single image selector statement. See cm-cod-os image
 list --help.

--ha-tags HA_TAGS
 Overrides --tags, but only when --ha is used.

--status STATUS
 Glance status of the image.

--cmd-revision-min NUMBER
 Minimum CMDaemon revision required.

--cmd-revision-max NUMBER

Maximum CMDaemon revision.
 --revision NUMBER Select clusters with specified revision.
 (9 additional parameters can be displayed with the --advanced-help argument)

root login method to the head node:

--log-cluster-password Log cluster password to the screen and log files. This option is mandatory if no custom password, nor SSH keypairs, were specified.

--cluster-password CLUSTER_PASSWORD The root user password to the cluster. If not specified, a random one will be generated (use --log-cluster-password to see it). This is also the root user SQL password on the head node. Upon cluster creation the password is stored in the /cm/local/apps/cmd/etc/cmd.conf on the head node.

--ssh-password-authentication {TRUE,FALSE} If set to true, it will be possible to SSH to the head node using a password. This option should NOT be used in untrusted environments as it exposes the head node to brute force login attacks.

--access-validation Causes the cluster creation process to abort early if it won't be able to guarantee that the SSH access to the cluster will be possible. Disabling it is useful when e.g. the public SSH key is being delivered to the image in some other way, than the usual command line argument. Note, that access validation does not attempt to actually connect to the cluster. Instead, it merely tries to predict whether the cluster will be accessible to the user, given the specified argument combination.

--ssh-pub-key-path PATH_TO_FILE Path to the public key.
 (4 additional parameters can be displayed with the --advanced-help argument)

node volume parameters:

--node-root-volume-size SIZE_IN_GB Root volume size in GB.

--node-root-volume-type NODE_ROOT_VOLUME_TYPE Compute node root disk volume type. Allows for specifying a special volume type with different Quality of Service policy (more IOPS etc).

--head-node-root-volume-size SIZE_IN_GB Head node root disk size in GB. Should be bigger than the Image size.

--head-node-root-volume-type HEAD_NODE_ROOT_VOLUME_TYPE Head node root disk volume type. Allows for specifying a special volume type with different Quality of Service policy (more IOPS etc).

--head-node-extra-volume-type HEAD_NODE_EXTRA_VOLUME_TYPE Head node extra disk volume type. Allows for specifying a special volume type with different Quality of Service policy (more IOPS etc).

--head-node-extra-volume-size SIZE_IN_GB

Second volume for the extra.
 (1 additional parameters can be displayed with the --advanced-help argument)

Bright Cluster Manager licensing information:

```
--license-unit LICENSE_UNIT
    License unit.
--license-locality LICENSE_LOCALITY
    License locality.
--license-country LICENSE_COUNTRY
    Two characters.
--license-product-key LICENSE_PRODUCT_KEY
    Bright Cluster Manager Product Key.
--license-organization LICENSE_ORGANIZATION
    Name of your organization.
--license-state LICENSE_STATE
    Name of your state or province.
```

(3 additional parameters can be displayed with the --advanced-help argument)

SSH local configuration:

```
--update-ssh-config    Updates the contents of ~/.ssh/config, this is used to
                        maintain the local ssh configuration access with ssh,
                        scp and related tools.
--ssh-config-alias-prefix SSH_CONFIG_ALIAS_PREFIX
                        Prefix to be used when populating host entries for the
                        cluster head nodes in the COD section of ~/.ssh/config.
                        Default is ''.
```

(1 additional parameters can be displayed with the --advanced-help argument)

common parameters:

```
-h, --help            Show this message and exit.
--advanced-help       Don't omit advanced configuration parameters from the
                        help output. Implies --help.
--explain EXPLAIN     Show detailed information about the immediately
                        following parameter. Which can be a name, a regular
                        expression, ENV VAR or another flag.
-v, -vv, -vvv, --verbose
                        Verbosity level.
```

(11 additional parameters can be displayed with the --advanced-help argument)

configuration parameters:

```
-c CONFIG, --config CONFIG
    Extra config files.
```

(8 additional parameters can be displayed with the --advanced-help argument)

node definition parameters:

```
--node-disk-setup-path PATH_TO_XML
    Path to the XML file with the disk setup which is to be
    used for the nodes.
--node-disk-setup NODE_DISK_SETUP
```

```
--node-az DEFAULT_NODE_AVAILABILITY_ZONE, --default-node-az DEFAULT_NODE_AVAILABILITY_ZONE,
--node-
```

```
availability-zone DEFAULT_NODE_AVAILABILITY_ZONE, --default-node-
availability-zone DEFAULT_NODE_AVAILABILITY_ZONE
```

Default name of the availability zone to create the compute nodes on. Will not override the availability zone that is specified in the node template. If not specified, OpenStack's scheduler will decide. This argument can also be used to force the compute node onto a specific hypervisor. To do so, specify "<availability_zone>:<hypervisor>", e.g. "default:hyper01".

(4 additional parameters can be displayed with the --advanced-help argument)

openstack authentication parameters:

```
--os-auth-url URL      OpenStack Authentication URL. This should typically be
                        the public Keystone API endpoint (v3), e.g. 'http://my-
                        example-cloud:5000/v3'. This can also be set with
                        OS_AUTH_URL environment variable.
```

```
--os-username USERNAME Username of the OpenStack user which is to be used for
                        authentication with keystone (--os-auth-url). The user
                        should have a OpenStack role assigned in the project
                        specified with --os-project-name. This can also be set
                        with OS_USERNAME environment variable.
```

```
--os-password PASSWORD OpenStack password for the OpenStack user specified
                        with --os-username. This can also be set with
                        OS_PASSWORD environment variable. Avoid setting the
                        password via the command line, it's unsafe. If no
                        password is provided beforehand, the user will be
                        presented with an interactive prompt, and asked to
                        provide it at runtime.
```

```
--os-project-name PROJECT_NAME The name of the OpenStack project (a.k.a. tenant). The
                                OpenStack user (--os-username) which is used for
                                authentication should have a OpenStack role assigned in
                                this project. This can also be set with OS_PROJECT_NAME
                                environment variable.
```

(6 additional parameters can be displayed with the --advanced-help argument)

Some sections were omitted

6 sections with a total of 19 parameters can be displayed with the --advanced-help argument

6.3 The cm-cod-os Configuration Files

6.3.1 The cm-cod-os Configuration Files Locations

By default, configuration files for setting up the COD are searched for in the following locations, and in the following sequence. Settings found earlier in the sequence are overwritten by settings later on in the sequence.

- /etc/cm-cluster-on-demand.ini
- /etc/cm-cluster-on-demand.conf

- /etc/cm-cluster-on-demand.d/*
- ~/cm-cluster-on-demand.ini
- ~/cm-cluster-on-demand.conf
- ~/cm-cluster-on-demand.d/*
- a file location specified on the command line. For example, a file mycodsettings can be accessed using the --config option of cm-cod-os:

Example

```
[fred@bright92 ~]$ cm-cod-os --config mycodsettings
```

Typically, the administrator sets up configuration options in one of the first 3 locations, and the regular user modifies the options or adds other options in one of the last 4 locations.

6.3.2 Viewing The cm-cod-os Configuration File Options

A dump of the existing configuration can be viewed using `cm-cod-os config dump`

To check what options have been applied, and their sequence, the log to STDOUT can be viewed if the `-v|--verbose` option has been applied.

A list of configuration options for the `cm-cod-os cluster create` command can be seen with the `--show-configuration` option (output truncated):

Example

```
[fred@bright92 ~]$ cm-cod-os cluster create --show-configuration
```

option	value
advanced_help	False (default)
append_to_root_bashrc	[] (default)
ask_to_confirm_cluster_creation	True (default)
cluster_password	None (default)
cmd_revision_max	None (default)
...	

Arguments to `cm-cod-os` override the equivalent configuration file settings. This means that the configuration file settings of a working configuration can be used as a default template, and modifications to the template can conveniently be carried out via command line.

6.3.3 Setting The cm-cod-os Configuration File Options And Corresponding Arguments

The configuration options can be placed under sections that are associated with the corresponding `cm-cod-os` contexts and subcontexts of the tree in section 6.2.2.

For example, the path to the subcontext `cm-cod-os cluster create` has a large number of possible options (the options listed starting on page 112). The configuration file for the options can then have a section that begins with:

```
[openstack.cluster.create]
```

The section and options that can be placed in a configuration file can be worked out from the help text output of the `cm-cod-os` for the associated context or subcontext.

For example, the help text for `cm-cod-os cluster create -h` has the excerpt:

```
--ask-to-confirm-cluster-creation {TRUE,FALSE}
    Ask for confirmation when creating a new cluster. Use
    -y to skip this question.
```

The configuration option for this option then takes the form:

```
openstack.cluster.create.ask_to_confirm_cluster_creation
```

The options are placed in a key=value format under the associated section.

Thus, the option that can be set to ask for confirmation before creating a new cluster is then `ask_to_confirm_cluster_creation`. It can be placed under the section `[openstack.cluster.create]` in key=value format as follows:

```
[openstack.cluster.create]
ask_to_confirm_cluster_creation=yes
```

6.4 The `cm-cod-os` Environment Variables

The environment in which `cm-cod-os` runs also provides the script with information via OpenStack environment variables.

These OpenStack variables are typically exported in the `.bashrc` or `.openstackrc` file for the COD owner using the Bright OpenStack cluster. More on the export of the OpenStack variables is given in the section with the heading **Background Note: Automated Writing Out Of The `.openstackrc`* Files**, in Chapter 5 of the Bright 9.0 OpenStack Deployment manual. The environment variables, which are prefixed with `OS_`, then typically exist in the environment of the OpenStack COD owner.

Example

```
[fred@bright92 ~]$ grep OS_ .bashrc
export OS_AUTH_URL="http://master:5000/v3"
export OS_PROJECT_NAME="${USER}-project"
export OS_USERNAME="${USER}"
export OS_TENANT_NAME="${USER}-project"
export OS_PROJECT_DOMAIN_ID="9b9d86bb35934072b7c2a5c73ce75d43"
export OS_USER_DOMAIN_ID="9b9d86bb35934072b7c2a5c73ce75d43"
export OS_IDENTITY_API_VERSION=3
export OS_CACERT="/etc/keystone/ssl/certs/ca.pem"
export OS_INITIALS=$COD_PREFIX
[fred@bright92 ~]$
```

So, when the `cm-cod-os` script runs, it works for the COD owner with the local Bright OpenStack cluster by default.

To have `cm-cod-os` work with other clusters requires appropriate changes in these environment variables, as well as in the `cm-cod-os` configuration options.

6.5 Launching A COD

This section consists of example sessions, to show how the material in the preceding sections of this Chapter can be used to launch a nested COD. Some administrative preparation is first carried out on the host cluster (subsection 6.5.1). Once the host cluster is ready, the nested cluster can be launched and configured (subsection 6.5.2).

6.5.1 Administrative Preparation Of The Host Cluster

It is assumed that the host cluster is configured with Bright OpenStack already. For example, with Bright View OpenStack wizard (section 3.1 of the Bright 9.0 OpenStack Deployment manual), or with `cm-openstack-setup` (section 3.2 of the Bright 9.0 OpenStack Deployment manual).

Installing cm-cod-os

On the head node, the cm-cod-os utility should be present. If it is missing, then it should be installed with:

Example

```
[root@bright92 ~]# yum install cm-cluster-on-demand-openstack
```

Setting The OpenStack Port Security Extension Driver

The OpenStack port security plugin (<https://wiki.openstack.org/wiki/Neutron/ML2PortSecurityExtensionDriver>) should be enabled to allow the toggling of packet filtering for the hosted devices, so that the hosted nodes can be served DHCP leases.

```
[root@bright92 ~]# cmsh
[bright92]% openstack
[bright92->openstack[default]]% settings
[bright92->openstack[default]->settings]% networking
[...settings->networking]% set enableml2portsecurityplugin yes
[...settings*->networking*]% commit
```

Viewing The Existing Flavors

If the OpenStack credentials and environment are in place, then the standard flavor list provided by Bright OpenStack can be seen by using the OpenStack CLI client. The root user can see these with:

Example

```
[root@bright92 ~]# source .openstackrc; source .openstackrc_password
[root@bright92 ~]# openstack flavor list
```

ID	Name	RAM	Disk	Ephemeral	VCPUs	Is Public
0f57527b-4fb2-452d-9b52-13c2	m1.large	8192	20	80	4	True
5309e46d-5c2d-47a0-9ad8-dae9	m1.xtiny	256	1	0	1	True
9b711a53-282c-4901-8bef-20ac	m1.xlarge	16384	40	160	8	True
ccbad1b4-bdb2-40fe-b948-1819	m1.tiny	512	5	5	1	True
e6408d86-a9ca-4694-9066-f8a8	m1.medium	4096	20	40	2	True
ebf16a3f-c3ee-41e7-952d-2643	m1.xsmall	1024	10	10	1	True
f66090cd-b020-49a2-808c-393b	m1.small	2048	10	20	2	True

Alternatively, without having to explicitly source the credentials and the environment, the cluster manager cmsh equivalent can be run:

Example

```
cmsh -c "openstack; flavors; list"
```

Adding COD Flavors

Some arbitrary COD flavors can be defined by the hosting administrator according to the possible requirements. A convenient set could be:

Example

```
[root@bright92 ~]# openstack flavor create --ram 1024 --vcpus 1 cod.xsmall
[root@bright92 ~]# openstack flavor create --ram 2048 --vcpus 2 cod.small
[root@bright92 ~]# openstack flavor create --ram 4096 --vcpus 2 cod.medium
[root@bright92 ~]# openstack flavor create --ram 8192 --vcpus 4 cod.large
[root@bright92 ~]# openstack flavor create --ram 16384 --vcpus 8 cod.xlarge
```

Alternatively, if using `cmsh`, then the flavors can be set within the `flavors` submode of `openstack` mode. For example, the preceding `cod.xsmall` flavor can be set with:

Example

```
cmsh -c "openstack flavors; add cod.xsmall; set ram 1GiB; set vcpus 1; commit"
```

Creating A Volume Type

A volume is a block storage that can be used for persistent storage and attached to instances. A simple volume type with default properties can be created by the root user, and given the unimaginative name of `default`, with:

Example

```
[root@bright92 ~]# openstack volume type create default
+-----+
| Field      | Value                                     |
+-----+
| description | None                                     |
| id          | 6486cff8-c2bf-4a3d-a32e-3a67b94ca564    |
| is_public   | True                                     |
| name        | default                                  |
+-----+
```

If the user has access to `cmsh`, then another way to set this would be:

```
cmsh -c "openstack; volumetypes; add default; commit"
```

At this stage in the session, the following points may help orient the reader:

OpenStack client commands typically have `cmsh` or Bright View equivalents: As the preceding examples illustrate, the more useful of the OpenStack client commands can be carried out with a `cmsh` or Bright View equivalent. Whatever is used is a matter of preference and convenience.

Non-root methods to carry out the OpenStack client commands: So far in this section (6.5.1) the preparation to launch a COD has been carried out as a root user. However a non-root user can run these tasks too, with the right credentials.

If using the OpenStack client, then the appropriate credentials for a user are created when an OpenStack user with the same name as the Bright user is created. This is described in more detail in section 5.1.2 of the Bright 9.0 OpenStack Deployment manual. Thus, for example, if a non-root user who is the Bright user `fred` is created as an OpenStack user too, then `fred` becomes able to view the flavor list too, as follows:

Example

```
[fred@bright92 ~]$ source .openstackrc; source .openstackrc_password
[fred@bright92 ~]$ openstack flavor list
```

OpenStack flavors are a superset of COD flavors. To view only COD flavors—flavors that are used by COD instances only—the following command can be run, as root or as the regular user:

Example

```
cod flavor list
```


It should be noted that the `cmsh` or Bright View equivalents for commands in this section (6.5.1) can always be run by a non-root user. However, to be able to run them, the non-root user must have sufficient privileges. Such privileges can be set by the host cluster administrator modifying the profile settings (section 6.4 of the *Administrator Manual*) for the non-root user.

Generally, the preparation in this section (6.5.1) is done as a root user. In the following section (6.5.2), the non-root end user gets to launch and configure the cluster.

6.5.2 Launching And Configuring The Nested Cluster As A User

Typically, the administrator is expected to have configured a global default configuration file already (section 6.3).

If the user would like to generate and modify one for themselves, then the steps in this section can be followed. The steps here are also useful for an administrator who is setting up and trying out a global default configuration file for users.

Generating And Modifying A Configuration File For `cm-cod-os`

A `.ini` configuration file can be generated for the user with

```
[fred@bright92 ~]$ cm-cod-os config dump > ~/cm-cod-os.ini
```

To launch the nested cluster, the settings that must be modified within this file are the following:

- `license_product_key=<the product key>`
- `cluster_password=<a password>`
- `floating_ip_network_uuid=<network UUID>`

If the Bright flat external net is used for floating IP addresses, then the network UUID can be obtained from the OpenStack client:

Example

```
[fred@bright92 ~]$ openstack network show bright-external-flat-externalnet -f value -c id
9a41d19c-7d04-441e-85e8-ee4f15c3cb7f
```

The following settings in the `.ini` file are assumed to have been defined, but can be modified:

- `node_boot_image=<image name>`
By default, the boot image name is `iPXE-plain-eth0`.
- `head_node_type=<image name>`
By default, the head node image name is `cod.medium`.
- `default_node_type=<image name>`
By default, the regular node image name is `cod.xsmall`.
- `internal_mtu=<MTU size of the hosting internal network>`

By default, the hosted network MTU size is set to a standard size of 1500. This allows hosted nodes to PXE boot because PXE booting does not accept MTU options in the DHCP server. For VXLAN-based network isolation this means that the hosting internal network must have a larger MTU value than 1500 to accommodate the hosted network MTU size.

If the MTU value of the hosting internal network must remain at a value of 1500, then VLAN-based network isolation can be used instead.

The arguments to the preceding options take the form `--license-product-key`, `--cluster-password`, `--floating-ip-network-uuid`, and so on, as listed within the section on the `cm-cod-os cluster create` options help text (page 112).

Viewing And Picking Up An Image To Be Used For `cm-cod-os`

The image IDs that are available from the Bright Computing repositories, and their properties can be listed:

Example

```
[fred@bright92 ~]$ cm-cod-os image repo-list
```

ImageID:Revision	Head(GB)	Node(GB)	Distro	CMD Rev.	BCM Version
centos7u5-8.1:9	3.72	1.4	centos7u5	131439	8.1
centos7u2-8.0:7	3.65	1.25	centos7u2	127928	8.0
centos7u2-7.3:14	3.38	1.04	centos7u2	35931	7.3

A suitable image ID value can then be chosen. Each image ID has one head image and one regular node image associated with it. These images are then both installed:

Example

```
[fred@bright92 ~]$ cm-cod-os image install --is-public yes <ImageID:Revision>
```

The installation can take some time (minutes between each stage). A session run displays output similar to the following:

Example

```
[fred@bright92 ~]$ cm-cod-os image install centos7u5-8.1:9
```

ImageID:Revision	Head(GB)	Node(GB)	Distro	CMD Rev.	BCM Version
centos7u5-8.1:9	3.72	1.4	centos7u5	131439	8.1

```
About to install these images
Proceed? [yes/no] yes
INFO: Downloading bcmn-centos7u5-8.1-9 to /home/fred/bcmn-centos7u5-8.1-9.img.gz...
INFO: Creating manifest file /home/fred/bcmn-centos7u5-8.1-9.img.gz.manifest
INFO: Downloading https://s3-eu-west-1.amazonaws.com/cod-os-images.support.brightcomputing.com/
bcmn-centos7u5-8.1-9.img.gz
INFO: Checking MD5 sum of /home/fred/bcmn-centos7u5-8.1-9.img.gz
INFO: Uploading /home/fred/bcmn-centos7u5-8.1-9.img.gz to glance...
INFO: Upload operation finished successfully.
INFO: Downloading bcmh-centos7u5-8.1-9 to /home/fred/bcmh-centos7u5-8.1-9.img.gz...
INFO: Creating manifest file /home/fred/bcmh-centos7u5-8.1-9.img.gz.manifest
INFO: Downloading https://s3-eu-west-1.amazonaws.com/cod-os-images.support.brightcomputing.com/
bcmh-centos7u5-8.1-9.img.gz
INFO: Checking MD5 sum of /home/fred/bcmh-centos7u5-8.1-9.img.gz
INFO: Uploading /home/fred/bcmh-centos7u5-8.1-9.img.gz to glance...
INFO: Upload operation finished successfully.
[fred@bright92 ~]$
```

The image ID for the installed images installed by `cm-cod-os` locally can then be seen with:

Example

```
[fred@bright92 ~]$ cm-cod-os image list
+-----+-----+-----+-----+-----+-----+
| ImageID:Revision | Head(GB) | Node(GB) | Distro    | CMD Rev. | BCM Version |
+-----+-----+-----+-----+-----+-----+
| centos7u5-8.1:9  | 12.46    | 3.93     | centos7u5 | 131439    | 8.1         |
+-----+-----+-----+-----+-----+-----+
```

A more extensive images list can be seen with:

Example

```
[fred@bright92 ~]$ openstack image list
+-----+-----+-----+-----+-----+-----+
| ID                                     | Name                                     | Status |
+-----+-----+-----+-----+-----+-----+
| 43797ed5-0cdf-40f6-bbcd-1bdb11bfb7c74 | Bright-COD-headnode-bootloader        | active |
| 71568b33-1ef7-4099-aa10-f9690e52aaf1   | Bright-Managed-VM-iPXE-eth0          | active |
| 61856733-8f1f-4df7-a68b-d5ca27873f85   | Bright-Managed-VM-iPXE-eth1          | active |
| c34cbb10-3bfc-4d5f-b320-d446f7ded267   | bcmh-centos7u5-8.1-9                  | active |
| ca519e84-5fac-4c03-8050-299400e822d2   | bcmm-centos7u5-8.1-9                  | active |
| 953f9337-d5a1-4170-9edd-21d9149bbe4a   | iPXE-plain-eth0                       | active |
| 0d94b9a9-3d06-4a6a-b446-bc3cea7dfdd9   | iPXE-plain-eth1                       | active |
+-----+-----+-----+-----+-----+-----+
[fred@bright92 ~]$
```

Using cm-cod-os

The user can now start creating clusters. A basic command using the .ini configuration file would be:

```
[fred@bright92 ~]$ cm-cod-os -c cm-cod-os.ini cluster create
11:15:09: INFO: Please wait...
11:15:10: INFO: -----
11:15:10: INFO: Cluster: c-09-05-8.1-c7u5
11:15:10: INFO: -----
11:15:10: INFO: Image name: bcmh-centos7u5-8.1-9(centos7u5-8.1:9)
11:15:10: INFO: Node image: bcmm-centos7u5-8.1-9(centos7u5-8.1:9)
11:15:10: INFO: Image date: 2018-08-17 10:48 (19d 0h ago)
11:15:10: INFO: Package groups: none
11:15:10: INFO: CMD rev.: 131439
11:15:10: INFO: Version: 8.1
11:15:10: INFO: Distro: centos7u5
11:15:10: INFO: Head node: 1 cod.medium: 4096 RAM, 2 vCPUs
11:15:10: INFO: Nodes: 5 cod.xsmall: 1024 RAM, 1 vCPUs
11:15:10: INFO: Disk: 10 GiB (type: default)
11:15:10: INFO: -----
Press ENTER to continue and create the cluster.
Press ctrl+c (or type 'a') to abort. Type 'i' for more info.
```

Ideally, if the administrator of the host cluster has set things up conveniently for the end user, the command needs no configuration file, and is run simply as `cm-cod-os cluster create`.

After a cluster has been created, it can be listed with:

```
[fred@bright92 ~]$ cm-cod-os cluster list
+-----+-----+-----+-----+-----+-----+
| Cluster (stack) name | IP           | Head Status | Head Image           | CMD rev. |
+-----+-----+-----+-----+-----+-----+
| c-09-05-b8.1-c7u5   | 192.168.200.8 | ACTIVE      | bcmh-centos7u5-8.1-9 | 131439    |
+-----+-----+-----+-----+-----+-----+
```

Inactive clusters can additionally be listed by appending the `-a` | `--all` option to the list subcontext, as: `cm-cod-os cluster list -a`

Cluster removal is possible by specifying the cluster name to be deleted with the `delete` | `d` | `remove` option:

Example

```
[fred@bright92 ~]$ cm-cod-os cluster delete c-09-05-b8.1-c7u5
a list of resources that are to be removed is shown
You are about to delete all of the above resources.
Proceed? [yes/no] yes
...
14:18:25:      INFO: Done. Stack 'c-09-05-b81-c7u5' deleted.
```

A less drastic way to conserve resources than the `delete` option, can be to use the `shelve` option. Shelving a cluster means that it is made inactive and stored. It can then be resumed with the `start` option.

The help options for the COD contexts can be seen by appending `--help` to them

Example

```
[fred@bright92 ~]$ cm-cod-os cluster --help
```

Example

```
cm-cod-os cluster create --help
```

7

Cloud Considerations And Choices With NVIDIA Bright Cluster Manager

7.1 Differences Between Cluster On Demand And Cluster Extension

Some explicit differences between Cluster On Demand and Cluster Extension clusters are:

Cluster On Demand	Cluster Extension
cloud nodes only in 1 region	cloud nodes can use many regions
no cloud director	uses one or more cloud directors per region
no failover head node	failover head node possible
no VPN or NetMap	VPN and NetMap
no externalnet interface on head	can have an external interface
cluster has publicly accessible IP address	cloud directors have publicly accessible IP addresses

A note about the last entry: The access to the cloud director addresses can be restricted to an administrator-defined set of IP addresses, using the “Externally visible IP” entry in figure 3.1 of the *Administrator Manual*, after scrolling down in the screen to reach that entry.

7.2 Hardware And Software Availability

Bright Computing head node AMIs are available for the following distributions: RHEL7 and CentOS7.

AMIs with GPU computing instances are available with Amazon cloud computing services, and can be used with Bright Computing AMIs with `hvm` in the name (not `xen` in the name).

To power the system off, a `shutdown -h now` can be used, or the power commands for Bright View or `cmsh` can be executed. These commands stop the instance, without terminating it. Any associated extra drives that were created need to be removed manually, via the Volumes screen in the Elastic Block Store resource item in the navigation menu of the AWS Management Console.

7.3 Reducing Running Costs

7.3.1 Spot Pricing

Spot prices are volatile prices that apply to the nodes within an AWS cluster extension. Tracking their values helps the user to take advantage of cheaper pricing made available at irregular¹ times. The user can decide a threshold spot price (a price quote) in US dollars per hour for instances. Instances that run while under the threshold are called *Spot Instances*. Spot Instances are described further at <http://aws.amazon.com/ec2/spot-instances/>.

With the pricing threshold set:

- If the set spot price threshold is above the instantaneous spot price, then the Spot Instances run.
- If the set spot price threshold is below the instantaneous spot price, then the Spot Instances are killed.
- If the set spot price threshold is N/A, then no conditions apply, and the instances will run On-Demand regardless of the instantaneous spot price.

An *On-Demand Instance* is one that runs regardless of the price, according to the pricing at <http://aws.amazon.com/ec2/pricing/on-demand/>.

A *persistent request* is one that will retry running a Spot Instance if the conditions allow it.

Getting An On-Demand Price

The prices command is used to query AWS for On-Demand Prices.

One, or both, of the following items must be specified

- A region, with the `-r|--region` option.
- A type of cloud node instance, with the `-t|--type` option.

For example, if the cloud provider instance for AWS is `myaws`, then a prices query can be run as follows, from within `cloud` mode (some output elided):

Example

```
[bright92->cloud]% prices myaws -t m5.large
Region          Instance Type Price          Currency
-----
AWS GovCloud (US-East)    m5.large      0.1210000000    USD
AWS GovCloud (US-West)    m5.large      0.1210000000    USD
Africa (Cape Town)        m5.large      0.1270000000    USD
...
US West (Los Angeles)     m5.large      0.1150000000    USD
US West (N. California)   m5.large      0.1120000000    USD
US West (Oregon)          m5.large      0.0960000000    USD
```

The preceding query is for all regions, and asks for a price for all cloud node instances of type `m5.large`. Filtering further for a particular region can be done with the `-r` option:

```
[bright92->cloud]% prices myaws -r eu-west-1 -t m5.large
Region          Instance Type Price          Currency
-----
EU (Ireland)     m5.large      0.1070000000    USD
```

Checking the price for a particular region for all types of cloud node instances can be carried out as follows (hundreds of lines of output omitted):

¹irregular turns out to be random within a tight range, bound to a reserve price. Or rather, that was the case during the period 20th January–13th July, 2010 that was analyzed by Ben-Yehuda et al, <http://www.cs.technion.ac.il/users/wwwb/cgi-bin/tr-info.cgi/2011/CS/CS-2011-09>

```
[bright92->cloud]% prices myaws -r eu-west-1
```

Region	Instance Type	Price	Currency
EU (Ireland)	a1.2xlarge	0.2304000000	USD
EU (Ireland)	a1.4xlarge	0.4608000000	USD
EU (Ireland)	a1.large	0.0576000000	USD
...			

Getting A Spot Price

The `spotprices` command is used to query AWS for Spot Prices.

A region or availability zone must be specified with the `-r|--region` or the `-z|--az` options. Additionally, an extra filter can be used to specify the cloud node instance type with the `-t|--type` option.

For example, if the cloud provider instance for AWS is `myaws`, then a `spotprices` query can be run as follows, from within `cloud` mode (some hundreds of lines of output elided):

Example

```
[bright92->cloud]% spotprices myaws -z eu-west-1a
```

Availability Zone	Instance Type	Price per Hour	Timestamp
eu-west-1a	c1.medium	0.014800	2022-02-16 18:02:30
eu-west-1a	c1.xlarge	0.070300	2022-02-17 17:44:25
eu-west-1a	c3.2xlarge	0.256700	2022-02-17 10:46:21
...			

An example of additionally filtering for the `m5.large` node instance type is:

Example

```
[bright92->cloud[myaws]]% spotprices myaws -r eu-west-1 -t m5.large
```

Availability Zone	Instance Type	Price per Hour	Timestamp
eu-west-1a	m5.large	0.036800	2022-02-17 18:17:06
eu-west-1b	m5.large	0.036200	2022-02-17 09:55:08
eu-west-1c	m5.large	0.036100	2022-02-17 18:38:26

7.3.2 Storage Space Reduction

Reducing the amount of EBS disk storage used per cloud node or per cloud director is often feasible. 15 GB is usually enough for a cloud director, and 5 GB is usually enough for a cloud node with common requirements. In `cmsh` these values can be set with:

Example

```
[bright92]% device cloudsettings eu-west-1-director
[bright92->device[eu-west-1-director]->cloudsettings]% storage
[bright92->...->cloudsettings->storage]% set ebs size 15GB; commit
[bright92->...->cloudsettings->storage]% device cloudsettings cnode001
[bright92->device[cnode001]->cloudsettings]% storage
[bright92->...->cloudsettings->storage]% set ebs size 5GB; commit
```

The value for the cloud node EBS storage can also be set via Bright View, using the clickpath:

Devices→Cloud Nodes→Edit→Settings→Cloud settings→STORAGE→Storage→ebs→Edit→size

7.4 Setting The Cloud Node Images

The default cloud node image can be set within the VPC instance of cmsh:

Example

```
[bright92->device[eu-west-1-cnode001]->cloudsettings]% cloud use myaws
[bright92->cloud[myaws]]% vpcs
[bright92->cloud[myaws]->vpcs]% use vpc-eu-west-1
[bright92->cloud[myaws]->vpcs[vpc-eu-west-1]]% show
```

Parameter	Value

Name	vpc-eu-west-1
Revision	
Default AMI	latest
VPC ID	vpc-0e4565afe04528047
...	
region	eu-west-1
...	

The value of defaultami is set by specifying the AMI ID.

Example

```
[bright92->cloud[myaws]->vpcs[vpc-eu-west-1]]% set defaultami ami-0ce80021a5acafcd0; commit
```

A list of possible images is queried with the images command:

Example

```
[bright92->cloud[myaws]->vpcs[vpc-eu-west-1]]% images
```

Name	Id	API Hash	Region

brightinstaller-002	ami-0defc32f9b2756e40		eu-west-1
brightinstaller-100	ami-0ce80021a5acafcd0	5cd0910d8814d98fc331f7af72975c8a	eu-west-1
...			

Setting the default AMI to the special value latest means that the latest AMI is used.

Setting a default AMI means that cluster extension cloud nodes by default take that default AMI as their image:

Example

```
[bright92->device[eu-west-1-cnode001]->cloudsettings]% show
```

Parameter	Value

Availability zone	eu-west-1a
Provider	myaws
...	
Use kernel and initrd from the software image	yes
Region	eu-west-1
AMI	latest (vpc-eu-west-1)
...	

The inherited default value can be overridden within the device modei, within the cloudsettings submode:

Example

```
[bright92->device[eu-west-1-cnode001]->cloudsettings]% set ami ami-0defc32f9b2756e40; commit
```


7.5 Ignoring Prepaid Node Limits With Pay-Per-Use Images

By default a user is restricted by the cloud licence from running more VMs in the cloud than a limit set within the license. This is a wise default, because as a general principle cluster administrators wish to keep costs within a planned budget.

However, there are times when a cluster administrator may wish to ignore this restriction. Ignoring the restriction is possible—at a price.

A use case for this might be a cluster that uses only a regular amount of cloudbursting most of the time, but on certain rare days it may need to burst beyond this regular amount.

Another use case might be an IT department that runs a cluster, suddenly finds itself with a large amount of unused budget, and it turns out that it is sensible to use the budget up on bursting runs.

How to allow bursting past the prepaid limit is described in the following sections for AWS (section 7.5.1) and for Azure (section 7.5.2).

7.5.1 Bursting Past The Prepaid Limit In AWS

Node-installer Image Types For AWS Cloud Nodes

NVIDIA Bright Cluster Manager version 9.0 introduced a way to set the node-installer image type for AWS cloud nodes. The possible cloud node node-installer image types provided by the cluster manager are:

- prepaid image type: a free node-installer image type, used to power on all nodes within the license limit. The license limit is maximum number of images that can be run, is the value of `Licensed nodes` in the output of the `licenseinfo` command (section 4.1.2 of the *Installation Manual*).
- pay-per-use image type: a paid node-installer image type, used to power on all nodes beyond the license limit. Using this as the node-installer image incurs additional hourly costs for the licensing part as well as for the AWS infrastructure.

Default Policy For Node-installer Image Type For AWS Cloud Nodes

A default policy to set the cloud node node-installer image type can be defined at cloud provider level using `usepaidmarketplaceamis`.

Example

```
[root@bright92 ~]# cmsn
[bright92]# cloud
[bright92->cloud[amazon]]# show
Parameter                               Value
-----
Access key ID                           *****
Account ID                             197943594779
Billing access key ID                   < not set >
Cloud job tagging                       no
Default AMI                             latest:brightinstaller-42
Default director type                   m3.medium
Default region                          eu-west-1
Default type                             m3.medium
Name                                    amazon
Revision
Secret access key                       *****
Secret billing access key               < not set >
Tags                                    COD_PREFIX=PJ,BCM Bursting=extension,Name=bright92
Type                                    ec2
Use paid Market place AMIs             NEVER
Username                               krusty-clusters
```

```

VPCs                                <1 in submode>
[bright92->cloud[amazon]]% set usepaidmarketplaceamis <TAB><TAB>
always      as_needed  never
[bright92->cloud[amazon]]% set usepaidmarketplaceamis as_needed
[bright92->cloud*[amazon*]]% commit

```

There are 3 possible values for usepaidmarketplaceamis:

1. never: paid marketplace images are never used. Any attempt to power on any extra cloud nodes beyond the license limit fails.
2. always: The paid marketplace image is always used when powering on cloud nodes.
3. as_needed: The free image is used as a default so long as the prepaid node count limit has not been exceeded. Beyond the prepaid node count limit, all additional cloud nodes use the paid marketplace image.

It should be noted that once a cloud node is up, and using a paid marketplace image, then it continues to run as a paid node, even if the node count goes under the prepaid node count limit after some time. The node running a paid marketplace image only stops running as a paid node when it is terminated.

Indication that the node is a paid marketplace image: In cmsh, if one of the cloud nodes is using a paid marketplace image, then it is displayed tagged with the text `additional cost`, as seen in the following for eu-west-1-cnnode002:

Example

```

[bright92->device[eu-west-1-cnnode002]->cloudsettings]% ds
eu-west-1-cnnode001 ..... [ UP ]
eu-west-1-cnnode002 ..... [ PENDING ] (Instance has started), additional cost
eu-west-1-cnnode003 ..... [ DOWN ]
eu-west-1-director ..... [ UP ]
node001 ..... [ UP ]
node002 ..... [ UP ]
bright92 ..... [ UP ]

```

In Bright View, following the clickpath `Devices`, a cloud node running a paid marketplace image is tagged with a \$ sign (figure 7.1):

<input type="checkbox"/> ab-c-10-07-t-c7u5	↑	Head node	FA:16:3E:3E:D4:1B	Edit ▾
<input type="checkbox"/> eu-west-1-cnnode001	↓	Cloud node	00:00:00:00:00:00	Edit ▾
<input type="checkbox"/> eu-west-1-cnnode002 \$	⏸	Cloud node	00:00:00:00:00:00	Edit ▾
<input type="checkbox"/> eu-west-1-cnnode003	↓	Cloud node	00:00:00:00:00:00	Edit ▾
<input type="checkbox"/> eu-west-1-cstorage001	↓	Cloud node	00:00:00:00:00:00	Edit ▾
<input type="checkbox"/> eu-west-1-cstorage002	↓	Cloud node	00:00:00:00:00:00	Edit ▾
<input type="checkbox"/> eu-west-1-director	↑	Cloud node	00:00:00:00:00:00	Edit ▾

Figure 7.1: A cloud node, eu-west-1-cnnode002, seen running a marketplace image

First-time Use Of A Marketplace Node-installer Image For AWS Cloud Nodes

Before a marketplace image can be used for the first time, the terms of the offer must be accepted, and subscribed to.

If this is not done, then, if the administrator tries to power on a cloud node using a marketplace image via `cmsh`, an error message similar to the following appears:

Example

```
[device[eu-west-1-director]]% power on

cloud ..... [ FAILED ] eu-west-1-director
                (An error occurred (OptInRequired) when calling the RunInstances
                operation: In order to use this AWS Marketplace product you need to
                accept terms and subscribe. To do so please visit
                https://aws.amazon.com/marketplace/pp?sku=<some string>)
```

The URL that appears in the error message can be visited. At that URL the terms can be accepted and a subscription started. Then the attempt to power on a cloud node can be made once more.

7.5.2 Bursting Past The Prepaid Limit In Azure**Node-installer Image Types For Azure Cloud Nodes**

In Azure, as for AWS, the possible cloud node node-installer image types provided by the cluster manager are:

- prepaid image type: a free node-installer image type, used to power on all nodes within the license limit. The license limit is maximum number of images that can be run, and is the value of `Licensed nodes` in the output of the `licenseinfo` command (section 4.1.2 of the *Installation Manual*).
- pay-per-use image type: a paid node-installer image type, used to power on all nodes beyond the license limit. Using this as the node-installer image incurs additional hourly costs for the licensing part as well as for the Azure infrastructure.

Default Policy For Node-installer Image Type For Azure Cloud Nodes

In Azure a default policy to set the cloud node node-installer image type can be defined at cloud provider level using `usepaidmarketplaceimages`.

Example

```
[root@bright92 ~]# cmsh
[bright92]% cloud
[bright92->cloud[azure]]% show
```

Parameter	Value
Client ID	afe23456-06b9-4241-80a9-17ba71ccb911
Client secret	*****
Default Cloud Director VM Size	Standard_D2_v3
Default Location	germanywestcentral
Default VM Size	Standard_D2_v3
Default node-installer image	https://brightimages.blob.core.windows.net/images/
Extensions	<1 in submode>
Name	azure
Revision	
Subscription ID	2b8fad2b-aaf1-425a-bf45-36cfd495107e
Tags	COD_PREFIX=PJ,BCM Bursting=extension
Tenant ID	8cb88849-6e18-46d6-b0fa-551a47a31681
Type	azure

Use paid Marketplace images NEVER

```
[bright92->cloud[azure]]% set usepaidmarketplaceimages <TAB><TAB>
always      as_needed  never
[bright92->cloud[azure]]% set usepaidmarketplaceimages as_needed
[bright92->cloud*[azure*]]% commit
```

In an Azure cloud, just as for the AWS case for `usepaidmarketplaceamis`, there are 3 possible values for `usepaidmarketplaceimages` at the cloud provider level:

1. `never`: paid marketplace images are never used. Any attempt to power on any extra cloud nodes beyond the license limit fails.
2. `always`: The paid marketplace image is always used when powering on cloud nodes.
3. `as_needed`: The free image is used as a default so long as the prepaid node count limit has not been exceeded. Beyond the prepaid node count limit, all additional cloud nodes use the paid marketplace image.

Setting A Node-installer Image For Azure Cloud Nodes

It is possible to set an Azure cloud node, for example `germanywestcentral-cnode001`, to follow a different policy by specifying it in the `cloudsettings` submenu within the device mode:

Example

```
[root@bright92 ~]# cmsh
[bright92]% device
[bright92->device]% use <TAB><TAB>
germanywestcentral-cnode001  germanywestcentral-cnode003  master      node002
germanywestcentral-cnode002  germanywestcentral-director  node001     bright92
[bright92->device]% use germanywestcentral-cnode001
[bright92->device[germanywestcentral-cnode001]]% cloudsettings
[bright92->device[germanywestcentral-cnode001]->cloudsettings]% get usepaidmarketplaceimages
Never (azure)
[bright92->device[germanywestcentral-cnode001]->cloudsettings]% set usepaidmarketplaceimages <TAB><TAB>
always      as needed      follow provider  never
[bright92->device[germanywestcentral-cnode001]->cloudsettings]% set usepaidmarketplaceimages always
[bright92->device*[germanywestcentral-cnode001*]->cloudsettings*]% commit
```

This overrides the policy set at the cloud provider level, until the instance is terminated.

7.6 Address Resolution In Cluster Extension Networks

7.6.1 Resolution And `globalnet`

The `globalnet` network is introduced in section 3.2.3 of the *Administrator Manual*. It allows an extra level of redirection during node resolution. The reason for the redirection is that it allows the resolution of node names across the entire cluster in a hybrid cluster, regardless of whether the node is a cloud node (cloud director node or regular cloud node) or a non-cloud node (head node, regular node or networked device). A special way of resolving nodes is needed because the Amazon IP addresses are in the 10.0.0.0/8 network space, which conflicts with some of the address spaces used by the cluster manager.

There are no IP addresses defined by `globalnet` itself. Instead, a node, with its domain defined by the `globalnet` network parameters, has its name resolved by another network to an IP address. The resolution is done by the nameserver on the head node for all nodes.

7.6.2 Resolution In And Out Of The Cloud

The networks, their addresses, their types, and their domains can be listed from the network mode in `cmsh`:

```
[bright73->network]% list -f name:26,type:12,netmaskbits:8,baseaddress:13,domainname:24
name (key)          type          netmaskb baseaddress  domainname
-----
us-east-1           Tunnel        16        172.21.0.0
externalnet         External      24        192.168.100.0 brightcomputing.com
globalnet           Global        0         0.0.0.0      cm.cluster
internalnet         Internal      16        10.141.0.0   eth.cluster
netmap              NetMap        16        172.30.0.0
vpc-eu-central-1-private Cloud (VPC)    17        10.42.128.0  vpc-eu-central-1.cluster
vpc-eu-central-1-public Cloud (VPC)    24        10.42.0.0    vpc-eu-central-1.cluster
```

In a Type 1 network (section 3.3.9 of the *Installation Manual*), the head node is connected to `internalnet`. When a cloud service is configured, the head node is also “connected” to the CMDaemon-managed NetMap “network”. It is useful to think of NetMap as a special network, although it is actually a network mapping from the cloud to `internalnet`. That is, it connects (maps) from the nodes in one or more cloud networks such as the `us-east-1` network provided by Amazon, to IP addresses provided by `netmap`. The mapping is set up when a cloud extension is set up. With this mapping, packets using NetMap go from the cloud, via an OpenVPN connection to the NetMap IP address. Once the packets reach the OpenVPN interface for that address, which is actually on the head node, they are forwarded via Shorewall’s IPtables rules to their destination nodes on `internalnet`.

With default settings, nodes on the network `internalnet` and nodes in a cloud network such as `us-east-1` are both resolved with the help of the `cm.cluster` domain defined in `globalnet`. For a cluster with default settings and using the cloud network `us-east-1`, the resolution of the IP address of 1. a regular node and 2. a regular cloud node, takes place as follows:

1. `node001`, a regular node in the `internalnet` network, is resolved for `node001.cm.cluster` to
 - (a) `10.141.0.1`, when at the head node. The cluster manager assigns this address, which is on `internalnet`. It could also be an `ibnet` address instead, such as `10.149.0.1`, if InfiniBand has been configured for the nodes instead of Ethernet.
 - (b) `172.30.0.1` when at the cloud director or regular cloud node. The cluster manager assigns this address, which is a NetMap address. It helps route from the cloud to a regular node. It is not actually an IP address on the interface of the regular node, but it is convenient to think of it as being the IP address of the regular node.
2. `cnode001`, a regular cloud node in the `us-east-1` network, is resolved for `cnode001.cm.cluster` to:
 - (a) `172.21.0.1` when at the head node. The cluster manager assigns this address, which is an OpenVPN tunnel address on `us-east-1`.
 - (b) an IP address within `10.0.0.0/8` (`10.0.0.1–10.255.255.254`) when at a regular cloud node or at a cloud director. The Amazon cloud network service assigns the addresses in this network to the cloud director and regular cloud nodes after it notices the regular cloud node interface is up.

An explanation of the networks mentioned in the preceding list follows:

- The nodes within all available cloud networks (all networks such as for example, `us-east-1`, `us-west-1`, and so on) are given CMDaemon-assigned addresses in the cloud node space range `172.16.0.0–172.29.255.255`. In CIDR notation that is: `172.16.0.0/12` (`172.16.0.0–172.31.255.255`), except for `172.31.0.0/15` (`172.30.0.0–172.31.255.255`).

- The network address space 172.30.0.0/16 (172.30.0.0–172.30.255.255) is taken by the CMDaemon-assigned NetMap network, explained shortly.
- Each node in a cloud network is also assigned an address in the network addressing space provided by Amazon VPC networking. The assignment of IP addresses to nodes within the 10.0.0.0/8 range is decided by Amazon via DHCP.

The VPC networks for regular cloud nodes and cloud director nodes are subnets in this range.

- The netmap “network” (figure 7.2) is a helper mapping reserved for use in routing from the cloud (that is, from a cloud director or a cloud node) to a regular node. The mapping uses the 172.30.0.0/16 addressing scheme. Its routing is asymmetrical, that is, a NetMap mapping from a regular node to the cloud does not exist. Packets from a regular node to the cloud do however resolve to the cloud network as indicated by 2(a) in the preceding.

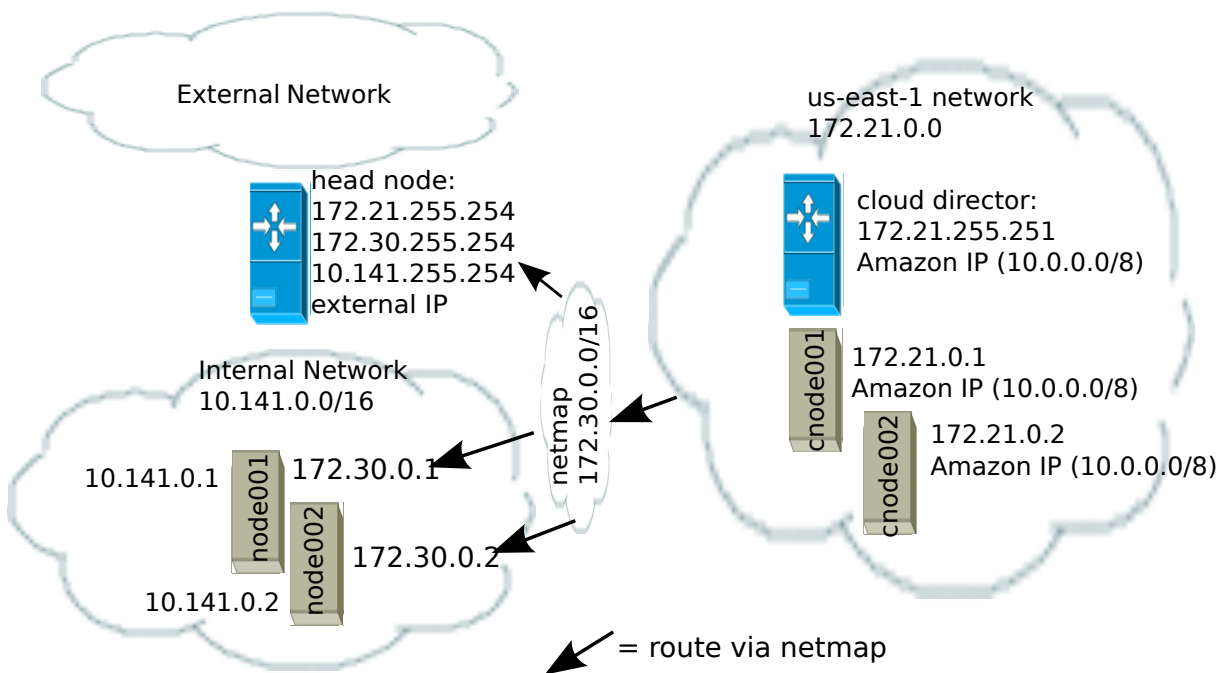


Figure 7.2: NetMap In Relation To The General Network Scheme

As pointed out in the introduction to this section (7.6), the main reason for the IP addressing network scheme used is to avoid IP address conflicts between nodes within the cloud and nodes outside the cloud.

The *difference* in resolution of the IP address for the nodes as listed in points 1 and 2 in the preceding text is primarily to get the lowest overhead route between the source and destination of the packet being routed. Thus, for example, a packet gets from the regular cloud node to the cloud director with less overhead if using the Amazon cloud IP addressing scheme (10.0.0.0/8) than if using the Bright OpenVPN addressing scheme (172.21.0.0/16). A secondary reason is convenience and reduction of networking complexity. For example, a node in the cloud may shut down and start up, and get an arbitrary Amazon IP address, but using an OpenVPN network such as us-east-1 allows it to retain its OpenVPN address and thus stay identified instead of having the properties that have been assigned to it under the cluster manager become useless.

7.7 Internet Connectivity For Cloud Nodes

Cloud compute node types in cloudbursting setups—CX-AWS, CX-Azure, COD-AWS, and COD-Azure—can all access the internet by default.

This is elaborated upon in table 7.7:

Table 7.7: Cloud compute node access to internet

Cloud node type	Internet access by default?	Details
CX-AWS	Yes	<p>Cloud compute nodes are routed via an sNAT gateway cloud director node. They therefore do not normally require assignment of Elastic IPs (section 7.9.1). If assigning an Elastic IP to a node is required, then such a cloud node should be created on the 'public' VPC subnet (by default cloud compute nodes are created on the 'private' VPC subnet). To allocate a public IP to a node, the cloud setting <code>allocatepublicip</code> is set to <code>yes</code> before creating the node. By default, cloud directors are configured to be allocated public IP addresses:</p> <p>Example</p> <pre>[bright92->device [us-east-1-director]->cloudsettings]% get allocatepublicip yes</pre>
CX-Azure	Yes	<p>Cloud compute nodes use the built-in NAT capabilities of Azure's gateway when accessing the internet.</p> <p>Disabling the security setting causes the security groups to be no longer applied in the cloud director. This means anyone with Layer-3 (IP) access to the cloud director could try to establish a connection to any of the cloud director's ports. Therefore, by default for CX-OS, the port security plugin is left disabled, and the port security setting left enabled.</p>
COD-AWS	Yes	<p>Cloud compute nodes use the head node as an sNAT gateway. If the head node is overloaded with network traffic, then an AWS NAT gateway can be added to the VPC, and configure that device to be the default gateway for a private subnet by modifying the routing table of that subnet.</p>
COD-Azure	Yes	<p>Cloud compute nodes can access the internet via TCP/UDP using the Azure Load Balancer. ICMP packets are silently discarded. ICMP traffic can only be allowed by associating a public IP address to the compute node. Microsoft advises its users to use an alternative to ping for connectivity testing that works using TCP packets, and tries to connect to a specific port.</p>
COD-OS	Yes	<p>Cloud compute nodes are routed via an sNAT gateway head node.</p>

7.8 Passing Kernel Parameters To Cloud Nodes

If a cluster administrator configures a non-cloud cluster, then kernel parameters can be set for a particular software image used by the regular nodes. For example, in `cmsh`, if a software image `<image name>` is used, then kernel parameters such as `root=/dev/sda2 rootdelay=10 pti=auto` can be set via the navigation path:

```
cmsh→softwareimage→use <image name>→set kernelparams "root=/dev/sda2 rootdelay=10 pti=auto"
```

However, kernel parameters are not passed to cloud nodes via this mechanism at the time of writing (November 2019). If there is a need to pass kernel parameters to cloud nodes, then Bright Computing support should be contacted.

7.9 Setting Up And Creating A Custom VPC

From NVIDIA Bright Cluster Manager version 7.3 onward, the Amazon EC2-classic platform is no longer available, and all nodes run via the cluster manager within Amazon always run within an EC2-VPC platform.

Custom VPC for NVIDIA Bright Cluster Manager 9.2 subnet allocation, and allocation of EIPs (External IPs, public IP addresses) is described in sections 7.9.1–7.9.3.

7.9.1 Elastic IP Addresses And Their Use In Configuring Static IP Addresses

Amazon *elastic IP addresses* (EIPs) can be used to assign a public IP address to a custom VPC.

EIP addresses are the public IP addresses that Amazon provides for the AWS account. These addresses can be associated with custom VPC instances. The public addresses in the set of addresses can then be used to expose the custom VPC instance. In this manual and in the cluster manager, EIPs are referred to as “public IPs” in the cloud context. When allocating a public IP address, the exact IP address that is allocated is a random IP address from the pool of all public IP addresses made available in the specified region by the configured cloud provider.

7.9.2 Subnets In A Custom VPC

The components of a custom VPC include subnets, the nodes that run in them, and static IP addresses. The subnets are logical network segments within the network range of that custom VPC. Subnets can be thought of as interconnected with a central “magic” router, with the cluster manager managing the routing tables on that router. The routing ensures correct subnet communication. Inside the cluster manager, subnets are represented as a type of network (section 3.2 of the *Administrator Manual*), with a value for type set in `cmsh` to `Cloud (VPC)`, or in Bright View set to `CLOUD`.

Subnets for a custom VPC must have non-overlapping ranges. If there are multiple custom VPCs being managed by the cluster manager, then a particular subnet may be assigned to one custom VPC at the most.

Two series of valid network ranges could be:

Example

1. 10.0.0.0-10.0.31.255 (10.0.0.0/19),
10.0.32.0-10.0.63.255 (10.0.32.0/19),
10.0.64.0-10.0.95.255 (10.0.64.0/19).
2. 192.168.0.0-192.168.0.255 (192.168.0.0/24),
192.168.1.0-192.168.1.255 (192.168.1.0/24).

The `sipcalc` command (page 73 of the *Administrator Manual*) is a useful tool for calculating appropriate subnet ranges. At least one subnet must be assigned to a custom VPC before an instance can be created in that cloud. Typically two or more subnets are assigned, as shown in the custom VPC creation example in the following section.

7.9.3 Creating The Custom VPC

After subnets have been configured, a custom VPC can be created by specifying:

- the name

- the default region
- base address
- number of netmask bits

The network of the custom VPC must obviously be a superset of its subnets. Any subnets of the custom VPC must also be specified. Subnets can be added to or removed from an already-created custom VPC, but only if any cloud node instances within them are terminated first.

There are several ways to set up and create the subnets and custom VPC instance in the cluster manager:

1. by using Advanced settings options in the clusterextension plugin options, in the command line `cm-cluster-extension` utility (section 4.1),
2. by using the Bright View private cloud creation wizard (section 3.1),
3. by manually creating and configuring the private cloud object using `cmsh`.

Option 3 is tedious, but does show to the reader some of what the `cm-cluster-extension` utility and cloud creation wizard do. To create and configure a private cloud as in option 3, the following example sessions show how a private cloud can be built with `cmsh`. In the sessions, the subnets to be used for the custom VPC are created first, before creating the private cloud:

- **Subnet creation and cloning:** In the following example session, an arbitrary naming scheme is used for subnets, with a pattern of: `<name of custom VPC>-sn-<number>`. Here, `sn` is an arbitrary abbreviation for “subnet”:

Example

```
[bright92->network]% add vpc-0-sn-0
[bright92->network*[vpc-0-sn-0*]]% set type cloud
[bright92->network*[vpc-0-sn-0*]]% set baseaddress 10.0.0.0
[bright92->network*[vpc-0-sn-0*]]% set netmaskbits 24
[bright92->network*[vpc-0-sn-0*]]% commit
```

Once the first subnet has been created, it can be cloned:

Example

```
[bright92->network]% clone vpc-0-sn-0 vpc-0-sn-1
[bright92->network*[vpc-0-sn-1*]]% set baseaddress 10.0.1.0
[bright92->network*[vpc-0-sn-1*]]% commit
```

- **Custom VPC creation:** The following example session in the `vpc` submode of the `cloud` mode, creates a private cloud called `vpc-0`. The private cloud is actually a custom VPC, and belongs to a network that contains the two subnets specified earlier.

Example

```
[bright92->cloud[Amazon EC2]->vpcs]%
[bright92->...->vpcs]% add vpc-0
[bright92->...->vpcs*[vpc-0*]]% set region eu-west-1
[bright92->...*[vpc-0*]]% set baseaddress 10.10.0.0
[bright92->...*[vpc-0*]]% set netmaskbits 16
[bright92->...*[vpc-0*]]% set subnets vpc-0-sn-0 vpc-0-sn-1
[bright92->...*[vpc-0*]]% commit
```